


TOSHIBA

FILE NO. A05-007

SERVICE MANUAL

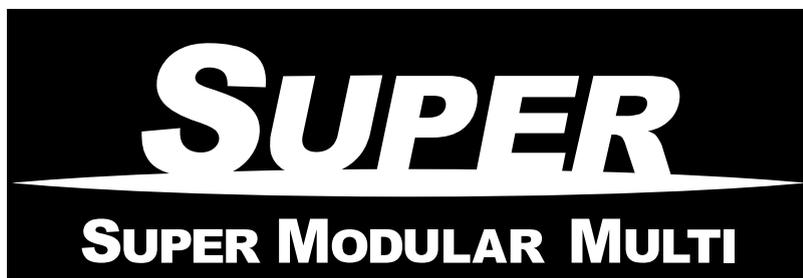

<1-Way Discharge Cassette Type>

MMU-AP0152SH, AP0152SH-K
MMU-AP0182SH, AP0182SH-K
MMU-AP0242SH, AP0242SH-K

- This Service Manual describes contents of the new 1-Way Discharge Cassette indoor unit. For the outdoor unit, refer to the Manual with **FILE NO. A03-009**.

CONTENTS

SAFETY CAUTION	3
1. CONSTRUCTION VIEWS (EXTERNAL VIEWS)	8
2. WIRING DIAGRAM	9
3. PARTS RATING	10
4. REFRIGERATING CYCLE DIAGRAM	35
5. CONTROL OUTLINE	36
6. APPLIED CONTROL	40
7. TROUBLESHOOTING	45
8. CONFIGURATION OF CONTROL CIRCUIT	97
9. DETACHMENTS	102
10. P.C. BOARD EXCHANGE PROCEDURES	110
11. EXPLODED VIEWS AND PARTS LIST	115

SAFETY CAUTION

The important contents concerned to the safety are described on the product itself and on this Service Manual. Please read this Service Manual after understanding the described items thoroughly in the following contents, and keep them.

 WARNING	
 Check earth wires.	Before troubleshooting or repair work, check the earth wire is connected to the earth terminals of the main unit, otherwise an electric shock is caused when a leak occurs. If the earth wire is not correctly connected, contact an electric engineer for rework.
 Prohibition of modification.	Do not modify the products. Do not also disassemble or modify the parts. It may cause a fire, electric shock or injury.
 Use specified parts.	For spare parts, use those specified (*). If unspecified parts are used, a fire or electric shock may be caused. *: For details, refer to the parts list.
 Do not bring a child close to the equipment.	Before troubleshooting or repair work, do not bring a third party (a child, etc.) except the repair engineers close to the equipment. It causes an injury with tools or disassembled parts. Please inform the users so that the third party (a child, etc.) does not approach the equipment.
 Insulating measures	Connect the cut-off lead cables with crimp contact, etc, put the closed end side upward and then apply a water-cut method, otherwise a leak or production of fire is caused at the users' side.
 No fire	When repairing the refrigerating cycle, take the following measures. 1) Be attentive to fire around the cycle. When using a gas stove, etc, be sure to put out fire before work; otherwise the oil mixed with refrigerant gas may catch fire. 2) Do not use a welder in the closed room. When using it without ventilation, carbon monoxide poisoning may be caused. 3) Do not bring inflammables close to the refrigerant cycle, otherwise fire of the welder may catch the inflammables.
 Refrigerant	Check the used refrigerant name and use tools and materials of the parts which match with it. For the products which use R410A refrigerant, the refrigerant name is indicated at a position on the outdoor unit where is easy to see. To prevent miss-charging, the route of the service port is changed from one of the former R22. For an air conditioner which uses R410A, never use other refrigerant than R410A. For an air conditioner which uses other refrigerant (R22, etc.), never use R410A. If different types of refrigerant are mixed, abnormal high pressure generates in the refrigerating cycle and an injury due to breakage may be caused. Do not charge refrigerant additionally. If charging refrigerant additionally when refrigerant gas leaks, the refrigerant composition in the refrigerating cycle changes resulted in change of air conditioner characteristics or refrigerant over the specified standard amount is charged and an abnormal high pressure is applied to the inside of the refrigerating cycle resulted in cause of breakage or injury. Therefore if the refrigerant gas leaks, recover the refrigerant in the air conditioner, execute vacuuming, and then newly recharge the specified amount of liquid refrigerant. In this time, never charge the refrigerant over the specified amount. When recharging the refrigerant in the refrigerating cycle, do not mix the refrigerant or air other than R410A into the specified refrigerant. If air or others is mixed with the refrigerant, abnormal high pressure generates in the refrigerating cycle resulted in cause of injury due to breakage. After installation work, check the refrigerant gas does not leak. If the refrigerant gas leaks in the room, poisonous gas generates when gas touches to fire such as fan heater, stove or cooking stove though the refrigerant gas itself is innocuous. Never recover the refrigerant into the outdoor unit. When the equipment is moved or repaired, be sure to recover the refrigerant with recovering device. The refrigerant cannot be recovered in the outdoor unit; otherwise a serious accident such as breakage or injury is caused.

 **WARNING**

 Assembly/Cabling	<p>After repair work, surely assemble the disassembled parts, and connect and lead the removed cables as before. Perform the work so that the cabinet or panel does not catch the inner cables.</p> <p>If incorrect assembly or incorrect cable connection was done, a disaster such as a leak or fire is caused at user's side.</p>
 Insulator check	<p>After the work has finished, be sure to use an insulation tester set (500V mugger) to check the resistance is 2MW or more between the charge section and the non-charge metal section (Earth position).</p> <p>If the resistance value is low, a disaster such as a leak or electric shock is caused at user's side.</p>
 Ventilation	<p>When the refrigerant gas leaks during work, execute ventilation.</p> <p>If the refrigerant gas touches to a fire, poisonous gas generates. A case of leakage of the refrigerant and the closed room full with gas is dangerous because a shortage of oxygen occurs. Be sure to execute ventilation.</p>
 Be attentive to electric shock	<p>When checking the circuit inevitably under condition of the power-ON, use rubber gloves and others not to touch to the charging section.</p> <p>If touching to the charging section, an electric shock may be caused.</p>
 Compulsion	<p>When the refrigerant gas leaks, find up the leaked position and repair it surely.</p> <p>If the leaked position cannot be found up and the repair work is interrupted, pump-down and tighten the service valve, otherwise the refrigerant gas may leak into the room. The poisonous gas generates when gas touches to fire such as fan heater, stove or cooking stove though the refrigerant gas itself is innocuous.</p> <p>When installing equipment which includes a large amount of charged refrigerant such as a multi air conditioner in a sub-room, it is necessary that the density does not the limit even if the refrigerant leaks.</p> <p>If the refrigerant leaks and exceeds the limit density, an accident of shortage of oxygen is caused.</p> <p>For the installation/moving/reinstallation work, follow to the Installation Manual.</p> <p>If an incorrect installation is done, a trouble of the refrigerating cycle, water leak, electric shock or fire is caused.</p>
 Check after repair	<p>After repair work has finished, check there is no trouble.</p> <p>If check is not executed, a fire, electric shock or injury may be caused. For a check, turn off the power breaker.</p> <p>After repair work (installation of front panel and cabinet) has finished, execute a test run to check there is no generation of smoke or abnormal sound.</p> <p>If check is not executed, a fire or an electric shock is caused. Before test run, install the front panel and cabinet.</p>
 Check after reinstallation	<p>Check the following items after reinstallation.</p> <ol style="list-style-type: none"> 1) The earth wire is correctly connected. 2) The power cord is not caught in the product. 3) There is no inclination or unsteadiness and the installation is stable. <p>If check is not executed, a fire, an electric shock or an injury is caused.</p>

 **CAUTION**

 Put on gloves	<p>Be sure to put on gloves (*) during repair work.</p> <p>If not putting on gloves, an injury may be caused with the parts, etc.</p> <p>(*) Heavy gloves such as work gloves</p>
 Cooling check	<p>When the power was turned on, start to work after the equipment has been sufficiently cooled.</p> <p>As temperature of the compressor pipes and others became high due to cooling/heating operation, a burn may be caused.</p>

• New Refrigerant (R410A)

This air conditioner adopts a new HFC type refrigerant (R410A) which does not deplete the ozone layer.

1. Safety Caution Concerned to New Refrigerant

The pressure of R410A is high 1.6 times of that of the former refrigerant (R22). Accompanied with change of refrigerant, the refrigerating oil has been also changed. Therefore, be sure that water, dust, the former refrigerant or the former refrigerating oil is not mixed into the refrigerating cycle of the air conditioner with new refrigerant during installation work or service work. If an incorrect work or incorrect service is performed, there is a possibility to cause a serious accident. Use the tools and materials exclusive to R410A to purpose a safe work.

2. Cautions on Installation/Service

- (1) Do not mix the other refrigerant or refrigerating oil.

For the tools exclusive to R410A, shapes of all the joints including the service port differ from those of the former refrigerant in order to prevent mixture of them.

- (2) As the use pressure of the new refrigerant is high, use material thickness of the pipe and tools which are specified for R410A.

- (3) In the installation time, use clean pipe materials and work with great attention so that water and others do not mix in because pipes are affected by impurities such as water, oxide scales, oil, etc. Use the clean pipes.

Be sure to brazing with flowing nitrogen gas. (Never use gas other than nitrogen gas.)

- (4) For the earth protection, use a vacuum pump for air purge.

- (5) R410A refrigerant is azeotropic mixture type refrigerant. Therefore use liquid type to charge the refrigerant. (If using gas for charging, composition of the refrigerant changes and then characteristics of the air conditioner change.)

3. Pipe Materials

For the refrigerant pipes, copper pipe and joints are mainly used. It is necessary to select the most appropriate pipes to conform to the standard. Use clean material in which impurities adhere inside of pipe or joint to a minimum.

- (1) Copper pipe

<Piping>

The pipe thickness, flare finishing size, flare nut and others differ according to a refrigerant type.

When using a long copper pipe for R410A, it is recommended to select "Copper or copper-base pipe without seam" and one with bonded oil amount 40mg/10m or less. Also do not use crushed, deformed, discolored (especially inside) pipes. (Impurities cause clogging of expansion valves and capillary tubes.)

<Flare nut>

Use the flare nuts which are attached to the air conditioner unit.

- (2) Joint

The flare joint and socket joint are used for joints of the copper pipe.

The joints are rarely used for installation of the air conditioner. However clear impurities when using them.

4. Tools

(1) Required Tools for R410A

Mixing of different types of oil may cause a trouble such as generation of sludge, clogging of capillary, etc. Accordingly, the tools to be used are classified into the following three types.

- 1) Tools exclusive for R410A (Those which cannot be used for conventional refrigerant (R22))
- 2) Tools exclusive for R410A, but can be also used for conventional refrigerant (R22)
- 3) Tools commonly used for R410A and for conventional refrigerant (R22)

The table below shows the tools exclusive for R410A and their interchangeability.

Tools exclusive for R410A (The following tools for R410A are required.)

Tools whose specifications are changed for R410A and their interchangeability

No.	Used tool	Usage	R410A air conditioner installation		Conventional air conditioner installation
			Existence of new equipment for R410A	Whether conven- tional equipment can be used	Whether new equipment can be used with conventional refrigerant
①	Flare tool	Pipe flaring	Yes	*(Note 1)	Yes
②	Copper pipe gauge for adjusting projection margin	Flaring by conventional flare tool	Yes	*(Note 1)	*(Note 1)
③	Torque wrench	Connection of flare nut	Yes	No	No
④	Gauge manifold	Evacuating, refrigerant charge, run check, etc.	Yes	No	No
⑤	Charge hose				
⑥	Vacuum pump adapter	Vacuum evacuating	Yes	No	Yes
⑦	Electronic balance for refrigerant charging	Refrigerant charge	Yes	Yes	Yes
⑧	Refrigerant cylinder	Refrigerant charge	Yes	No	No
⑨	Leakage detector	Gas leakage check	Yes	No	Yes
⑨	Charging cylinder	Refrigerant charge	(Note 2)	No	No

(Note 1) When flaring is carried out for R410A using the conventional flare tools, adjustment of projection margin is necessary. For this adjustment, a copper pipe gauge, etc. are necessary.

(Note 2) Charging cylinder for R410A is being currently developed.

General tools (Conventional tools can be used.)

In addition to the above exclusive tools, the following equipments which serve also for R22 are necessary as the general tools.


- | | |
|--|---|
| <ol style="list-style-type: none"> (1) Vacuum pump
Use vacuum pump by
attaching vacuum pump adapter. (2) Torque wrench (3) Pipe cutter (4) Reamer (5) Pipe bender (6) Level vial | <ol style="list-style-type: none"> (7) Screwdriver (+, -) (8) Spanner or Monkey wrench (9) Hole core drill (10) Hexagon wrench (Opposite side 4mm) (11) Tape measure (12) Metal saw |
|--|---|

Also prepare the following equipments for other installation method and run check.

- | | |
|--|---|
| <ol style="list-style-type: none"> (1) Clamp meter (2) Thermometer | <ol style="list-style-type: none"> (3) Insulation resistance tester (4) Electroscop |
|--|---|

5. Recharge of Refrigerant

When recharge of the refrigerant is required, charge the new refrigerant with the specified amount in the procedure as described below.

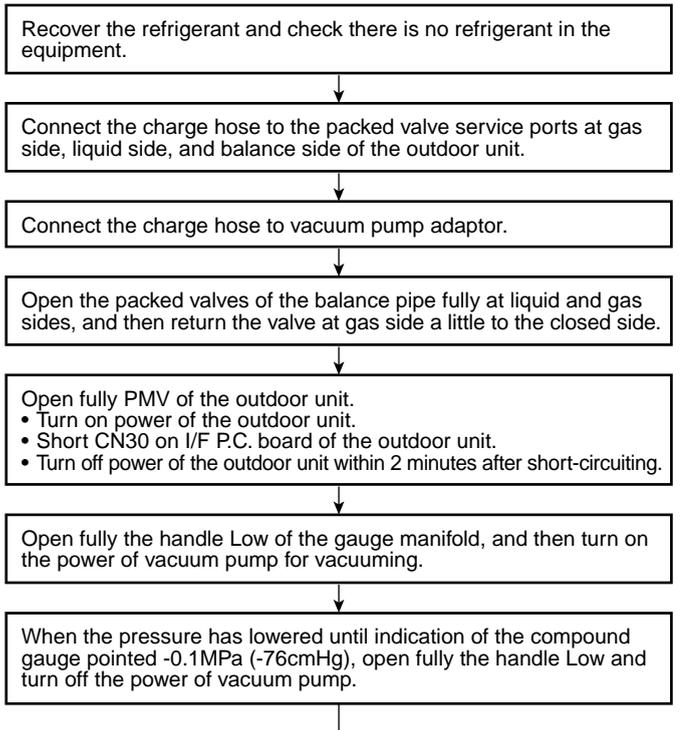


- ① Never charge the refrigerant over the specified amount.
- ② Do not charge the additional refrigerant. If charging refrigerant additionally when refrigerant gas leaks, the refrigerant composition in the refrigerating cycle changes resulted in change of air conditioner characteristics or refrigerant over the specified standard amount is charged and an abnormal high pressure is applied to the inside of the refrigerating cycle resulted in cause of breakage or injury.

Leave it as it is for 1 to 2 minutes and check the indicator of the compound gauge does not return.


Set the refrigerant cylinder on the electron balance, connect the charge hose to connecting ports of the cylinder and the electron gauge, and then charge the liquid refrigerant from the service port at liquid side. (Shield with the gauge manifold so that refrigerant does not flow to gas side.)

(Charge the refrigerant as below.)

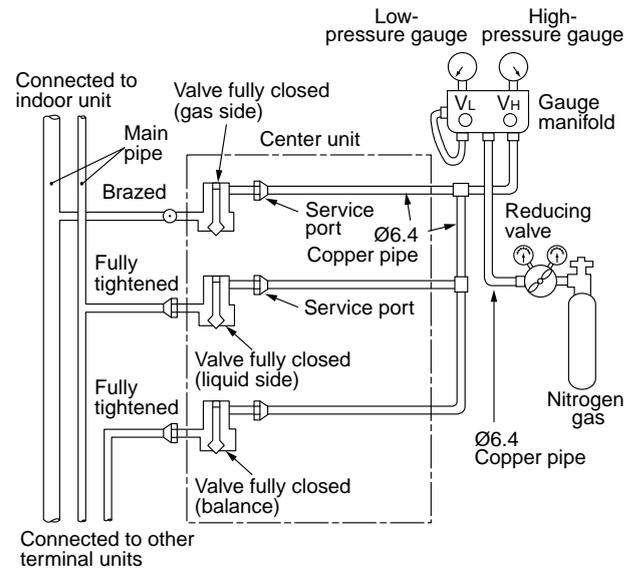

4mm-hexagonal wrench is required.

- ① Set the equipment so that liquid refrigerant can be charged.
- ② When using a cylinder with siphon pipe, liquid can be charged without inverting the cylinder.

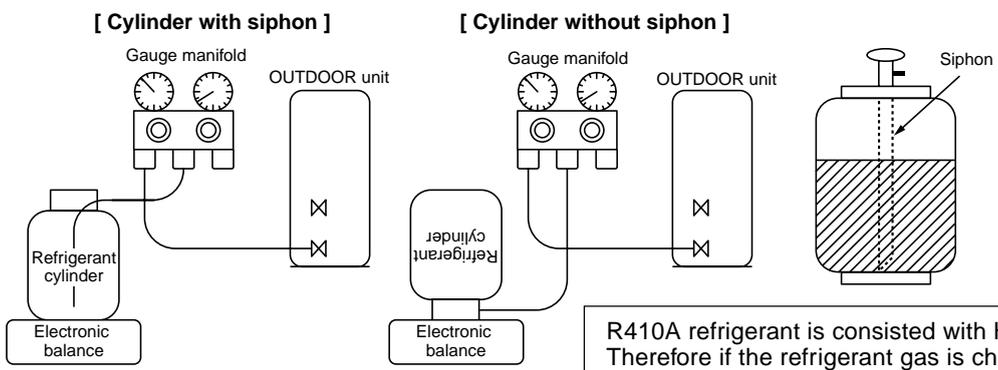


R410A refrigerant is consisted with HFC mixed refrigerant. Therefore if the refrigerant gas is charged, the composition of the charged refrigerant changes and characteristics of the equipment changes.

6. Environment


Use "Vacuum pump method" for an air purge (Discharge of air in the connecting pipe) in installation time.

- Do not discharge flon gas into the air to protect the earth environment.
- Using the vacuum pump method, clear the remained air (Nitrogen, etc.) in the unit. If the air remains, the pressure in the refrigerating cycle becomes abnormally high and an injury and others are caused due to burst.

1. CONSTRUCTION VIEWS (EXTERNAL VIEWS)

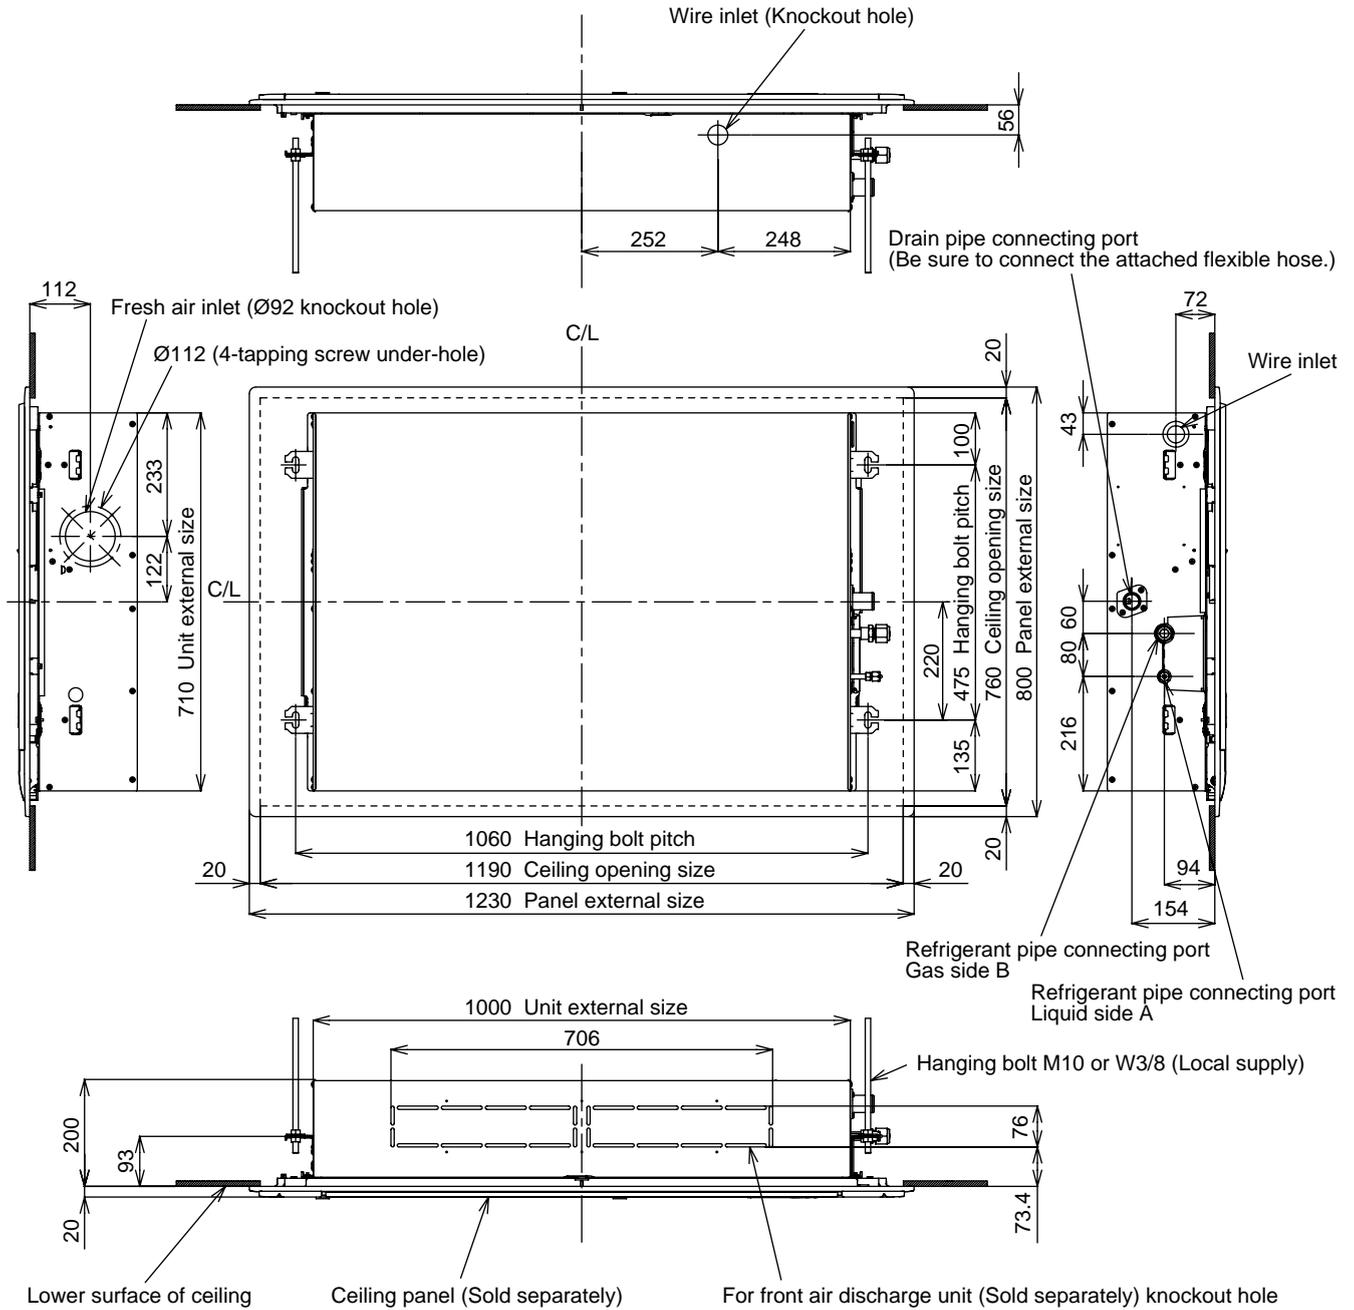


- Wired remote controller (RBC-AMT31E)

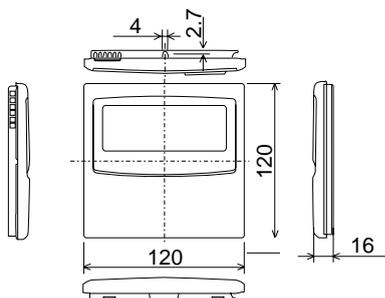

Model name	MMU-	A	B
AP015, AP018 type		Ø6.4	Ø12.7
AP024 type		Ø9.5	Ø15.9

2. WIRING DIAGRAM

Symbol	Parts name	Color indication
FM	Fan motor	RED: RED
TA	Indoor temp sensor	WHI: WHITE
TC1	Temp sensor	YEL: YELLOW
TCJ	Temp sensor	BLU: BLUE
TC2	Temp sensor	BLK: BLACK
LM	Louver motor	GRY: GRAY
DP	Drain pump motor	PNK: PINK
FS	Float switch	ORN: ORANGE
RY302	Drain control relay	BRN: BRWN
PMV	Pulse motor valve	GRN: GREEN
TR	Transformer	

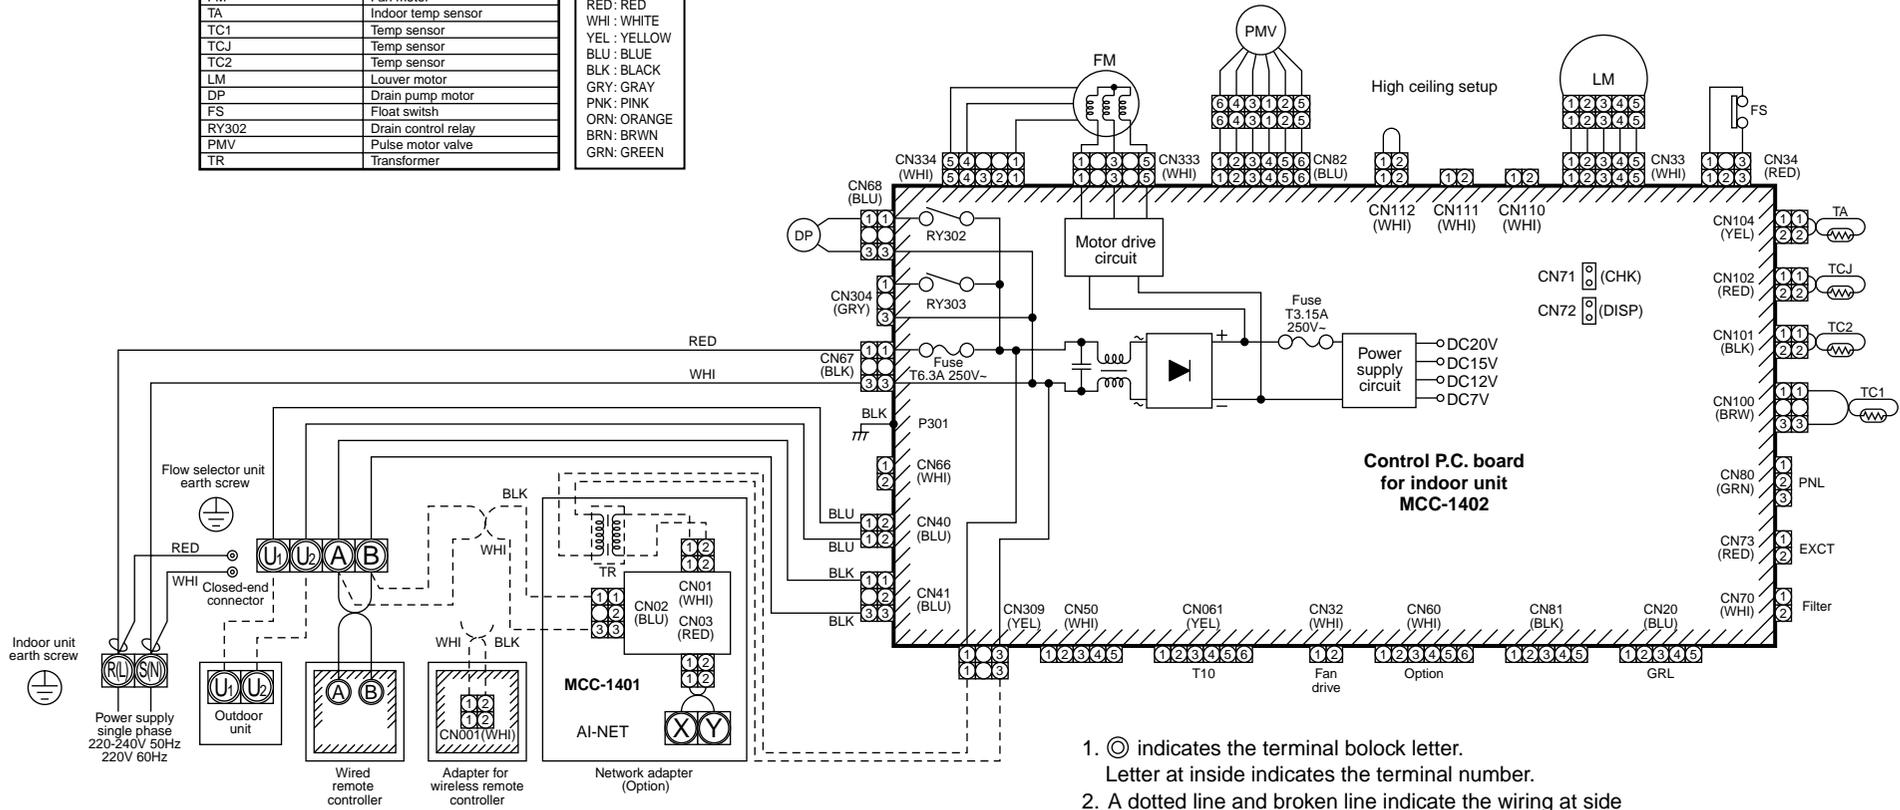


1. © indicates the terminal block letter. Letter at inside indicates the terminal number.
2. A dotted line and broken line indicate the wiring at side.
3. ▨ indicates a control P.C. board.

3. PARTS RATING

3-1. Parts Rating

Model	MMU-AP	0152SH	0182SH	0242SH
Fan motor		SWF-280-60-1		
Driving motor for horizontal grille		MP24GA1		
Pulse motor		EDM-MD12TF-3		
Pulse motor valve		EDM-B40YGTF-3		
TA sensor		Lead wire length : 155mm Vinyl tube		
TC1 sensor		Ø4 size lead wire length : 1100mm Vinyl tube (Blue)		
TC2 sensor		Ø6 size lead wire length : 1100mm Vinyl tube (Black)		
TCJ sensor		Ø6 size lead wire length : 1100mm Vinyl tube (Red)		
Float switch		FS-0218-103		
Drain pump motor		ADP-1409		

3-2. Name of Each Part


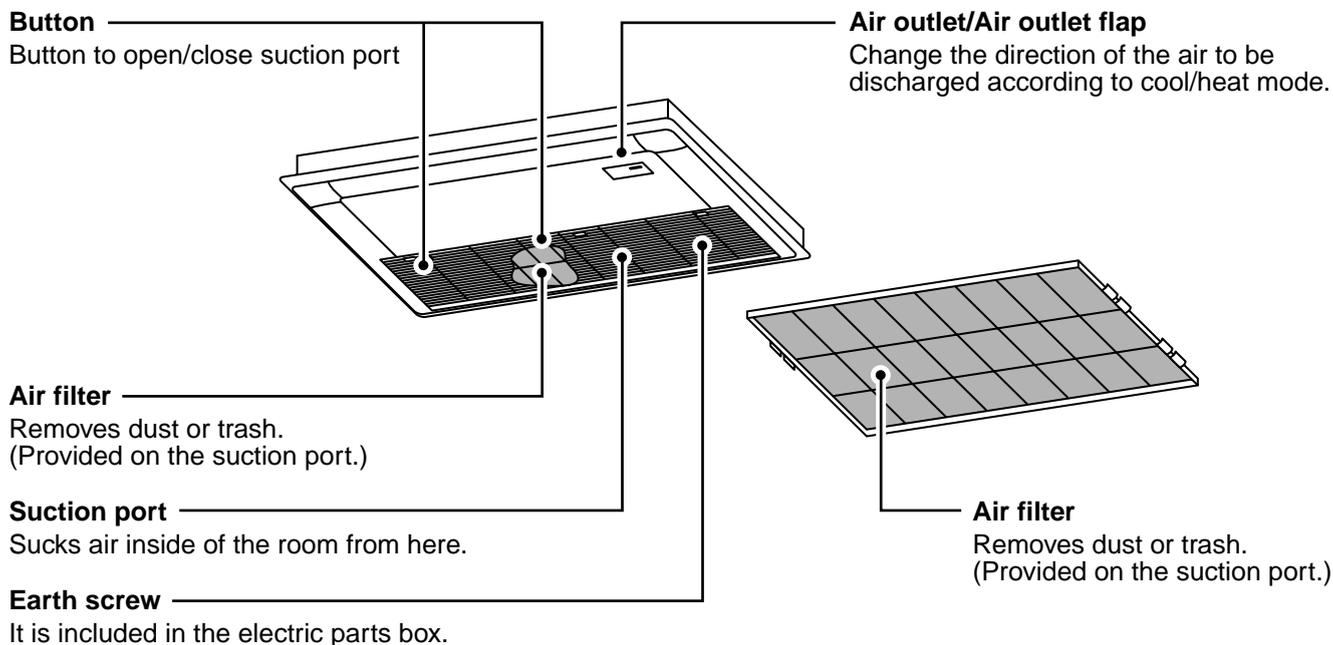


3-3. Parts Name of Remote Controller

Display section

In the display example, all indicators are displayed for the explanation. In reality only, the selected contents are indicated.

- When turning on the leak breaker at the first time, [SET DATA] flashes on the display part of the remote controller. While this display is flashing, the model is being automatically confirmed. Accordingly, wait for a while after [SET DATA] display has disappeared, and then use the remote controller.

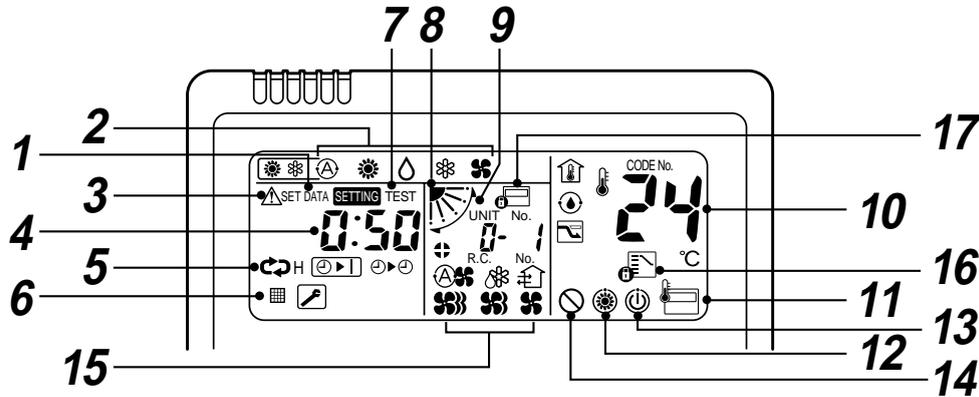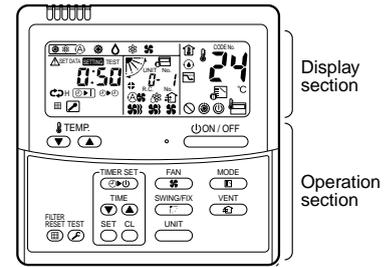

1 SET DATA display

Displayed during setup of the timer.

2 Operation mode select display

The selected operation mode is displayed.

3 CHECK display

Displayed while the protective device works or a trouble occurs.

4 Timer time display

Time of the timer is displayed. (When a trouble occurs, the check code is displayed.)

5 Timer SETIN setup display

When pushing the Timer SETIN button, the display of the timer is selected in order of [OFF] [ON] → [OFF] [ON] → [OFF] [ON] → [OFF] [ON] → No display.

6 Filter display

If "FILTER" is displayed, clean the air filter.

7 TEST run display

Displayed during a test run.

8 Flap position display

Displays flap position.

9 SWING display

Displayed during up/down movement of the flap.

10 Set up temperature display

The selected set up temp. is displayed.

11 Remote controller sensor display

Displayed while the sensor of the remote controller is used.

12 PRE-HEAT display

Displayed when the heating operation starts or defrost operation is carried out.

While this indication is displayed, the indoor fan stops or the mode enters in LOW.

13 Operation ready display

Displayed when cooling or heating operation is impossible because the outdoor temperature goes out of the operable range.

14 No function display

Displayed if there is no function even if the button is pushed.

15 Air volume select display

The selected air volume mode is displayed.

(AUTO) (HIGH) (MED.) (LOW)

In the Concealed Duct High Static Pressure type models, [HIGH] only is displayed for the air speed.

16 Mode select control display

Displayed when pushing "Operation mode select" button while the operation mode is fixed to heating or cooling by the system manager of the air conditioner.

17 Central control display

Displayed when using the remote controller together with the central control remote controller, etc.

If Remote controller is prohibited at the centralcontrol side, flashes when operating


ON/OFF, MODE, DOWN / UP buttons and the change is not accepted.


(The contents available to be set up on the remote controller differ according to the central control mode. For details, refer to Owner's Manual of the central control remote controller.)

Operation section

Push each button to select a desired operation.

This remote controller can operate the maximum 8 indoor units.

- The details of the operation needs to be set up once, afterward, the air conditioner can be used by pushing  button only.

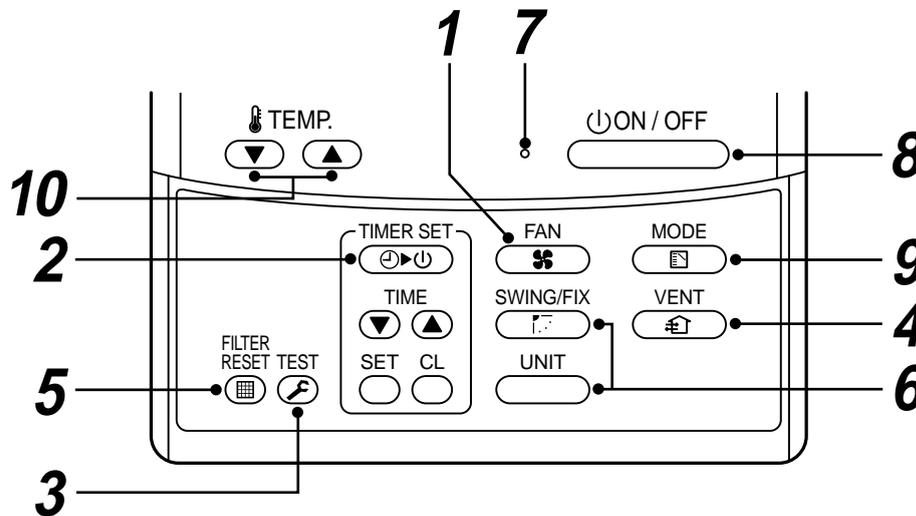

1 Air volume select button

Selects the desired air volume mode.

The Concealed Duct High Static Pressure type models cannot be operated.

2 Timer set button

TIMER SET button is used when the timer is set up.

3 Check button

The CHECK button is used for the check operation. During normal operation, do not use this button.

4 Fan button

FAN button is used when a fan which is sold on the market or etc. is connected.

- If  is displayed on the remote controller when pushing the FAN button, a fan is not connected.

5 Filter reset button

Resets (Erases) "FILTER  " display.

6 Wind direction and Swing

 :

If the multiple indoor units are operated by only one remote controller, select the units when the air direction is adjusted.

 :

Set up the auto swing and angle of the flap.

7 Operation lamp

Lamp is lit during the operation. Lamp is off when stopped.

Although it flashes when operating the protection device or abnormal time.

8 button

When the button is pushed, the operation starts, and it stops by pushing the button again.

When the operation has stopped, the operation lamp and all the displays disappear.

9 Operation select button

Selects desired operation mode.

10 Set up temperature button

Adjusts the room temperature.

Set the desired set temperature by pushing  or .

OPTION :


Remote controller sensor

Usually the TEMP. sensor of the indoor unit senses the temperature. The temperature on the surrounding of the remote controller can also be sensed.

For details, contact the dealer from which you have purchased the air conditioner.

- In case that one remote controller controls the multiple indoor units, the setup operation is unavailable in group control.

3-4. Correct Usage


When you use the air conditioner for the first time or when you change the SET DATA value, follow the procedure below. From the next time, the operation displayed on the remote controller will start by pushing the  button only.


Preparation

Turn on the main power switch and/or the leakage breaker.

- When the power supply is turned on, a partition line is displayed on the display part of the remote controller.
- * After the power supply is turned on, the remote controller does not accept an operation for approx. 1 minute, but it is not a failure.

REQUIREMENT

- While using the air conditioner, operate it only with  button without turning off the main power switch and the leak breaker.

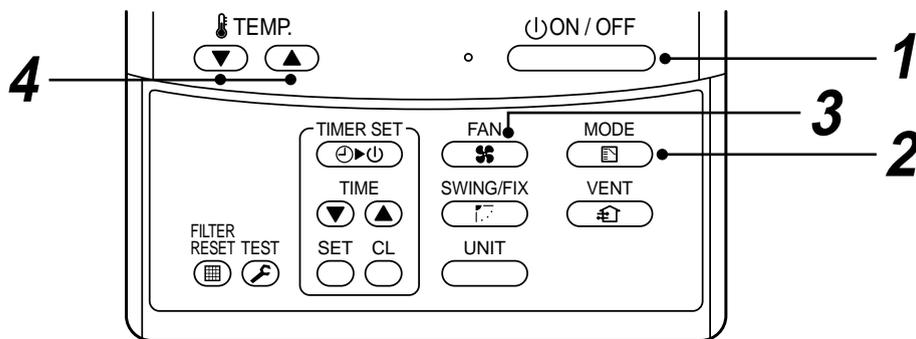

1 Push button.



The operation lamp goes on, and the operation starts.

2 Select an operation mode with the “MODE ” button.

One push of the button, and the display changes in the order shown on the right.

- In HEAT  mode, if the room temperature reaches to the set temperature, the outdoor unit stops and the air flow becomes LOW and the air volume decreases.


- In the defrost mode, the fan stops so that cool air is not discharged and PRE-DEF  is displayed.

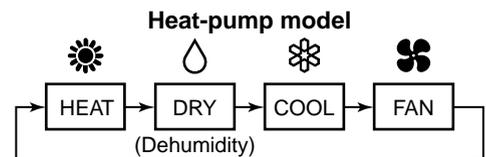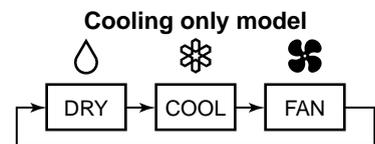

3 Select air volume with “FAN ” button.

One push of the button, and the display changes in the order shown on the right.

- When air volume is “AUTO ”, air volume differs according to the temperature difference between set temp. and room temp.
- In DRY  mode, “AUTO ” is displayed and the air volume is LOW.
- In heating operation, if the room temperature is not heated sufficiently with VOLUME “LOW ” operation, select “MED. ” or “HIGH ” operation.



4 Determine the set up temperature by pushing the “TEMP. ” or “TEMP. ” button.


Stop

Push button.

The operation lamp goes off, and the operation stops.

3-5. Automatic Operation (Super Heat Recovery Type Only)

When you set the air conditioner in **A** mode or switch over from AUTO operation because of some settings change, it will automatically select either cooling, heating, or fan only operation depending on the indoor temperature.

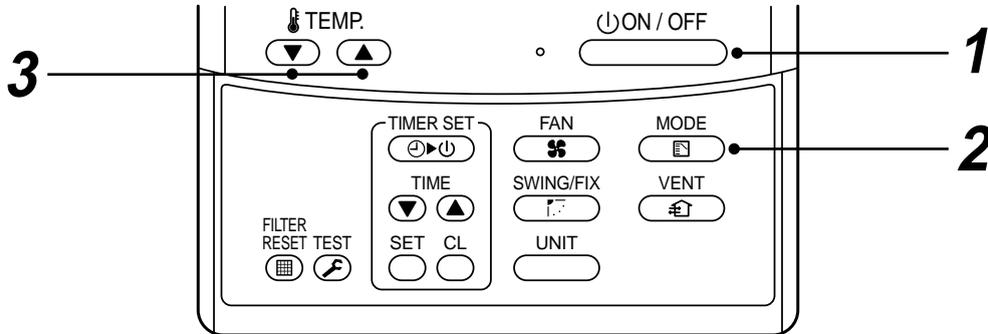

Start

1 **ON/OFF** button

Push this button to start the air conditioner.

2 **Mode select button (MODE)**

Select Auto.

3 **Temperature button**

Set the desired temperature.

- In case of cooling, start the operation after approx. 1 minute.
- In case of heating, the operation mode is selected in accordance with the room temperature and operation starts after approximately 3 to 5 minutes.
- When you select the Auto mode, it is unnecessary to set the fan speed. The FAN speed display will show AUTO and the fan speed will be automatically controlled.
- After the heating operation has stopped, FAN operation may continue for approx. 30 seconds.
- When the room temperature reaches the set temperature and the outdoor unit stops, the super low wind is discharged and the air volume decreases excessively. During defrost operation, the fan stops so that cool air is not discharged and "HEAT READY" is displayed.
- If the Auto mode is uncomfortable, you can select the desired conditions manually.

NOTE

When restarting the operation after stop

- When restarting the operation immediately after stop, the air conditioner does not operate for approx. 3 minutes to protect the machine.

Stop

Push **ON/OFF** button.

Push this button again to stop the air conditioner.

3-6. TIMER Operation


A type of timer operation can be selected from the following three types.

OFF timer : The operation stops when the time of timer has reached the set time.

Repeat OFF timer : Every time, the operation stops after the set time has passed.


ON timer : The operation starts when the time of timer has reached the set time.

Timer operation

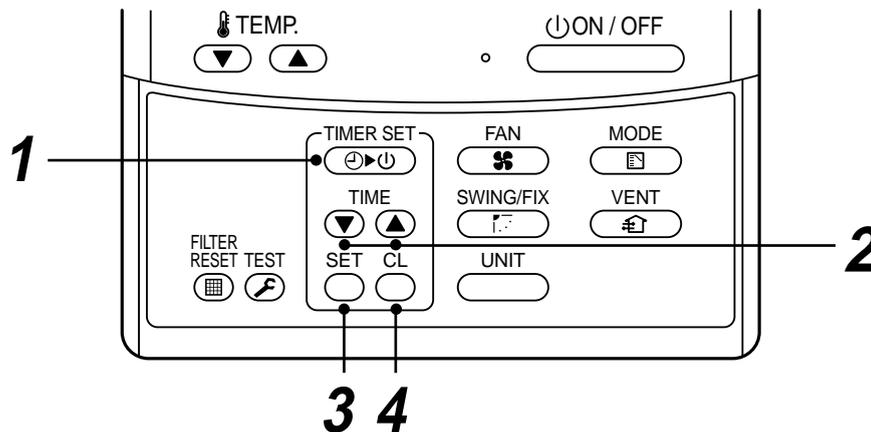

1 Push TIMER SET button.

- The timer display (type) changes for every push of the button.
- SET DATA and timer time displays flash.

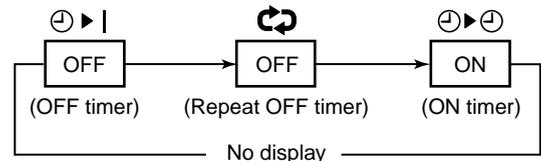

2 Push to select "SET TIME".

For every push of  button, the set time increases in the unit of 0.5 hr (30 minutes).

The maximum set time is 72.0 hr.

For every push of  button, the set time decreases in the unit of 0.5 hr (30 minutes).

The minimum set time is 0.5 hr.

3 Push SET button.


- **SETTING** display disappears and timer time display goes on.
(When ON timer is activated, timer time, ON timer  are displayed and other displays disappear.)

Cancel of timer operation

4 Push CL button.

- TIMER display disappears.

NOTICE

- When the operation stops after the timer reached the preset time, the Repeat OFF timer resumes the operation by pushing  button and stops the operation after the time of the timer has reached the set time.

3-7. Adjustment of Wind Direction

- While the air conditioner stops, the horizontal flap (Up/Down air direction adjustment plate) automatically directs upward.
- While the air conditioner is in ready status for heating, the horizontal flap (Up/Down air direction adjustment plate) directs upward. The swinging operation starts after heating ready status has been cleared, but “SWING ↷” is displayed on the remote controller even if the status is ready to heating.


How to set up the air direction

Push  button during operation.

1 Every pushing the button, the air direction changes.


In Heating operation

Set the horizontal flap (Up/Down air direction adjustment plate) downward. If directing it upward, the hot air may not come to the foot come to the foot.

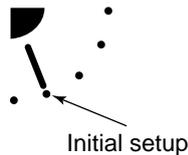

In Cooling / Dry operation

Set the horizontal flap (Up/Down air direction adjustment plate) upward. If directing it downward, the dew may fall on near the air air outlet port or it drips.

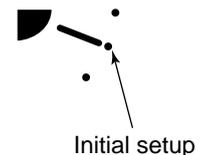


How to start swinging

2 Push  button.

Set direction of the horizontal flap (Up/Down air direction adjustment plate) to the lowest position and then push  button again.

- [SWING ↷] is displayed and the air direction automatically changes upward/downward. In case when one remote controller controls the multiple indoor units, each indoor unit can be selected and its air direction can be set up.

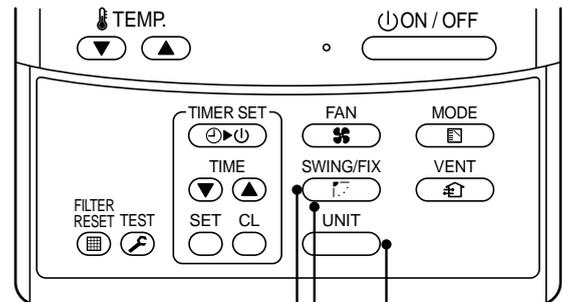

How to stop swinging




3 Push  button again during swinging of the horizontal flap.

- The horizontal flap can be stopped at the desired position. After then the air direction can be again set up from the uppermost position by pushing  button.

* While the horizontal flap is set downward in cooling/drying operation, it does not stop. If stopping the horizontal flap which directs downward during swinging, it stops after moving to the 3rd position from the top position.

4 

- To set up the air direction individually, push  button to display each indoor unit No. in a group control. Then set up the air direction to a displayed indoor unit.
- If there is no display, all the indoor units can be operated collectively.
- Every pushing  button, the display exchanges as shown in the figure.

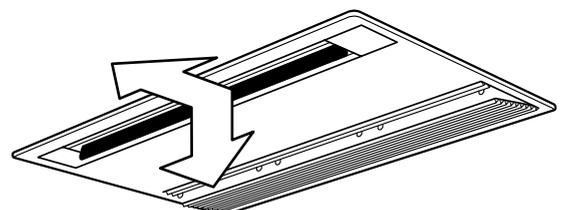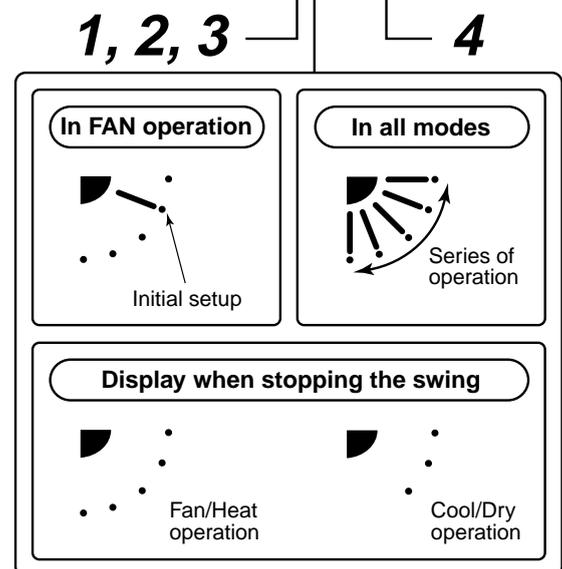

3-8. Information

Confirmation before operation

- Turn on the power switch 12 hours before starting the operation.
- Make sure whether earth wire is connected.
- Make sure the air filter is connected to the indoor unit.

Heating capacity

- A heat pump system which absorbs heat from outside of the room and then discharges heat into the room is adopted for heating. If the outside temperature falls, the heating capacity decreases.
- When the outside temperature is too low, it is recommended to use this air conditioner together with other heating equipment.


Defrost during heating operation

- In heating operation, if there is frost on the outdoor unit, the operation changes automatically to the defrost operation (Approx. 2 to 10 minutes) to increase the heating efficiency.
- During defrost operation, the fan of the indoor unit stops.

3-minutes protection

- When restarting the operation just after the operation has been stopped or the main power switch has turned on, the outdoor unit does not work for approx. 3 minutes in order to protect the air conditioner.

Power failure

- If a power failure occurred during operation, all operations stop.
- When the power is returned after a power failure, the operation lamp notifies the power-ON by flashing operation lamp on the remote controller.
- When restarting the operation, push  button again.

Fan rotation in stopped unit

- In heating operation even in the stopped indoor unit, the fan rotates once for several minutes per approx. an hour when the other indoor unit is operating to protect the air conditioner.

Protective device (High pressure switch)

This device stops automatically an operation when excessive force is applied on the air conditioner. If the protective device works, the operation stops and the operation lamp flashes.

When the protective device works, the indication  and the check code are displayed on the display section of the remote controller. In the following cases, the protective device may work.

In cooling operation

- The suction port or discharge port of the outdoor unit is closed.
- A strong wind continuously blows to the discharge port of the outdoor unit.

In heating operation

- Dust or waste adheres excessively to air filter of the indoor unit.
- The discharge port of the indoor unit is closed.

If the protective device works, turn off the main power switch, solve the cause, and then start the operation again.

Cooling/Heating operation of Super Modular Multi system air conditioner

- Although each indoor unit can be individually controlled in the Super Modular Multi system air conditioner, the cooling operation and the heating operation cannot be simultaneously performed in the multiple indoor units which are connected to an outdoor unit.
- If the cooling operation and the heating operation are simultaneously performed, the indoor unit which executes cooling operation stops, and  on the operation section lights up. On the other hand, the indoor unit which executes heating operation continues running. In a case that the manager of the air conditioner has fixed the operation to cooling or heating, an operation other than that set up is unavailable. If an operation other than that set up is executed,  on the operation section lights up and the operation stops.

Characteristics of heating operation

- The wind is not out just after starting an operation. The hot wind starts to blow 3 to 5 minutes after (Time differs according to indoor/outdoor temperature.) the indoor heat exchanger has warmed up.
- During operation, the outdoor unit may stop if the outside temperature rises.

3-9. Air Conditioner Operations and Performance

3 minutes protection function

3-minutes protection function prevents the air conditioner from starting for initial 3 minutes after the main power switch/circuit breaker is turned on for re-starting the air conditioner.

Power failure

Power failure during operation will stop the unit completely.

- To restart the operation, push the START/STOP button on the remote controller.
- Lightning or a wireless car telephone operating nearby may cause the unit to malfunction. Turn off the main power switch or circuit breaker and then turn them on again. Push the START/STOP button on the remote controller to restart.

Heating characteristics

Preheating operation

The air conditioner will not deliver warm air immediately after it is turned on. Warm air will start to flow out after approximately 5 minutes when the indoor heat exchanger warmed up.

Warm air control (In heating operation)

When the room temperature reaches the set temperature, the fan speed is automatically reduced to prevent to blow cold draft. At this time, the outdoor unit will stop.

Defrosting operation

If the outdoor unit is frosted during the heating operation, defrosting starts automatically (for approximately 2 to 10 minutes) to maintain the heating capacity.

- The fans in both indoor and outdoor units will stop during the defrosting operation.
- During the defrosting operation, the defrosted water will be drained from the bottom plate of the outdoor unit.

Heating capacity

In the heating operation, the heat is absorbed from the outside and brought into the room. This way of heating is called heat pump system. When the outside temperature is too low, it is recommended to use another heating apparatus in combination with the air conditioner.

Attention to snowfall and freeze on the outdoor unit

- In snowy areas, the air inlet and air outlet of the outdoor unit are often covered with snow or frozen up. If snow or freeze on the outdoor unit is left as it is, it may cause machine failure or poor warming.
- In cold areas, pay attention to the drain hose so that it perfectly drains water without water remaining inside for freeze prevention. If water freezes in the drain hose or inside the outdoor unit, it may cause machine failure or poor warming.

Air conditioner operating conditions


For proper performance, operate the air conditioner under the following temperature conditions:

Cooling operation	Outdoor temperature : -5°C to 43°C
	Room temperature : 21°C to 32°C (Dry valve temp.), 15°C to 24°C (Wet valve temp.)
	CAUTION Room relative humidity – less than 80 %. If the air conditioner operates in excess of this figure, the surface of the air conditioner may cause dewing.
Dry operation	Outdoor temperature : 15°C to 43°C (Maximum suction air temp. 46°C)
	Room temperature : 17°C to 32°C
Heating operation	Outdoor temperature : -15°C to 15°C (Wet valve temp.)
	Room temperature : 15°C to 28°C (Dry valve temp.)

If air conditioner is used outside of the above conditions, safety protection may work.

3-10. When the Following Symptoms are Found

Check the points described below before asking repair servicing.

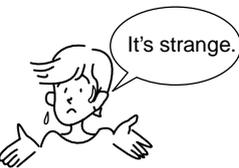Symptom		Cause
Check again.	Outdoor unit <ul style="list-style-type: none"> • White misty cold air or water is out. • Sometimes, noise "Pushu!" is heard. 	<ul style="list-style-type: none"> • Fan of the outdoor unit stops automatically and performs defrost operation. • Solenoid valve works when defrost operation starts or finishes.
	Indoor unit <ul style="list-style-type: none"> • "Swish" sound is heard sometimes. • Slight "Pishi!" sound is heard. • Discharge air smells. • The operation lamp flashes • "STANDBY" indication is lit.  <ul style="list-style-type: none"> • Sound or cool air is output from the stand by indoor unit. • When power of the air conditioner is turned on, "Ticktock" sound is heard. 	<ul style="list-style-type: none"> • When the operation has started, during the operation, or immediately after the operation has stopped, a sound such as water flows may be heard, and the operation sound may become larger for 2 or 3 minutes immediately after the operation has started. They are flowing sound of refrigerant or draining sound of dehumidifier. • This is sound generated when heat exchanger, etc. expand and contract slightly due to change of temperature. • Various smell such as one of wall, carpet, clothes, cigarette, or cosmetics adhere to the air conditioner. • Flashes when power is turned on again after power failure, or when power switch is turned on. • When cooling operation cannot be performed because another indoor unit performs heating operation. • When the manager of the air conditioner has fixed the operation to COOL or HEAT, and an operation contrary to the setup operation is performed. • When fan operation stopped to prevent discharge of hot air. • Since refrigerant is flowed temporarily to prevent stay of oil or refrigerant in the stand by indoor unit, sound of flowing refrigerant, "Kyururu" or "Shaa" may be heard or white steam when other indoor unit operates in HEAT mode, and cold air in COOL mode may be blow-out. • Sound is generated when the expansion valve operates when power has been turned on.
It is not a failure.	Operates or stops automatically.	<ul style="list-style-type: none"> • Is the timer "ON" or "OFF"?
	Does not operate. 	<ul style="list-style-type: none"> • Is it a power failure? • Is the power switch turned off? • Is the power fuse or breaker blown? • Has the protective device operated? (The operation lamp goes on.) • Is the timer "ON"? (The operation lamp goes on.) • Are COOL and HEAT selected simultaneously? ("STANDBY" indication is lit on the display column of the remote controller.)
	Air is not cooled or warmed sufficiently. 	<ul style="list-style-type: none"> • Is the suction port or discharge port of the outdoor unit obstructed? • Are any door or window open? • Is the air filter clogged with dust? • Is discharge louver of the indoor unit set at appropriate position? • Is air selection set to "LOW" "MED", and is the operation mode set to "FAN"? • Is the setup temp. the appropriate temperature? • Are COOL and HEAT selected simultaneously? ("STANDBY" indication is lit on the display column of the remote controller.)

When the following symptoms are found, stop the operation immediately, turn off the power switch, and contact the dealer which you have purchased the air conditioner.

- Activation of switch is unstable.
- Fuse or breaker is blown periodically.
- Foreign matters or water entered by mistake.
- When if activation cause of the protective device has been removed, the operation is not performed.
- Other unusual status occurred.

Accessory parts and Parts to be procured locally

Accessory parts

Part name	Q'ty	Shape	Usage
Installation Manual	1	This manual	(Be sure to hand over to customers.)
Installation pattern	1	—	For check of ceiling opening and unit position
Installation gauge	1		For check of ceiling opening and unit position (Unit with installation pattern)
Pattern fixing screw	4	M5 x 16L	For mounting of pattern
Heat insulating pipe	2		For insulating pipe connecting section
Washer	8	M10 x Ø34	For hanging-down of unit
Hose band	1		For connecting drain pipe
Flexible hose	1		For adjustment of drain pipe centering
Heat insulator	1		For insulating drain connecting section
Heat insulator	1		For sealing of pipe connecting port (With slit)
Heat insulator	1		For sealing of pipe connecting port (Without slit)

Refrigerant piping

- Piping material used for the conventional refrigerant cannot be used.
- Use copper pipe with 0.8 mm or more thickness for Ø6.4, Ø9.5, Ø12.7.
Use copper pipe with 1.0 mm or more thickness for Ø15.9.
- Flare nut and flare works are also different from those of the conventional refrigerant.
Take out the flare nut attached to the indoor unit of the air conditioner, and use it.

Parts to be procured locally

Connecting pipe (Liquid side) (6.4mm (diam.), Nominal (diam.) 1/4" thick 0.8mm) MMU-AP0152SH, MMU-AP0182SH (9.5mm (diam.), Nominal (diam.) 3/8" thick 0.8mm) MMU-AP0242SH
Connecting pipe (Gas side) (12.7mm (diam.), Nominal (diam.) 1/2" thick 0.8mm) MMU-AP0152SH, MMU-AP0182SH (15.9mm (diam.), Nominal (diam.) 5/8" thick 1.0mm) MMU-AP0242SH
Power supply cord Cable 3-core 2.5mm ² , in conformity with Design 60245 IEC57

1 PRECAUTIONS FOR SAFETY

- Ensure that all Local, National and International regulations are satisfied.
- Read this "PRECAUTIONS FOR SAFETY" carefully before Installation.
- The precautions described below include the important items regarding safety. Observe them without fail.
- After the installation work, perform a trial operation to check for any problem.
Follow the Owner's Manual to explain how to use and maintain the unit to the customer.
- Turn off the main power supply switch (or breaker) before the unit maintenance.
- Ask the customer to keep the Installation Manual together with the Owner's Manual.

CAUTION

New Refrigerant Air Conditioner Installation

- THIS AIR CONDITIONER ADOPTS THE NEW HFC REFRIGERANT (R410A) WHICH DOES NOT DESTROY OZONE LAYER.**

The characteristics of R410A refrigerant are ; easy to absorb water, oxidizing membrane or oil, and its pressure is approx. 1.6 times higher than that of refrigerant R22. Accompanied with the new refrigerant, refrigerating oil has also been changed. Therefore, during installation work, be sure that water, dust, former refrigerant, or refrigerating oil does not enter the refrigerating cycle.

To prevent charging an incorrect refrigerant and refrigerating oil, the sizes of connecting sections of charging port of the main unit and installation tools are charged from those for the conventional refrigerant.

Accordingly the exclusive tools are required for the new refrigerant (R410A).

For connecting pipes, use new and clean piping designed for R410A, and please care so that water or dust does not enter. Moreover, do not use the existing piping because there are problems with pressure-resistance force and impurity in it.

CAUTION

To Disconnect the Appliance from Main Power Supply.

This appliance must be connected to the main power supply by means of a switch with a contact separation of at least 3 mm.

WARNING

- Ask an authorized dealer or qualified installation professional to install/maintain the air conditioner.**
Inappropriate installation may result in water leakage, electric shock or fire.
- Turn off the main power supply switch or breaker before attempting any electrical work.**
Make sure all power switches are off. Failure to do so may cause electric shock.
- Connect the connecting wire correctly.**
If the connecting wire is connected in a wrong way, electric parts may be damaged.
- When moving the air conditioner for the installation into another place, be very careful not to enter any gaseous matter other than the specified refrigerant into the refrigeration cycle.**
If air or any other gas is mixed in the refrigerant, the gas pressure in the refrigeration cycle becomes abnormally high and it as a result causes pipe burst and injuries on persons.
- Do not modify this unit by removing any of the safety guards or by by-passing any of the safety interlock switches.**
- Exposure of unit to water or other moisture before installation may cause a short-circuit of electrical parts.**
Do not store it in a wet basement or expose to rain or water.
- After unpacking the unit, examine it carefully if there are possible damage.**

1 PRECAUTIONS FOR SAFETY

- **Do not install in a place that might increase the vibration of the unit.**
- **To avoid personal injury (with sharp edges), be careful when handling parts.**
- **Perform installation work properly according to the Installation Manual.**
Inappropriate installation may result in water leakage, electric shock or fire.
- **When the air conditioner is installed in a small room, provide appropriate measures to ensure that the concentration of refrigerant leakage occur in the room does not exceed the critical level.**
- **Install the air conditioner securely in a location where the base can sustain the weight adequately.**
- **Perform the specified installation work to guard against an earthquake.**
If the air conditioner is not installed appropriately, accidents may occur due to the falling unit.
- **If refrigerant gas has leaked during the installation work, ventilate the room immediately.**
If the leaked refrigerant gas comes in contact with fire, noxious gas may generate.
- **After the installation work, confirm that refrigerant gas does not leak.**
If refrigerant gas leaks into the room and flows near a fire source, such as a cooking range, noxious gas might generate.
- **Electrical work must be performed by a qualified electrician in accordance with the Installation Manual. Make sure the air conditioner uses an exclusive power supply.**
An insufficient power supply capacity or inappropriate installation may cause fire.
- **Use the specified wires for wiring connect the terminals securely fix. To prevent external forces applied to the terminals from affecting the terminals.**
- **Conform to the regulations of the local electric company when wiring the power supply.**
Inappropriate grounding may cause electric shock.
- **Do not install the air conditioner in a location subject to a risk of exposure to a combustible gas.**
If a combustible gas leaks, and stays around the unit, a fire may occur.

REQUIREMENT

If installing an air conditioner at a place such as the following place where temperature inside of the ceiling is 30°C or higher and relative humidity is 80% or higher, dewing may occur at outer surface of the indoor unit and dew may drip down. Therefore be sure to attach the heat insulator to four sides and ceiling surface of the indoor unit.

- Place where much heat is generated in the room such as a kitchen
- Place where inside of the ceiling is used as an inlet of fresh air
- Place where heat from ceiling of the roof is insufficiently insulated

Shape of additional heat insulator (Use heat insulator with 10-mm or more thick)

Attached surface	Size (mm)	Q'ty	Remarks
Ceiling surface of unit	1000 x 710	1	—
Front/rear surface	1000 x 210	2	—
Left side surface	730 x 210	1	Slits for hanging hook are necessary.
Right side surface	730 x 210	1	Slits for pipe and hanging hook are necessary.

2 SELECTION OF INSTALLATION PLACE

⚠ WARNING

- **Install the air conditioner where there is sufficient strength to weight of the unit.**
If strength is insufficient, the unit may fall down resulting in human injury.
- **Perform a specified installation work to guard against an earth quake.**
An incomplete installation can cause accidents by the units failing and dropping.
- **Install the air conditioner at a height 2.5m or more from the floor.**
If you insert your hands or others directly into the unit while the air conditioner operates, it is dangerous because you may contact with revolving fan or active electricity.

⚠ CAUTION

- **Do not install the air conditioner in a location subject to a risk of exposure to combustible gas.**
Should the combustible gas leak and collect near the unit, fire may occur.

Upon approval of the customer, install the air conditioner in a place that satisfies the following conditions.


- Place where the unit can be installed horizontally.
- Place where a sufficient servicing space can be ensured for safe maintenance and check.
- Place where drained water will not cause any problem.

Avoid installing in the following places.

- Place exposed to air with high salt content (seaside area), or place exposed to large quantities of sulfide gas (hot spring). (Should the unit be used in these places, special protective measures are needed.)
- Place exposed to oil, vapor, oil smoke or corrosive gas.
- Place where organic solvent is used nearby.
- Place close to a machine generating high frequency.
- Place near door or window where may come to contact with the outside air of high humidity. (Dewing may be caused.)
- Place where special spray is frequently used.
- Place with poor ventilation.

Installation space

Keep 5mm or more for clearance between top plate of the indoor unit and the ceiling surface.
Reserve space required to install the indoor unit and for service work.

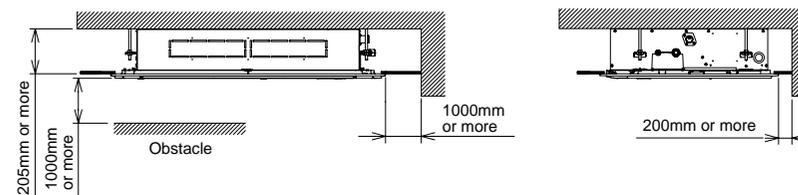

The lighting term setup of the filter sign (Notification of filter cleaning) of the remote controller can be changed according to the condition of installation. If the room is not heated due to the installation place or construction of the room, the detection temperature of heating can be raised.

For setup method, refer to "Change of lighting term of filter sign" and "To secure better effect of heating" in the Applicable controls of this Manual.

3 INSTALLATION OF INDOOR UNIT

Ceiling opening and installation of hanging bolts

- Considering pipe/wire connecting work inside the ceiling after the indoor unit has been hanged, select an installation place and determine piping direction.
- After installation place of the indoor unit has been determined, open the installation hole on the ceiling and install the hanging bolts.
- For the ceiling opening size and the hanging bolt pitch, refer to the external view and the attached installation pattern.
- If the ceiling has been already set up, draw the drain pipe, refrigerant pipe, indoor/outdoor inter-unit wire, wire for central control system, and remote controller wire up to the position where pipes and wires are to be connected before hanging the indoor unit.

Please procure the hanging bolts and nuts for installation of the indoor unit at local site.

Hanging bolt	M10 or W3/8	4 pieces
Nut	M10 or W3/8	12 pieces

[How to use the attached installation pattern]

The installation pattern is attached inside of the package cap.


<In case of existing ceiling>

Use the installation pattern for positioning of the ceiling opening hole and the hanging bolt.

<In case of new ceiling>

Use the installation pattern for positioning of the opening hole when setting up a new ceiling.

- Install the indoor unit after installation of the hanging bolts.
- Using the attached installation pattern fixing screws (M5 × 16L: 4 pieces), attach the installation pattern to the indoor unit. (Screwing to installation brackets of the ceiling panel)
- When setting up the ceiling, open a hole along the outside dimension of the installation pattern.

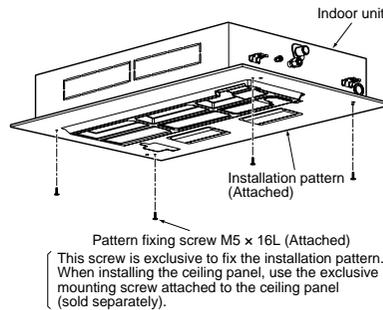

Installation of hanging bolts

Use M10 hanging bolts (4 pcs, to be local procure).

Matching to the existing structure, set pitch according to size in the unit external view as shown below.

New concrete slab	Steel frame structure	Existing concrete slab
<p>Install the bolts with insert brackets or anchor bolts.</p> <p>(Blade type bracket) (Slide type bracket) (Pipe hanging anchor bolt)</p> <p>Reinforcing steel</p>	<p>Use existing angles or install new support angles.</p> <p>Hanging bolt</p> <p>Hanging bolt</p> <p>Support angle</p>	<p>Use a hole-in anchors, hole-in plugs, or a hole-in bolts.</p>


Hanging up of unit

CAUTION



This unit is incorporated with drain pump and float switch. Never incline the indoor unit. Otherwise, malfunction of the float switch may be caused resulting in water leakage.

Mount the nut (M10 or W3/8: Supplied locally) and the attached washer (M10 × Ø34) to the hanging bolt.

- Hang up the indoor unit by hanging nut of hanging bolt to T groove of hanging bracket of the indoor unit.
- Using the level vial, etc., check that four sides are horizontal. (Horizontal degree : within 5mm)
- Using the installation gauge, check and adjust the positional relation between the indoor unit and ceiling opening hole, and hanging-up height of the indoor unit.

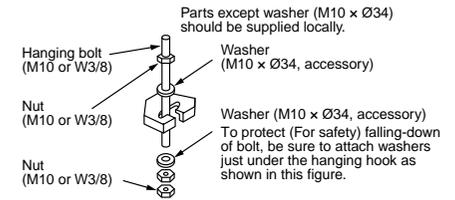


- ① Check lower side of the indoor unit locates at position 17 to 22mm higher than bottom surface of the ceiling board. (4 corners)
- ② Check clearance between the side of the indoor unit and the ceiling board is 25mm. (Both left/right)
- ③ Check clearance between the front side (piping side) of the indoor unit and the ceiling board is 87.5mm.
 - Size of the side face (longitudinal) of the indoor unit differs according to position. Therefore be sure to perform a check using an installation gauge at outside of the hanging hook.

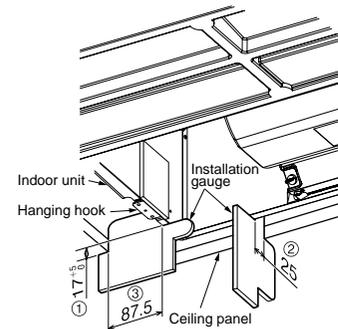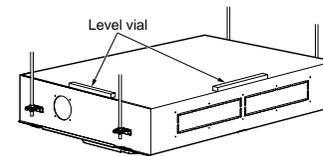

REQUIREMENT

Before installation of the indoor unit, remove the protective tape for transportation. If driving the indoor unit with protective tape, abnormal sound may generate.

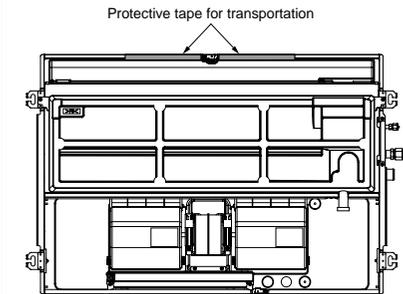

REQUIREMENT

- Using a level vial, etc., confirm the horizontal level of the indoor unit.
- Tighten the nut sufficiently, and fix it securely.


3 INSTALLATION OF INDOOR UNIT

Installation of ceiling panel (Sold separately)

Install the ceiling panel according to Installation Manual after piping/wiring work has completed. Check that installation of indoor unit and ceiling opening part is correct, and then install it.

REQUIREMENT

Connect the connecting sections of ceiling panel and ceiling surface, and the ceiling panel and indoor unit closely. If there is clearance, air leakage generates resulting in dewing or water leakage. Before installing the ceiling panel, remove the adjust cover (Left and right) and install it to the indoor unit.

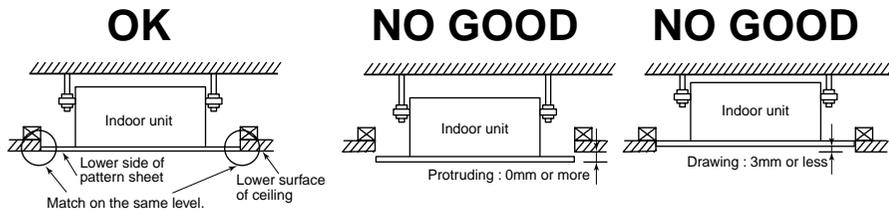

Installation of remote controller (Sold separately)

For installation of the wired remote controller, follow the Installation Manual attached with the remote controller. For installation of the wireless remote controller, follow to the Installation Manual attached to the remote controller.

- Do not put the remote controller on the place where is exposed to direct sunlight or near a stove, etc.
- Operate the remote controller, check the indoor unit surely receives the signal, and then install the remote controller. (Wireless type)
- Install the remote controller 1m apart from the devices such as TV or stereo. (Image may be disturbed or noise may be output.) (Wireless type)

4 DRAIN PIPING WORK

CAUTION

- Following the Installation Manual, perform the drain piping work so that water is properly drained, and apply a heat insulation so as not to cause a dew. Inappropriate piping work may result in water leakage in the room and wet of furniture.


Pipe material/Insulator and size

The following materials for piping work and insulating process are procured locally.

Pipe material	Hard vinyl chloride pipe socket for VP25 Hard vinyl chloride pipe VP25 (Nominal diameter Ø32mm)
Insulator	Foamed polyethylene foam, thickness: 10mm or more

REQUIREMENT

- Be sure to perform heat insulation of the drain pipes of the indoor unit.
- Never forget to perform heat insulation of the connecting part with the indoor unit. An incomplete heat insulation causes dewing.
- Set the drain pipe with downward slope (1/100 or more), and do not make swelling or trap on the piping. It may cause an abnormal sound.
- For length of the traversing drain pipe, restrict to 20m or less. In case of a long pipe, provide support brackets with interval of 1.5 to 2m in order to prevent waving.
- Set the collective piping as shown in the right figure.
- Do not mount an air purge pipe, otherwise drain water spouts out resulted in water leak.
- The hard vinyl-chloride pipe cannot be directly connected to the drain pipe connecting port of the indoor unit. For connection with the drain pipe connecting port, be sure to fix the attached flexible hose.
- Adhesive agent cannot be used for the pipe connecting port (hard socket) of the indoor unit. Be sure to use the attached hose band for fixing, otherwise damage or water leakage of the drain pipe connecting port is caused.
- In work, be sure not to apply force to the connecting part with the drain pipe.

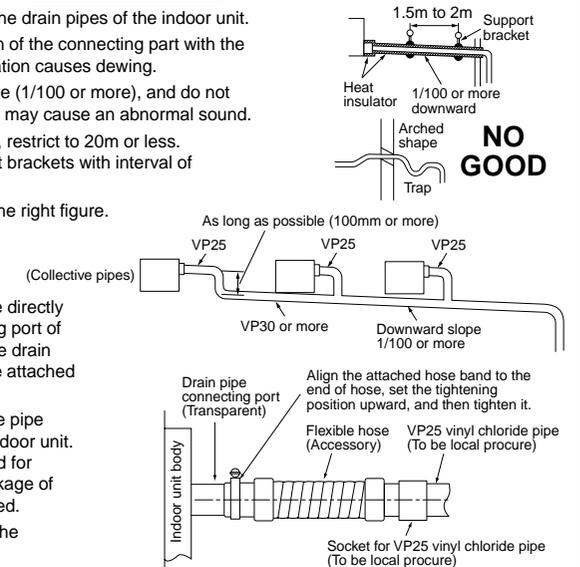


Connection of flexible hose

- Insert the soft socket of the attached flexible hose into the connecting port of the drain pipe until it strikes against the end.
- Align the attached hose band to the end of the pipe connecting port, and then tighten it surely.

REQUIREMENT

- Be sure to fix the soft socket with the attached hose band and set the tightening position at upper side.
- Use the attached flexible hose by bending it with 45° or less so that no breakage or clogging occurs.

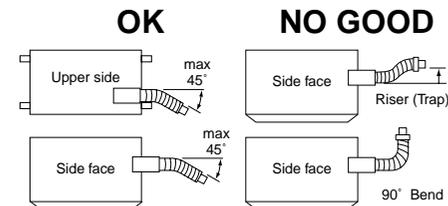

4 DRAIN PIPING WORK

Connection of drain pipe

- Connect the hard socket (local supply) to the hard socket side of the attached flexible hose which has been installed.
- Connect the drain pipes (local supply) successively to the connected the hard socket.


REQUIREMENT

- Using adhesive agent for vinyl chloride, connect the hard vinyl chloride pipes certainly so that water does not leak.
- It requires several times to dry and harden the adhesive agent.
(Refer to Guide Manual of the adhesive agent.)
In this time, be sure not to apply force to the connecting section with the drain pipes.

Drain up

When a downward grading cannot be secured on the drain pipe, a drain-up work is possible.

- Set the height of the drain pipe within 850mm from the underneath of ceiling.
- Draw out the drain pipe within 300mm from the end of the drain pipe connecting port of the indoor unit, and then raise it vertically.
- After the drain pipe has been raised, set a grading so that it is immediately bent downward.

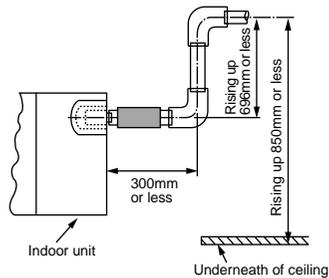

Check the draining


After drain piping work, check that water drain is properly performed and water does not leak from the connecting part of the pipes. In this time, check also there is no abnormal sound of the motor of the drain pump. Be sure to check draining when installed in the heating period.

When the electric work has finished:

- Before installing a panel, pour water as shown in the following figure, check water is drained from the drain pipe connecting port in COOL mode, and then check there is no water leak from the drain pipes.


When the electric work has not finished:

- Pull out the float switch connector (3P: Red) from P.C. board connector (CN34: Red) of the electric parts box. (In this time, be sure to check the power is turned off.)
- Connect the single-phase 220-240V 50Hz (or 220V 60Hz) power to the terminal blocks R (L) and S (N). (Never apply 220-240V to (A), (B), (U1), and (U2), otherwise a trouble of P.C. board occurs.)
- Pour water referring to the figure.
(Amount: 1500cc to 2000cc)
- When the power is turned on, the drain pump motor drives automatically. Check water is drained from the drain pipe connecting port, and then check there is no water leak from the drain pipes.
- After check of draining and water leak, turn off the power supply, attach the float switch connector to the original position (CN34) of P.C. board, and then set the electric parts box as before.

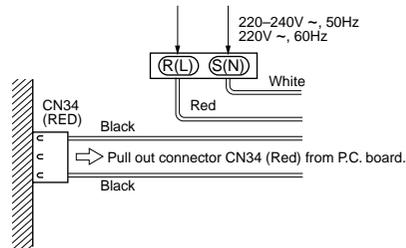

Heat insulating process


- After drain check, using the attached heat insulator for drain connecting section, wrap the flexible hose without clearance from the end of the drain pipe connecting part of the indoor unit.
- Covering the attached heat insulator for drain connecting section, wrap the drain pipe with heat insulator (local supply) without clearance.

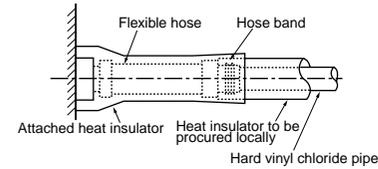

CAUTION

Pour water slowly.

If it is poured urgently, water is spread inside of the indoor unit resulted in a trouble.

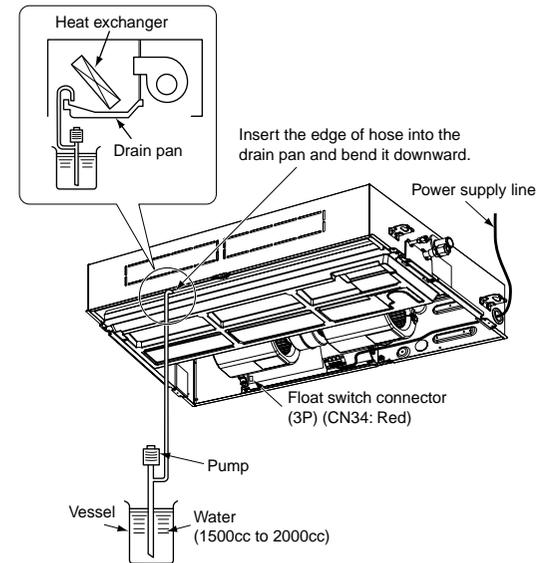

5 REFRIGERANT PIPING

WARNING

- If refrigerant gas has leaked during the installation work, ventilate the room immediately.
- If the leaked refrigerant gas comes in contact with fire, noxious gas may generate.
- After the installation work, confirm that refrigerant gas does not leak.
- If refrigerant gas leaks into the room and flows near a fire source, such as a cooking range, noxious gas may generate.

REQUIREMENT

When the refrigerant pipe is long, set the support brackets to fix the pipe with 2.5 to 3m intervals. If the pipe is not fixed, abnormal sound may generate.
Be sure to use the flare nuts attached to the indoor unit or those fro R410A.

Permissible pipe length and permissible height difference

They are different according to the used outdoor unit. For details, refer to the Installation Manual attached to the outdoor unit.

Piping material and dimensions


Piping material		Phosphor deoxidization joint-less pipe for air conditioner	
Model MMU-		AP015 , AP018	AP024
Pipe size (mm)	Gas side	Ø12.7	Ø15.9
	Liquid side	Ø6.4	Ø9.5

- Use a clean and new pipe, and check that impurity such as dust, oil, moisture, etc. does not adhere in the pipe.

Pipe forming/End positioning


Flaring

1. Cut the pipe with a pipe cutter.



2. Insert a flare nut into the pipe, and flare the pipe.
As the flaring sizes of R410A differ from those of refrigerant R22, the flare tools newly manufactured for R410A are recommended.
However, the conventional tools can be used by adjusting projection margin of the copper pipe.


- Flaring diam. meter size : A (Unit : mm)



Outer diam. of copper pipe	A ^{+0.4} _{-0.4}
	R410A
6.4	9.1
9.5	13.2
12.7	16.6
15.9	19.7

- * In case of flaring for R410A with the conventional flare tool, pull it out approx. 0.5 mm more than that for R22 to adjust to the specified flare size.
The copper pipe gauge is useful for adjusting projection margin size.

- Projection margin in flaring : B (Unit : mm)



Rigid (Clutch type)

Outer diam. of copper pipe	R410A tool used		Conventional tool used	
	R410A	R22	R410A	R22
6.4	0 to 0.5	(Same as left)	1.0 to 1.5	0.5 to 1.0
9.5	0 to 0.5	(Same as left)	1.0 to 1.5	0.5 to 1.0
12.7	0 to 0.5	(Same as left)	1.0 to 1.5	0.5 to 1.0
15.9	0 to 0.5	(Same as left)	1.0 to 1.5	0.5 to 1.0

Imperial (Wing nut type)

Outer diam. of copper pipe	R410A	R22
6.4	1.5 to 2.0	1.0 to 1.5
9.5	1.5 to 2.0	1.0 to 1.5
12.7	2.0 to 2.5	1.5 to 2.0
15.9	2.0 to 2.5	1.5 to 2.0

Connection of refrigerant pipe

Connect all the refrigerant pipes with flare connecting work.

- Since the atmospheric pressure only is sealed as the sealing gas, it is not abnormal that "Pushu..." sound is not heard when the flare nut is removed.
- Be sure to use a double spanner for pipe connecting work of the indoor unit.



Work using double spanner

- Refer to the following table for tightening torque.

Connecting pipe outer dia. (mm)	Tightening torque (N•m)	Re-tightening torque (N•m)
Ø6.4	14 to 18 (1.4 to 1.8 kgf•m)	18 (1.8 kgf•m)
Ø9.5	33 to 42 (3.3 to 4.2 kgf•m)	42 (4.2 kgf•m)
Ø12.7	50 to 62 (5.0 to 6.2 kgf•m)	50 (5.0 kgf•m)
Ø15.9	68 to 82 (6.8 to 8.2 kgf•m)	68 (6.8 kgf•m)

Airtight test/Air purge, etc.

For airtight test, air purge, addition of refrigerant, and gas leak check, follow the Installation Manual attached to the outdoor unit.

REQUIREMENT

Be sure to use the tool such as charge hose exclusive to R410A.

Do not turn on the power until the airtight test and the vacuuming have finished. (If turning on the power, the incorporated PMV is closed fully and the period until the vacuuming finishes elongates.)

Open fully valves of the outdoor unit

Gas leak check

Check with a leak detector or soap water whether gas leaks or not, from the pipe connecting section or cap of the valve.

REQUIREMENT

Use a leak detector manufactured exclusively for HFC refrigerant (R410A, R134a, etc.).


Heat insulating process

Perform heat insulating for pipes at liquid side and gas side separately.
In cooling time, temperature at both liquid and gas sides becomes lower.
Therefore, perform heat insulating process sufficiently to avoid dewing.

- For heat insulator of pipe at gas side, be sure to use one with heat-resisting temp.120°C or more.
- Using the attached heat insulating pipe, perform heat insulating process securely for pipe connecting part of the indoor units without clearance.

REQUIREMENT

Apply the thermal insulation to the pipe connecting section of the indoor unit securely up to the root without exposure of the pipe.
(The pipe exposed to the outside causes water leak.)

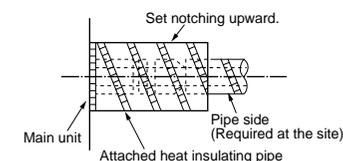

6 ELECTRIC WORK

⚠ WARNING

- Using the specified wires, ensure to connect the wires, and fix wires securely so that the external strength of the wires do not transmit to the connecting part of the terminals.**
Incomplete connection or fixation may cause a fire, etc.
- Be sure to connect earth wire. (Grounding work)**
Do not connect the earth wire to gas pipe, city water pipe, lightning rod, or the earth wire of telephone. Incomplete grounding causes an electric shock.
- For electric work, strictly follow to the Local Regulation in each country and the Installation Manual, and use an exclusive circuit.**
Capacity shortage of power circuit or incomplete installation may cause an electric shock or a fire.

⚠ CAUTION

Be sure to install an earth leakage breaker.
If an earth leakage breaker is not installed, an electric shock may be caused.

REQUIREMENT

- For power supply wiring, strictly conform to the Local Regulation in each country.
- For wiring of power supply of the outdoor units, follow to the Installation Manual of each outdoor unit.
- Never connect 220–240V power to the terminal blocks (A, B, U1, U2, X, Y, etc.) for control wiring. (Otherwise, the system will be failed.)
- Perform the electric wiring so that it does not come to contact with the high-temperature part of the pipe. The coating may melt resulted in an accident.
- After connecting wires to the terminal blocks, provide a trap and fix wires with the wire clamp.
- Store the refrigerant piping line and control wiring line in the same line.
- Do not turn on the power of the indoor unit until vacuuming of the refrigerant pipes completes.

Power supply cord and communication wires specifications

Power supply cord and communication wires are procured locally.
For the power supply specifications, follow to the table below. If capacity is little, it is dangerous because overheat or seizure may be caused.
For specifications of the power capacity of the outdoor unit and the power supply wires, refer to the Installation Manual attached to the outdoor unit.

Indoor unit power supply

- For the power supply of the indoor unit, prepare the exclusive power supply separated from that of the outdoor unit.
- Arrange the power supply, earth leakage breaker, and main switch of the indoor unit connected to the same outdoor unit so that they are commonly used.
- Power supply cord specification : Cable 3-core 2.5mm², in conformity with Design 60245 IEC 57.

Power supply	Power supply	220–240V ~ 50Hz 220V ~ 60Hz	
	Power supply switch/Earth leakage breaker or power supply wiring/fuse rating for indoor units should be selected by the accumulated total current values of the indoor units.		
	Power supply wiring	Below 20m	Twist wire : 2.0 mm ²
Below 50m		Twist wire : 3.5 mm ²	

Central wiring between indoor and outdoor units, Central controller wiring

- 2-core with polarity wires are used for the Central wiring between indoor and outdoor units and Central controller wiring.
- To prevent noise trouble, use 2-core shield wire.
- The length of the communication line means the total length of the inter-unit wire length between indoor and outdoor units added with the central control system wire length.

Communication line	Central wiring between indoor and outdoor units (2 cables)	Wire size	(Up to 1000m) Twist wire : 1.25 mm ² (Up to 2000m) Twist wire : 2.0 mm ²
	Central control line wiring (2 cables)	Wire size	(Up to 1000m) Twist wire : 1.25 mm ² (Up to 2000m) Twist wire : 2.0 mm ²


Remote controller wiring

- 2-core with non-polarity wire is used for wiring of the remote controller wiring and group remote controllers wiring.

Remote controller wiring, remote controller inter-unit wiring	Twist wire: 0.5mm ² to 2.0mm ² × 2	
Total wire length of remote controller wiring and remote controller inter-unit wiring = L + L1 + L2 + ... Ln	In case of wired type only	Up to 500m
	In case of wireless type included	Up to 400m
Total wire length of remote controller inter-unit wiring = L1 + L2 + ... Ln		Up to 200m

⚠ CAUTION

The remote controller wire (Communication line) and AC220–240V wires cannot be parallel to contact each other and cannot be stored in the same conduits. If doing so, a trouble may be caused on the control system due to noise, etc.

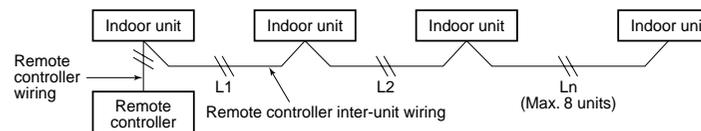


6 ELECTRIC WORK

Cable connection


REQUIREMENT

- As the remote controller cable has no polarity, there is no problem if connections to indoor unit terminal blocks A and B are reversed.
 - Be sure to pass the cable through the bushing of cable connection port of the indoor unit.
 - Keep a margin (approx. 100mm) on a cable to hang down the electric parts box at servicing, etc.
 - The low-voltage circuit is provided for the remote controller. (Do not connect high-voltage circuit.)
- Remove the cover of the electric parts box.
 - Slit film of the bushing attached to the wire inlet, and then pass wires through the slit.
 - * When taking in wires from the rear side, drill a knockout hole and exchange the bushing at side face.
For the hole remained opened by removing the bushing, adhere the attached thermal insulator (without slit) from inside to close the hole.
 - Tighten the screws of the terminal block, and fix the cables with cord clamp attached to the electric parts box. (Do not apply tension to the connecting section of the terminal block.)
 - Mount the cover of the electric parts box without pinching cables.
 - Using the attached heat insulator for sealing of cable connecting port, seal the cable connecting port. (Otherwise dewing may be caused.)

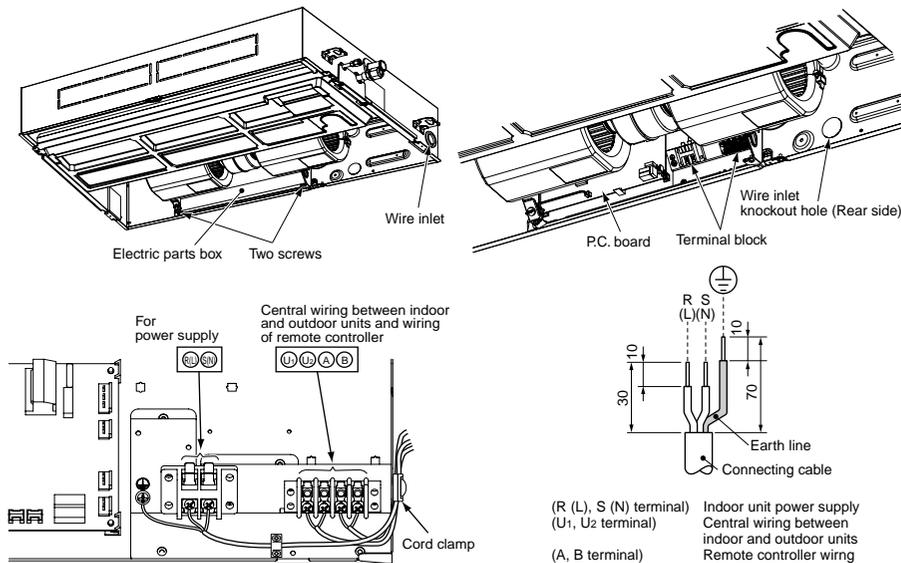

Treating of wiring connecting port

- As shown on the figure, seal the wire connecting port with heat insulator. If sealing is insufficient, dewing is caused in the electric parts box.

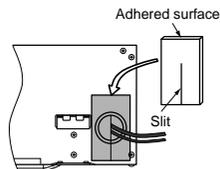


<Seal at wire inlet>

Remote controller wiring


- As the remote controller wire has no polarity, there is no problem if connections to indoor unit terminal blocks A and B are reversed.

<Wiring diagram>

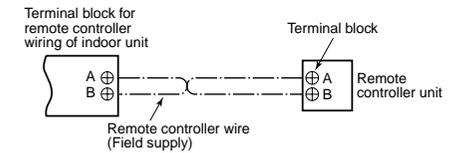

Wiring between indoor and outdoor units

<Wiring example>

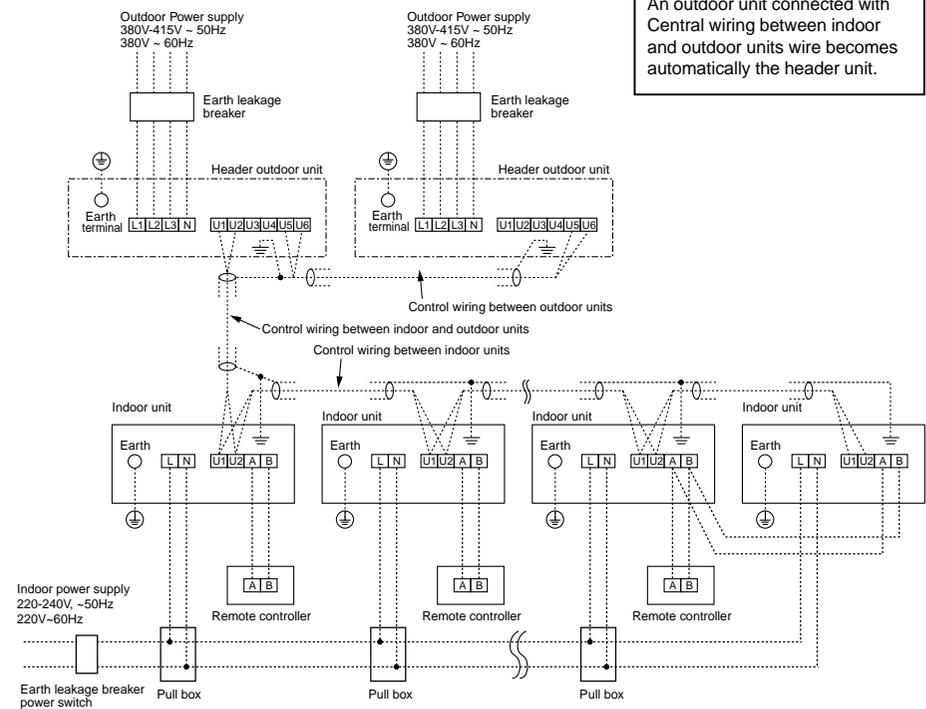

NOTE

An outdoor unit connected with Central wiring between indoor and outdoor units wire becomes automatically the header unit.

Address setup

Set up the addresses according to the Installation Manual attached to the outdoor unit.

Wiring on the ceiling panel

According to the Installation Manual of the ceiling panel, connect the connector (5P: White) of the ceiling panel to the connector (CN33: White) on P.C. board of the electric parts box.

7 APPLICABLE CONTROLS

NOTIFICATION

When using the equipment at the first time, it will take a lot of time that the remote controller accepts an operation after power was on. However, it is not a trouble.

- **Automatic address**
 - While automatic addressing, the operation cannot be performed on the remote controller.
 - For automatic addressing, Max. 10 minutes (generally, approx. 5 minutes) are required.
- **When power will be turned on after finish of automatic addressing;**
 - It will require Max. 10 minutes (generally, approx. 3 minutes) that outdoor unit starts operation after power was on.

As all have been set to [Standard] at the shipment, change the setup of the indoor unit if necessary.


To change the setup, use the main remote controller (wired remote controller).




* The setup change for wireless remote controller, sub remote controller, or remote controller-less system (Central control remote controller only is provided.) is impossible. In these cases, prepare and mount a separate main remote controller.

Exchange of applicable control setup

Basic operation procedure for setup exchange

Change the setup while operation of the equipment stops.
(Be sure to stop the operation of a set.)

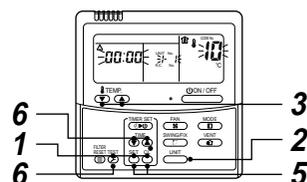

Procedure	Description
1	<p>When pushing SET, CL, and TEST buttons simultaneously for 4 seconds or more, after a while, the display part flashes as shown in the figure.</p> <p>Check that the displayed item code is [10].</p> <ul style="list-style-type: none"> • If the item code indicates other than [10], push TEST button to erase the display, and then retry the operation from the first step. (For some time after TEST button has been pushed, the operation of the remote controller cannot be accepted.) <p>(In a group control, the firstly displayed indoor unit No. becomes the header unit.)</p>  <p>(* The display changes according to the indoor unit model.)</p>
2	<p>Every pushing UNIT button, the indoor unit No. in the group control is displayed successively.</p> <p>Select an indoor unit of which setup to be changed.</p> <p>In this time, the position of the indoor unit of which setup to be changed can be confirmed because the fan and the flap of the selected indoor unit work.</p>
3	<p>Using DOWN, UP buttons of set temperature, specify the item code [**].</p> 
4	<p>Using DOWN, UP buttons of timer time, select set data [****].</p> 
5	<p>Push SET button. In this time, if the display changes from flashing to lighting, the setup completes.</p> <ul style="list-style-type: none"> • To change the setup of an indoor unit other than the selected one, start operation from Procedure 2. • To change the setup of another setup in the selected indoor unit, start operation from Procedure 3. <p>Pushing CL button clears the set up contents which have been already set. In this case, retry from Procedure 2.</p>
6	<p>When the setup finished, push TEST button. (The setup is determined.)</p> <p>Pushing TEST button deletes the display and returns the status to normal stop status.</p> <p>(For some time after TEST button has been pushed, the operation of the remote controller cannot be accepted.)</p> 

In case of high ceiling installation

If the ceiling height exceeds 3.5m (3.8m for AP024 type), adjustment of the air volume is necessary. Set up the high ceiling.

- Work according to the standard operation procedure (1 → 2 → 3 → 4 → 5 → 6).
- For Item code in Procedure 3, specify [5d].
- Select [Setup data] in Procedure 4 from "List of installable ceiling height" of this manual.

In case of no remote controller (Group control)

To set up the high ceiling, use Dip switch on the wireless sensor board for selection.


For details, refer to the Manual for wireless remote controller kit. As shown in the following table, switching short plug on the micro computer P.C. board of the indoor unit is also available for selection.

* However if it has been selected once, 0001 and 0003 can be freely set up, but it is necessary for return to 0000 to switch the short plug to standard (at shipment) position and to rewrite data to setup data 0000 from the wired remote controller sold separately.

- Selection is performed by switching short plug on the microcomputer board of indoor unit.

- Position of short plug (CN112, CN111, CN110 from the left)

Short plug position	Set data	High ceiling MMU-	
		AP015 AP018	AP024
Short Open	0000	3.5 m	3.8 m
	0001	4.0 m	
	0003	4.2 m	

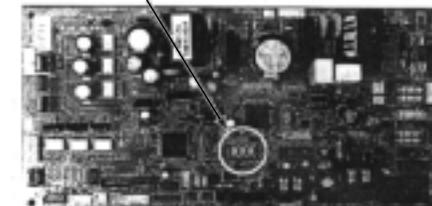

7 APPLICABLE CONTROLS

Change of lighting term of filter sign

According to the installation condition, the lighting term of the filter sign (Notification of filter cleaning) can be changed.

Follow to the basic operation procedure (1 → 2 → 3 → 4 → 5 → 6).

- For the item code in Procedure 3, specify [01].
- For the [Set data] in Procedure 4, select the setup data of filter sign lighting term from the following table.

Setup data	Filter sign lighting term
0000	None
0001	150H
0002	2500H (At shipment from factory)
0003	5000H
0004	10000H

To secure better effect of heating

When it is difficult to obtain satisfactory heating due to installation place of the indoor unit or structure of the room, the detection temperature of heating can be raised. Also use a circulator, etc. to circulate heat air near the ceiling.

Follow to the basic operation procedure (1 → 2 → 3 → 4 → 5 → 6).

- For the item code in Procedure 3, specify [06].
- For the set data in Procedure 4, select the setup data of shift value of detection temperature to be set up from the table below.

Setup data	Detection temp shift value
0000	No shift
0001	+1°C
0002	+2°C (At shipment from factory)
0003	+3°C
0004	+4°C
0005	+5°C
0006	+6°C

Group control

In a group control, a remote controller can control up to maximum 8 units.

- For cabling procedure and cables of the individual line (Identical refrigerant line) system, refer to "Electric work" in this Manual.
- Cabling between indoor units in a group is performed in the following procedure.

Connect the indoor units by connecting the remote controller inter-unit cables from the remote controller terminal blocks (A, B) of the indoor unit connected with a remote controller to the remote controller terminal blocks (A, B) of the other indoor unit. (No polarity)

- For address setup, refer to the Installation Manual attached to the outdoor unit.

8 TEST RUN

Before test operation

- Before turning on the power supply, carry out the following items.
 - Using 500V-megger, check there is 1MΩ or more between the terminal block of the power supply and the earth. If 1MΩ or less is detected, do not run the unit.
 - Check that all the valves of the outdoor unit are fully opened.
- Never push the electromagnetic contactor to carry out a forced test operation. (It is very dangerous because a protective device does not work.)

WARNING

To protect the compressor at starting time, keep power-ON condition before 12 hours or more.

How to execute test operation


- To carry out a fan operation in a single indoor unit, turn off the power once, short CN72 on P.C. board, and then turn on the power again. (Start the unit in FAN mode.) In this case, do not forget to clear short-circuit of CN72 after test operation.
- Using the remote controller, check the operation in the usual operation. For the operation procedure, refer to the attached Owner's Manual.

A forced test operation can be executed in the following procedure under condition of thermo-OFF of room temperature.

In order to prevent a serial operation, the forced test operation is released after 60 minutes and returns to the usual operation.

NOTE

Do not use a forced operation in cases other than test operation because it applies an excessive load to the air conditioner.

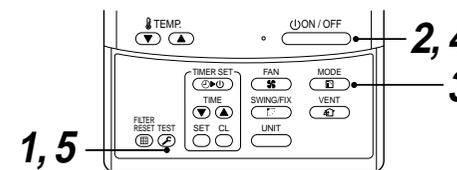


In case of wired remote controller

Procedure	Description
1	Keep TEST button pushed for 4 seconds or more. [TEST] is displayed on the display part and the selection of mode in the test mode is permitted.
2	Push ON/OFF button.
3	Using MODE button, select the operation mode, [COOL] or [HEAT]. <ul style="list-style-type: none"> Do not run the air conditioner in a mode other than [COOL] or [HEAT]. The temperature controlling function does not work during test operation. The detection of error is performed as usual.
4	After the test operation, push ON/OFF button to stop the operation. (Display part is same as procedure 1)
5	Push TEST button to cancel (release from) the test operation mode. ([TEST] disappears on the display part and the status returns to a normal stop status.)

8 TEST RUN

In case of wireless remote controller

Procedure	Description
1	Remove a small screw which fixes the nameplate of the receiver unit. Remove the nameplate of the sensor section by inserting a minus screwdriver, etc into the notch at the bottom of the plate, and set the Dip switch to [TEST RUN ON].
2	Execute a test operation with button on the wireless remote controller. <ul style="list-style-type: none"> • LED flash during test operation. • Under status of [TEST RUN ON], the temperature adjustment from the wireless remote controller is invalid. Do not use this method in the operation other than test operation because the equipment is damaged.
3	Use either COOL or HEAT operation mode for a test operation. * The outdoor unit does not operate approx. 3 minutes after power-ON and operation stop.
4	After the test operation finished, stop the air conditioner from the wireless remote controller, and return Dip switch of the receiver section as before. (A 60-minutes timer clearing function is attached to the receiver section in order to prevent a continuous test operation.)

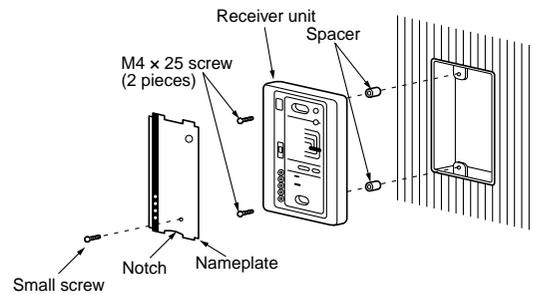


9 TROUBLESHOOTING

Confirmation and check

When a trouble occurred in the air conditioner, the check code and the indoor unit No. appear on the display part of the remote controller.


The check code is only displayed during the operation.
If the display disappears, operate the air conditioner according to the following "Confirmation of error history" for confirmation.

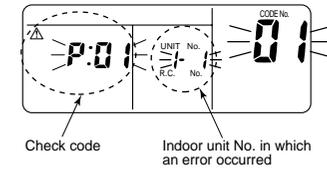

Confirmation of error history

When a trouble occurred on the air conditioner, the error history can be confirmed with the following procedure.
(The error history is stored in memory up to 4 errors.)

This history can be confirmed from either operating status or stop status.

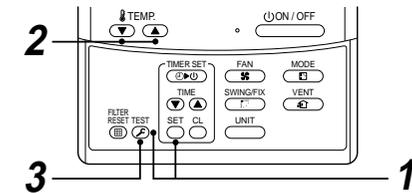

Procedure	Description
1	When pushing and buttons simultaneously for 4 seconds or more, the right display appears. If [Service Check] is displayed, the mode enters in the error history mode. <ul style="list-style-type: none"> • [01: Order of error history] is displayed in CODE No. window. • [Check Code] is displayed in CHECK window. • [Indoor unit address in which an error occurred] is displayed in UNIT No.
2	Every pushing , buttons, the error history stored in the memory is displayed in order. The numbers in CODE No. indicates CODE No. [01] (Latest) → [04] (Oldest). CAUTION Do not push button because all the error history of the indoor unit will be deleted.
3	After confirmation, push button to return to the usual display.

9 TROUBLESHOOTING

Check method

On the remote controller (Main remote controller, Central control remote controller) and the interface P.C. board of the outdoor unit (I/F), a check display LCD (Remote controller) or 7-segment display (on the outdoor interface P.C. board) to display the operation is provided. Therefore the operation status can be known. Using this self-diagnosis function, a trouble or position with error of the air conditioner can be found as shown in the table below.

Check code list

The following list shows each check code. Find the check contents from the list according to part to be checked.

- In case of check from indoor remote controller: See "Main remote controller display" in the list.
- In case of check from outdoor unit: See "Outdoor 7-segment display" in the list.
- In case of check from AI-NET central control remote controller: See "AI-NET central control display" in the list.
- In case of check from indoor unit with wireless remote controller: See "Sensor block display of receiving unit" in the list.

Terminology

AI-NET : Artificial Intelligence.
 IPDU : Intelligent Power Drive Unit
 ○ : Lighting, □ : Flashing, ● : Goes off
 ALT. : Flashing is alternately when there are two flashing LED.
 SIM : Simultaneous flashing when there are two flashing LED.

Main remote controller display	Check code		Wireless remote controller				Check code name	Judging device
	Outdoor 7-segment display	AI-NET central control display	Sensor block display of receiving unit					
			Operation	Timer	Ready	Flash		
E01	—	—	□	●	●	—	Communication error between indoor and remote controller (Detected at remote controller side)	Remote controller
E02	—	—	□	●	●	—	Remote controller transmission error	Remote controller
E03	—	—	97	□	●	●	Communication error between indoor and remote controller (Detected at indoor side)	Indoor
E04	—	—	04	●	●	□	Communication circuit error between indoor/outdoor (Detected at indoor side)	Indoor
E06	E06	No. of indoor units in which sensor has been normally received	04	●	●	□	Decrease of No. of indoor units	I/F
—	E07	—	—	●	●	□	Communication circuit error between indoor/outdoor (Detected at outdoor side)	I/F
E08	E08	Duplicated indoor addresses	96	□	●	●	Duplicated indoor addresses	Indoor / I/F
E09	—	—	99	□	●	●	Duplicated main remote controllers	Remote controller
E10	—	—	CF	□	●	●	Communication error between indoor MCU	Indoor
E12	E12	01: Indoor/Outdoor communication 02: Communication between outdoor units	42	□	●	●	Automatic address start error	I/F
E15	E15	—	42	●	●	□	Indoor is nothing during automatic addressing	I/F
E16	E16	00: Capacity over 01 ~: No. of connected units	89	●	●	□	Capacity over / No. of connected indoor units	I/F
E18	—	—	97, 99	□	●	●	Communication error between indoor units	Indoor
E19	E19	00: Header is nothing 02: Two or more header units	96	●	●	□	Outdoor header units quantity error	I/F
E20	E20	01: Outdoor of other line connected 02: Indoor of other line connected	42	●	●	□	Other line connected during automatic address	I/F
E23	E23	—	15	●	●	□	Sending error in communication between outdoor units	I/F
E25	E25	—	15	●	●	□	Duplicated follower outdoor addresses	I/F
E26	E26	No. of outdoor units which received signal normally	15	●	●	□	Decrease of No. of connected outdoor units	I/F
E28	E28	0: Detected outdoor unit number	d2	●	●	□	Follower outdoor unit error	I/F
E31	E31	01: IPDU1 error 02: IPDU2 error 03: IPDU1, 2 error 04: Fan IPDU error 05: IPDU + Fan IPDU error 06: IPDU2 + Fan IPDU error 07: All IPDU error	CF	●	●	□	IPDU communication error	I/F

Check code			Wireless remote controller				Check code name	Judging device	
Main remote controller display	Outdoor 7-segment display	AI-NET central control display	Sensor block display of receiving unit						
	Auxiliary code		Operation	Timer	Ready	Flash			
F01	—	—	0F	□	□	●	ALT	Indoor TCJ sensor error	Indoor
F02	—	—	0d	□	□	●	ALT	Indoor TC2 sensor error	Indoor
F03	—	—	93	□	□	●	ALT	Indoor TC1 sensor error	Indoor
F04	F04	—	19	□	□	○	ALT	TD1 sensor error	I/F
F05	F05	—	A1	□	□	○	ALT	TD2 sensor error	I/F
F06	F06	—	18	□	□	○	ALT	TE1 sensor error	I/F
F07	F07	—	18	□	□	○	ALT	TL sensor error	I/F
F08	F08	—	1b	□	□	○	ALT	TO sensor error	I/F
F10	—	—	0C	□	□	●	ALT	Indoor TA sensor error	Indoor
F12	F12	—	A2	□	□	○	ALT	TS1 sensor error	I/F
F13	F13	01: Comp. 1 side 02: Comp. 2 side	43	□	□	○	ALT	TH sensor error	IPDU
F15	F15	—	18	□	□	○	ALT	Outdoor temp. sensor miscabling (TE, TL)	I/F
F16	F16	—	43	□	□	○	ALT	Outdoor pressure sensor miscabling (Pd, Ps)	I/F
F23	F23	—	43	□	□	○	ALT	Ps sensor error	I/F
F24	F24	—	43	□	□	○	ALT	Pd sensor error	I/F
F29	—	—	12	□	□	○	SIM	Indoor other error	Indoor
F31	F31	—	1C	□	□	○	SIM	Indoor EEPROM error	I/F
H01	H01	01: Comp. 1 side 02: Comp. 2 side	IF	●	□	●	—	Compressor break down	IPDU
H02	H02	01: Comp. 1 side 02: Comp. 2 side	1d	●	□	●	—	Magnet switch error Overcurrent relay operation Compressor trouble (lock)	MG-SW Overcurrent relay IPDU
H03	H03	01: Comp. 1 side 02: Comp. 2 side	17	●	□	●	—	Current detect circuit system error	IPDU
H04	H04	—	44	●	□	●	—	Comp 1 case thermo operation	I/F
H06	H06	—	20	●	□	●	—	Low pressure protective operation	I/F
H07	H07	—	d7	●	□	●	—	Oil level down detective protection	I/F
H08	H08	01: TK1 sensor error 02: TK2 sensor error 03: TK3 sensor error 04: TK4 sensor error	d4	●	□	●	—	Oil level detective temp sensor error	I/F
H14	H14	—	44	●	□	●	—	Comp 2 case thermo operation	I/F
H16	H16	01: TK1 oil circuit system error 02: TK2 oil circuit system error 03: TK3 oil circuit system error 04: TK4 oil circuit system error	d7	●	□	●	—	Oil level detective circuit error Magnet switch error Overcurrent relay operation	I/F MG-SW Overcurrent relay
L03	—	—	96	□	●	□	SIM	Indoor center unit duplicated	Indoor
L04	L04	—	96	□	○	□	SIM	Outdoor line address duplicated	I/F
L05	—	—	96	□	●	□	SIM	Duplicated indoor units with priority (Displayed in indoor unit with priority)	I/F
L06	L06	No. of indoor units with priority	96	□	●	□	SIM	Duplicated indoor units with priority (Displayed in unit other than indoor unit with priority)	I/F
L07	—	—	99	□	●	□	SIM	Group line in individual indoor unit	Indoor
L08	L08	—	99	□	●	□	SIM	Indoor group/Address unset	Indoor, I/F
L09	—	—	46	□	●	□	SIM	Indoor capacity unset	Indoor
L10	L10	—	88	□	○	□	SIM	Outdoor capacity unset	I/F
L20	L20	—	98	□	○	□	SIM	Duplicated central control addresses	AI-NET, Indoor
L28	L28	—	46	□	○	□	SIM	Over No. of connected outdoor units	I/F
L29	L29	01: IPDU1 error 02: IPDU2 error 03: IPDU3 error 04: Fan IPDU error 05: IPDU1 + Fan IPDU error 06: IPDU2 + Fan IPDU error 07: All IPDU error	CF	□	○	□	SIM	No. of IPDU error	I/F
L30	L30	Detected indoor address	b6	□	○	□	SIM	Indoor outside interlock	Indoor
—	L31	—	—	—	—	—	—	Extended I/C error	I/F

9 TROUBLESHOOTING

Check code			Wireless remote controller			Check code name	Judging device		
Main remote controller display	Outdoor 7-segment display	AI-NET central control display	Sensor block display of receiving unit						
		Auxiliary code		Operation	Timer	Ready	Flash		
P01	—	—	11	●	□	□	ALT	Indoor fan motor error	Indoor
P03	P03	—	1E	□	●	□	ALT	Discharge temp. TD1 error	I/F
P04	P04	01: Comp. 1 side 02: Comp. 2 side	21	□	●	□	ALT	High-pressure SW system operation	IPDU
P05	P05	01: Phase-missing detection 02: Phase error	AF	□	●	□	ALT	Phase-missing detection /Phase error	I/F
P07	P07	01: Comp. 1 side 02: Comp. 2 side	IC	□	●	□	ALT	Heat sink overheat error	IPDU, I/F
P10	P10	Detected indoor address	Ob	●	□	□	ALT	Indoor overflow error	Indoor
P12	—	—	11	●	□	□	ALT	Indoor fan motor error	Indoor
P13	P13	—	47	●	□	□	ALT	Outdoor liquid back detection error	I/F
P15	P15	01: TS condition 02: TD condition	AE	□	●	□	ALT	Gas leak detection	I/F
P17	P17	—	bb	□	●	□	ALT	Discharge temp. TD2 error	I/F
P19	P19	Detected outdoor unit number	08	□	●	□	ALT	4-way valve inverse error	I/F
P20	P20	—	22	□	●	□	ALT	High-pressure protective operation	I/F
P22	P22	0 : IGBT short 1 : Fan motor position detective circuit error 3 : Fan motor trouble C : TH sensor temp. error (Heat sink overheat) D : TH sensor error E : Vdc output error	1A	□	●	□	ALT	Outdoor fan IPDU error	IPDU
P26	P26	01: Comp. 1 side 02: Comp. 2 side	14	□	●	□	ALT	G-TR short protection error	IPDU
P29	P29	01: Comp. 1 side 02: Comp. 2 side	16	□	●	□	ALT	Comp position detective circuit system error	IPDU
P31	P31	—	47	□	●	□	ALT	Other indoor unit error (Group terminal unit error)	Indoor
—	—	—	b7	By alarm device	—	—	ALT	Error in indoor group	AI-NET
—	—	—	97	—	—	—	—	AI-NET communication system error	AI-NET
—	—	—	99	—	—	—	—	Duplicated network adaptors	AI-NET

New check code

1. Difference between the new check code and the current system

The displaying method of the check code changes in this model and after.

	Check code in current system	New check code
Used characters	Hexadecimal notation, 2 digits	Alphabet + Decimal notation, 2 digits
Characteristics of code classification	Few classification of communication/incorrect setup system	Many classification of communication/incorrect setup system
Block display	Indoor P.C. board, Outdoor P.C. board, Cycle, Communication	Communication/incorrect setup (4 ways), Indoor protection, Outdoor protection, Sensor, Compressor protection, etc.

<Display on wired remote controller>

- [△] goes on.
- [UNIT No.] + Check code + Operation lamp (Green) flash

<Display on sensor part of wireless>

- Block display of combination of [☺] [☹] [☹]

<Display on indicator on wireless remote controller receiver part>

- Unit No. and check code are displayed.
- In a case of error with auxiliary code, check code and auxiliary code are displayed alternately.

Display	Classification
A	Unused
C	Central control system error
E	Communication system error
F	Each sensor error (Failure)
H	Compressor protective system error
J	Unused
L	Setup error, Other errors
P	Protective device operation

2. Special mention


- 1) If this model is connected to AI-NET by network adaptor, the different check codes are displayed on the main remote controller (New check code display on new remote controller) and AI-NET central control remote controller (Current system check code display on the current system central control remote controller).
- 2) The check code is displayed only while the air conditioner is operating (Remote controller start button ON). When the air conditioner stops and the error is cleared, the check code display on the remote controller also disappears. However, if the error continues after stop of the operation, the check code is immediately displayed with restarting.

Error detected by TCC-LINK central control device

Check code			Wireless remote controller			Check code name	Judging device		
Central control device indication	Outdoor 7-segment display	AI-NET central control display	Sensor block display of receiving unit						
		Auxiliary code		Operation	Timer	Ready	Flash		
C05	—	—	—	—	—	—	—	Sending error in TCC-LINK central control device	TCC-LINK
C06	—	—	—	—	—	—	—	Receiving error in TCC-LINK central control device	TCC-LINK
C12	—	—	—	—	—	—	—	Batch alarm of general-purpose equipment control interface	General-purpose equipment I/F
P30	Differs according to error contents of unit with occurrence of alarm			Group control branching unit error			—	—	TCC-LINK
—	(L20 is displayed.)			Duplicated central control addresses			—	—	—

Terminology

TCC-LINK : TOSHIBA Carriea Comication Link.

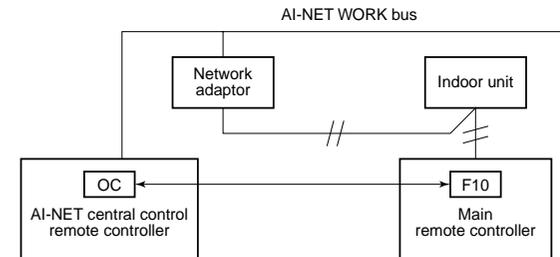

10 MAINTENANCE

For maintenance, be sure to turn off the main power switch.


CAUTION

Do not handle the buttons with wet hands; otherwise an electric shock may be caused.

<Daily maintenance>


Cleaning of air filter

- [FILTER] is displayed on the remote controller, maintain the air filter.
- Clogging of the air filter decreases the cooling/heating effect.
- After cleaning, push []. [FILTER] display disappears.

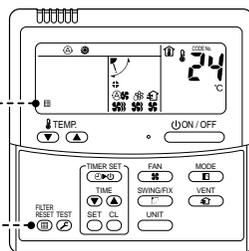


1 Open the suction grille.

- Holding "knobs" of the suction grille, push the grille backward (OPEN) and open the grille quietly.

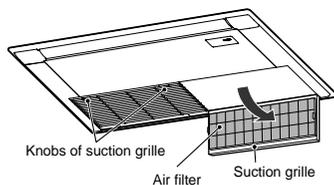


2 Take out air filter.

- Push hooks of air filter and take out claw of the suction grille. Pull the air filter toward you to take out the air filter.

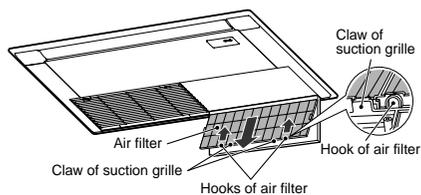

3 Vacuum dust using a cleaner or clean the air filter with water.

- When dirt is heavy, it is effective to wash the air filter with neutral detergent dissolved in tepid water or cool water.

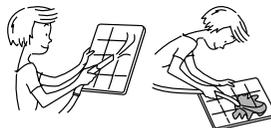


- After cleaning with water, dry the air filter completely in the shade.

4 Install the air filter.

5 Close the suction grille.


- Close the suction grille, slide "knobs" toward you, and fix the grille securely.

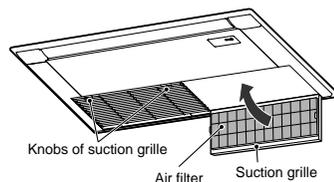

6 Push the [].

- [FILTER] display disappears.

4. REFRIGERATING CYCLE DIAGRAM



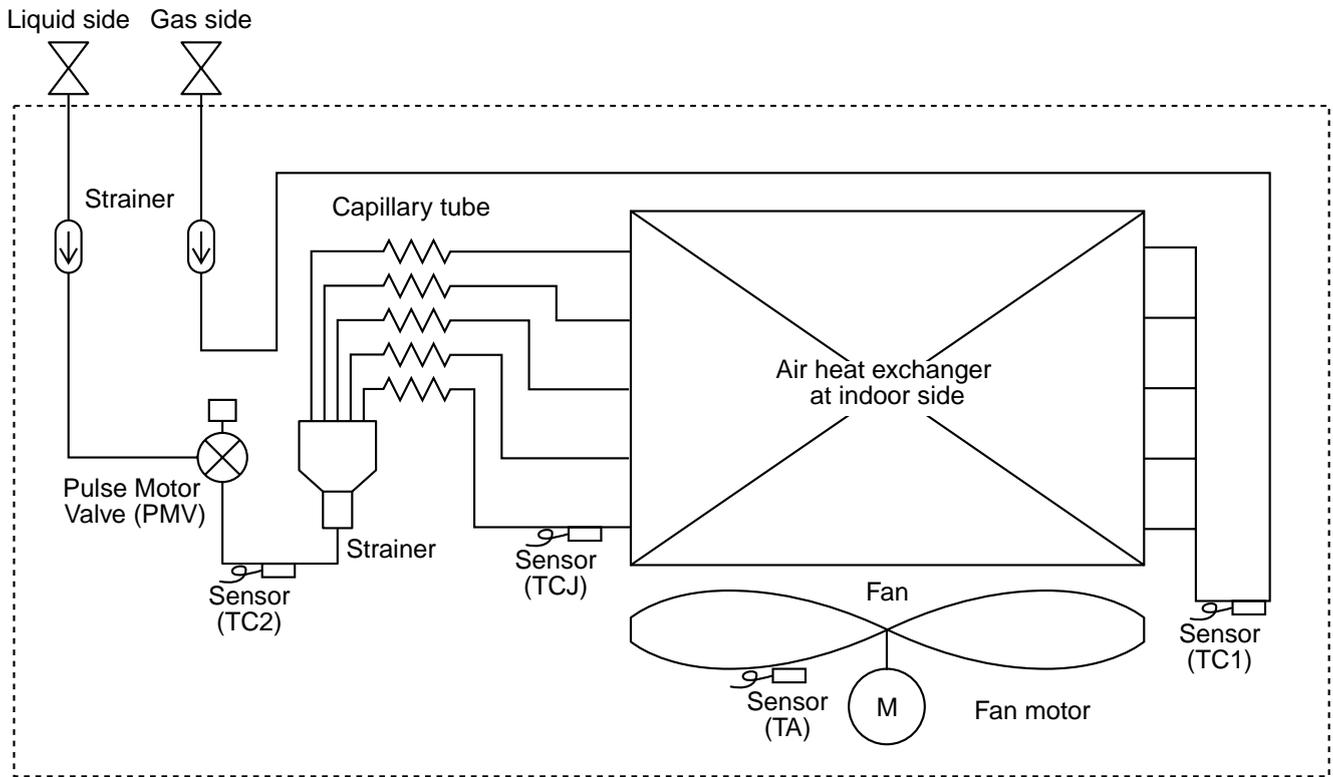


Functional part name		Functional outline
Pulse Motor Valve	PMV	(Connector CN082 (6P): Blue) 1) Controls super heat in cooling operation 2) Controls under cool in heating operation 3) Recovers refrigerant oil in cooling operation 4) Recovers refrigerant oil in heating operation
Temp. sensor	1. TA	(Connector CN104 (2P): Yellow) 1) Detects indoor suction temperature
	2. TC1	(Connector CN100 (3P): Brown) 1) Controls PMV super heat in cooling operation
	3. TC2	(Connector CN101 (2P): Black) 1) Controls PMV under cool in heating operation
	4. TCJ	(Connector CN102 (2P): Red) 1) Controls PMV super heat in cooling operation

5. CONTROL OUTLINE

5-1. Control Specifications

No.	Item	Outline of specifications	Remarks																					
1	Power supply is reset.	<p>(1) Distinction of outdoor unit When the power supply is reset, the outdoor units are distinguished, and control is exchanged according to the distinctive results.</p> <p>(2) Check code clear When the power supply is reset, the check code is also reset once. If an abnormal status which the check code appears after Start/Stop button of the remote controller has been pushed continues, the check code is displayed again on the remote controller.</p>																						
2	Operation select	<p>(1) Based upon the operation select command from the remote controller or central controller, the operation mode is selected.</p> <table border="1" style="margin-left: 20px;"> <thead> <tr> <th>Remote controller command</th> <th>Control outline</th> </tr> </thead> <tbody> <tr> <td>STOP</td> <td>Stops air conditioner.</td> </tr> <tr> <td>FAN</td> <td>Fan operation</td> </tr> <tr> <td>COOL</td> <td>Cooling operation</td> </tr> <tr> <td>DRY</td> <td>Dry operation *</td> </tr> <tr> <td>HEAT</td> <td>Heating operation</td> </tr> <tr> <td>COOL/HEAT AUTO</td> <td>COOL/HEAT AUTO operation</td> </tr> </tbody> </table> <p>Heating operation is automatically selected with difference between setup temperature and room temperature.</p>	Remote controller command	Control outline	STOP	Stops air conditioner.	FAN	Fan operation	COOL	Cooling operation	DRY	Dry operation *	HEAT	Heating operation	COOL/HEAT AUTO	COOL/HEAT AUTO operation	* Concealed Duct High Static Pressure type air conditioner cannot operate for drying.							
Remote controller command	Control outline																							
STOP	Stops air conditioner.																							
FAN	Fan operation																							
COOL	Cooling operation																							
DRY	Dry operation *																							
HEAT	Heating operation																							
COOL/HEAT AUTO	COOL/HEAT AUTO operation																							
3	Room temp. control	<p>(1) Adjustment range Set temperature on remote controller (°C)</p> <table border="1" style="margin-left: 20px;"> <thead> <tr> <th></th> <th>Allcooling</th> <th>All heating</th> </tr> </thead> <tbody> <tr> <td>Wired type</td> <td>18 to 29°C</td> <td>18 to 29°C</td> </tr> <tr> <td>Wireless type</td> <td>18 to 30°C</td> <td>16 to 30°C</td> </tr> </tbody> </table> <p>(2) From the item code 06, the setup temperature in heating operation can be corrected.</p> <table border="1" style="margin-left: 20px;"> <tbody> <tr> <td>Setup data</td> <td>0</td> <td>2</td> <td>4</td> <td>6</td> </tr> <tr> <td>Setup temp. correction</td> <td>+0°C</td> <td>+2°C</td> <td>+4°C</td> <td>+6°C</td> </tr> </tbody> </table> <p>Setup at shipment</p> <table border="1" style="margin-left: 20px;"> <tbody> <tr> <td>Setup data</td> <td>2</td> </tr> </tbody> </table>		Allcooling	All heating	Wired type	18 to 29°C	18 to 29°C	Wireless type	18 to 30°C	16 to 30°C	Setup data	0	2	4	6	Setup temp. correction	+0°C	+2°C	+4°C	+6°C	Setup data	2	Heating suction temperature shift
	Allcooling	All heating																						
Wired type	18 to 29°C	18 to 29°C																						
Wireless type	18 to 30°C	16 to 30°C																						
Setup data	0	2	4	6																				
Setup temp. correction	+0°C	+2°C	+4°C	+6°C																				
Setup data	2																							
4	Automatic capacity control	<p>(1) Based upon difference between Ta and Ts, the operation frequency is indicated to the outdoor unit.</p>																						
5	Air volume control	<p>(1) By the command from the remote controller, "HIGH (HH)", "MED (H)", or "LOW (L)" "AUTO" operation is executed.</p> <p>(2) While air speed is in AUTO mode, the air speed is changed according to the difference between Ta and Ts.</p>	HH > H+ > H > L+ > L > LL																					

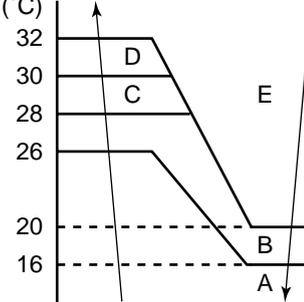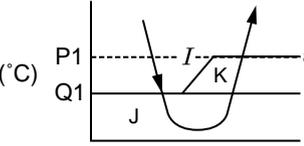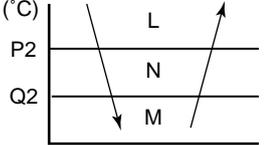No.	Item	Outline of specifications	Remarks												
6	Prevention of cold air discharge	<p>(1) In all heating operation, the upper limit of the fan tap is set by one with higher temperature of TC2 sensor and TCJ sensor.</p> <ul style="list-style-type: none"> When B zone has continued for 6 minutes, the operation shifts to C zone. In defrost time, the control point is set to +6°C.  <p>A zone: OFF B zone: Over 26°C, below 28°C, LOW C zone: Over 28°C, below 30°C, MED D zone: Over 30°C, below 32°C, HIGH E zone: Ultra HIGH</p>	<ul style="list-style-type: none"> In D and E zones, priority is given to remote controller air speed setup. In A and B zones, "⊗" is displayed. 												
7	Freeze prevention control (Low temp. release)	<p>(1) In all cooling operation, the air conditioner operates as described below based upon temp. detected by TC1, TC2 and TCJ sensors.</p> <p>To prevent the heat exchanger from freezing, the operation stops.</p> <ul style="list-style-type: none"> When "J" zone is detected for 5 minutes, the command frequency becomes "S0" to the outdoor unit. In "K" zone, the timer count is interrupted, and held. When "I" zone is detected, the timer is cleared and the operation returns to the normal operation. When the command frequency became S0 with continuation of "J" zone, operation of the the indoor fan in LOW mode until it reaches the "I" zone. <p>It is reset when the following conditions are satisfied.</p> <p>Reset conditions</p> <ol style="list-style-type: none"> TC1 ≥ 12°C and TC2 ≥ 12°C and TCJ ≥ 12°C 30 minutes passed after stop.  <table border="1" data-bbox="861 1288 1085 1422"> <tr> <td></td> <td>TC1</td> </tr> <tr> <td>P1</td> <td>10°C (5°C)</td> </tr> <tr> <td>Q1</td> <td>0°C</td> </tr> </table> <p>(2) In all cooling operation, the air conditioner operates as described below based upon temp. detected by TC2 and TCJ sensors.</p> <ul style="list-style-type: none"> When "M" zone is detected for 45 minutes, the command frequency becomes "S0" to the outdoor unit. In "N" zone, the timer count is interrupted and held. When shifting to "M" zone again, the timer count restarts and continues. If "L" zone is detected, the timer is cleared and the operation returns to normal operation. <p>Reset conditions</p> <ol style="list-style-type: none"> TC1 ≥ 12°C and TC2 ≥ 12°C and TCJ ≥ 12°C 30 minutes passed after stop.  <table border="1" data-bbox="861 1915 1085 2049"> <tr> <td></td> <td>TC2, TCJ</td> </tr> <tr> <td>P2</td> <td>5°C</td> </tr> <tr> <td>Q2</td> <td>-2.0°C</td> </tr> </table>		TC1	P1	10°C (5°C)	Q1	0°C		TC2, TCJ	P2	5°C	Q2	-2.0°C	<p>* In a Model without TC2, TC2 is not judged.</p>
	TC1														
P1	10°C (5°C)														
Q1	0°C														
	TC2, TCJ														
P2	5°C														
Q2	-2.0°C														


No.	Item	Outline of specifications	Remarks
8	Recovery control for cooling refrigerant and oil	<p>(1) The indoor unit which stops operation, thermostat is OFF, or operates in FAN mode opens PMV of the indoor unit by the specified opening degree when cooling refrigerant or oil recovery signal is received from the outdoor unit.</p> <p>(2) Drain pump of 4-way air discharge cassette type and concealed duct type operate during recovery control mode.</p>	<ul style="list-style-type: none"> Recovery operation is usually executed every 2 hours.
9	Recovery control for heating refrigerant and oil	<p>The indoor unit which stops operation, thermostat is OFF, or operates in FAN mode performs the following controls when the heating refrigerant/Oil recovery signal is received from the outdoor unit.</p> <ol style="list-style-type: none"> Opens PMV of the indoor unit by the specified opening degree. Stops the fan. Only 4-way Air Discharge Cassette type air conditioner rotates the indoor fan with intermittent operation for approx. 1 minute after recovery control. Only 4-way Air Discharge Cassette type air conditioner rotates the indoor fan with intermittent operation for approx. 1 minute after recovery control as the outdoor unit. After recovery control, drain pump of 4-way air discharge cassette type and concealed duct type will operate. 	<ul style="list-style-type: none"> In the indoor unit which thermostat is OFF, or operates in FAN mode, "Ⓢ" lamp goes on. Recovery operation is usually executed every 1 hour.
10	Short intermittent operation compensation control	<ol style="list-style-type: none"> For 5 minutes after the operation has started, the operation is continued even if entering thermostat-OFF condition. However, if the thermostat has been turned off by changing the set up temp., the thermostat is OFF with even the above condition. The protective control has priority. 	
11	Drain pump control	<ol style="list-style-type: none"> During "COOL" operation (including DRY operation), the drain pump operates. While the drain pump operates, if the float switch works, the drain pump continues operation and a check code is displayed. While the drain pump stops, if the float switch works, turn off the capacity demand command, stop the operation, and operate the drain pump. If the float switch continues operating for approx. 5 minutes, the operation stops and the check code is displayed. In heating operation, if humidifier "provided" is judged, compressor "ON", compressor "ON", fan "ON", and MAX (TC2, TCJ) $\geq 33^{\circ}\text{C}$, the drain pump operates. 	<p>Check code [P10]</p> <p>When CN70 is connected or the item code 40 setup data is 1, the setup becomes humidifier "provided", and the drain pump operates with the left conditions.</p>
12	Elimination of remaining heat	<ol style="list-style-type: none"> When the air conditioner stops in the "HEAT" mode, drive the indoor fan with "LOW" mode for approx. 30 seconds. 	
13	Auto flap control	<ol style="list-style-type: none"> When the louver signal has been received from the remote controller, the louver operates if the indoor fan is operating. In 4-way Air Discharge Cassette type, the discharge louver automatically directs downward if the operation stops. In 4-way Air Discharge Cassette type, the discharge louver directs upward if the heating operation is being prepared. 	
14	Filter sign display (None in wireless type) * Provided in the separately laid type TCB-AX21E.	<ol style="list-style-type: none"> The operation time of the indoor fan is integrated and stored in memory, and the filter exchange signal is sent to the remote controller to display on the remote controller LCD after the specified time. When the filter reset signal is received from the remote controller, time of the integrated timer is cleared. In this time, if the specified time has passed, the measured time is reset and LCD display disappears. 	

No.	Item	Outline of specifications	Remarks
15	 and  display (Operation and heating stand-by)	<p><Operation standby> Display on remote controller</p> <p>(1)</p> <ul style="list-style-type: none"> • “P05” is one of displays of power wire missing. • “P05” of power cable is detected. • “COOL/DRY” operation cannot be performed because the other indoor unit is under “HEAT” operation. • “HEAT” operation cannot be performed because COOL priority is set (Outdoor I/F P.C. board SW11 1-bit is ON) and the other indoor unit is under “COOL/DRY” operation. • “FAN” operation cannot be performed because the system performs “Heat oil/Refrigerant recovery” operation. • There is a unit in which indoor overflow “P10” is detected. • There is a unit in which interlock alarm “P23” is detected. <p>(2) The above indoor units unavailable to operate waits under condition of thermostat OFF.</p> <p><HEAT standby> Display on remote controller</p> <p>(1)</p> <ul style="list-style-type: none"> • HEAT thermostat is OFF. • During HEAT operation, the fan rotates with lower air speed than one specified in order to prevent discharge of cold draft or stops. (including case that defrost operation is being performed) • “HEAT” operation cannot be performed because COOL priority is set (Outdoor I/F P.C. board SW11 bit 1 is ON) and the other indoor unit is under “COOL/DRY” operation. <p>(2) “HEAT standby” is displayed until the above conditions are released.</p>	<ul style="list-style-type: none"> •  goes on. •  goes on.
16	Selection of central control mode	<p>(1) The contents which can be changed on the remote controller at indoor unit side can be selected by setup at the central controller side.</p> <p>(2) In case of operation from TCC-LINK central controller (TCB-SC642TLE, etc.)</p> <p>[Central control mode 1] : Cannot operate</p> <p>[Central control mode 2] : Cannot operate, stop, select mode, set up temp.</p> <p>[Central control mode 3] : Cannot select mode, set up temp.</p> <p>[Central control mode 4] : Cannot select mode</p> <p>(3) RBC-AMT21E (Wired remote controller)</p> <p>While mode is the central control mode,  “CENTRAL” lights on the display part of the remote controller.</p>	<p>If operation is performed from the remote control “CENTRAL CONTROL” mode, the status is notified with receiving sound.</p>

6. APPLIED CONTROL

6-1. Setup of Selecting Function in Indoor Unit (Be sure to Execute Setup by a Wired Remote Controller)

<Procedure> Execute the setup operation while the unit stops.

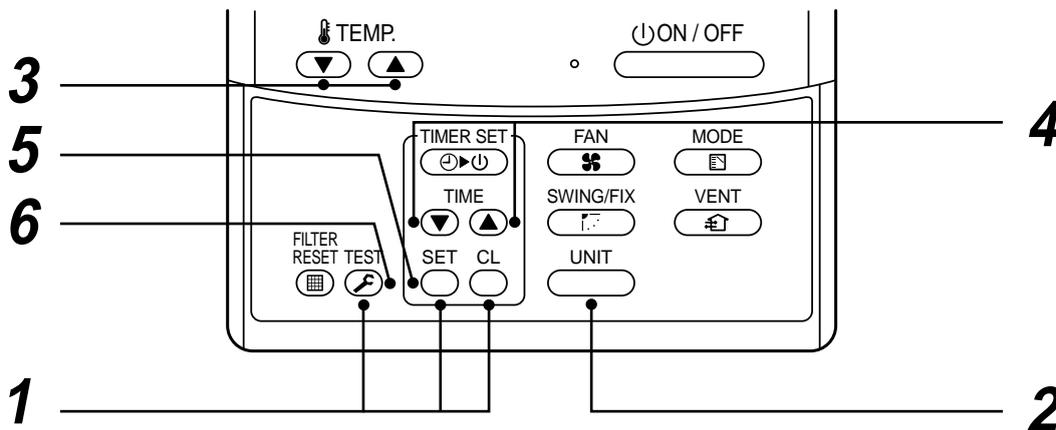

1 Push **SET**, **CL**, and **TEST** buttons simultaneously for 4 seconds or more.

The firstly displayed unit No. indicates the header indoor unit address in the group control.
In this time, the fan of the selected indoor unit is turned on.

2 Every pushing **UNIT** button, the indoor unit numbers in the group control are successively displayed. In this time, the fan of the selected indoor unit only is turned on.

3 Specify the item code (DN) using the setup temperature **▼** and **▲** buttons.

4 Select the setup data using the timer time **▼** and **▲** buttons.

(When selecting the DN code to “33”, change the temperature indication of the unit from “°C” to “°F” on the remote controller.)

5 Push **SET** button. (OK if display goes on.)

- To change the selected indoor unit, return to procedure **2**.
- To change the item to be set up, return to procedure **3**.

6 Pushing **TEST** button returns the status to normal stop status.

Table: Function selecting item numbers (DN)
(Items necessary to perform the applied control at the local site are described.)

DN	Item	Description	At shipment
01	Filter display delay timer	0000 : None 0002 : 2500H 0004 : 10000H 0001 : 150H 0003 : 5000H	According to type
02	Dirty state of filter	0000 : Standard 0001 : High degree of dirt (Half of standard time)	0000 : Standard
03	Central control address	0001 : No.1 unit to 0064 : No.64 unit 0099 : Unfixed	0099 : Unfixed
04	Specific indoor unit priority	0000 : No priority 0001 : Priority	0000 : No priority
06	Heating temp shift	0000 : No shift to 0001 : +1°C 0002 : +2°C to 0010 : +10°C (Up to +6 recommended)	0002 : +2°C (Floor type 0000: 0°C)
0d	Existence of [AUTO] mode	0000 : Provided 0001 : Not provided (Automatic selection from connected outdoor unit)	0001 : Not provided
0E	Follows operation mode of the header unit	0000 : Does not follow 0001 : Follows	0000 : Not provided
0F	Cooling only	0000 : Heat pump 0001 : Cooling only (No display of [AUTO] [HEAT])	0000 : Heat pump
10	Type	0000 : (1-way air discharge cassette) 0001 : (4-way air discharge cassette) to 0037	According to model type
11	Indoor unit capacity	0000 : Unfixed 0001 to 0034	According to capacity type
12	Line address	0001 : No.1 unit to 0030 : No.30 unit	0099 : Unfixed
13	Indoor unit address	0001 : No.1 unit to 0064 : No.64 unit	0099 : Unfixed
14	Group address	0000 : Individual 0002 : Follower unit of group 0001 : Header unit of group	0099 : Unfixed
19	Louver type (Adjustment of air direction)	0000 : Not provided 0004 : [4-way Air Discharge Cassette type] and [Under Ceiling type] 0001 : Swing only	According to type
1E	Temp difference of [AUTO] mode selection COOL → HEAT, HEAT →COOL	0000 : 0 deg to 0010 : 10 deg (For setup temperature, reversal of COOL/HEAT by ± (Data value)/2)	0003 : 3 deg (T±1.5)
28	Automatic restart of power failure	0000 : None 0001 : Restart	0000 : None
29	Operation condition of humidifier	0000 : Usual (Detection control for heat exchanger temperature) 0001 : Condition ignored	0000 : Usual
2A	Selection of option/error input (CN70)	0000 : Filter input 0002 : None 0001 : Alarm input (Air washer, etc.)	0002 : None
2E	HA terminal (CN61) select	0000 : Usual 0001 : Leaving-ON prevention control	0000 : Usual (HA terminal)
30	Automatic elevating grille	0000 : Unavailable 0001 : Available	0000 : Unavailable
31	Ventilating fan control	0000 : Unavailable 0001 : Available	0000 : Unavailable
32	TA sensor selection	0000 : Body TA sensor 0001 : Remote controller sensor	0000 : Body TA sensor
33	Temperature unit select	0000 : °C (at factory shipment) 0001 : °F	0000 : °C
40	Drain pump control	0000 : None 0002 : None 0001 : Pump ON 0003 : Pump OFF	0003 : Pump OFF
5d	High ceiling selection (Air volume selection)	[4-way Air Discharge Cassette type] and [Under Ceiling type] 0000 : Standard filter 0001 : Super-long life filter 0003 : High efficiency filter [Concealed Duct Standard type] 0000 : Standard static pressure (40Pa) 0001 : High static pressure 1 (70Pa) 0003 : High static pressure 2 (100Pa) 0005 : Correspond to quiet sound 0006 : Low static pressure (20Pa)	0000 : Standard
60	Timer set (Wired remote controller)	0000 : Available (Operable) 0001 : Unavailable (Operation prohibited)	0000 : Available
62	Anti-ceiling smudging control	0000 : Clear	4- way Air Discharge Cassette type only

TYPE

Item code [10]

Setup data	Type	Abbreviated Model name
0000	1-way Air Discharge Cassette	MMU-AP XXX SH

Indoor unit capacity

Item code [11]

Setup data	Model
0007	015
0009	018
0011	024

6-2. Applied Control in Indoor Unit

■ Remote location ON/OFF control box (TCB-IFCB-4E)

[Wiring and setup]


- Use the exclusive connector for connection with the indoor control P.C. board.
- In a group control, the system can operate when connecting with any indoor unit (Control P.C. board) in the group. However when taking out the operation/error signal from the other unit, it is necessary to take out from each unit individually.

(1) Control items

- 1) Start/Stop input signal : Operation start/stop in unit
- 2) Operation signal : Output during normal operation
- 3) Error signal : Output during alarm
(Serial communication error or indoor/outdoor protective device) operation

(2) Wiring diagram using remote control interface (TCB-IFCB-4E)

- Input IFCB-4E : No voltage ON/OFF serial signal
- Output No voltage contact for operation, error display
Contact capacity: Below Max. AC240V 0.5A

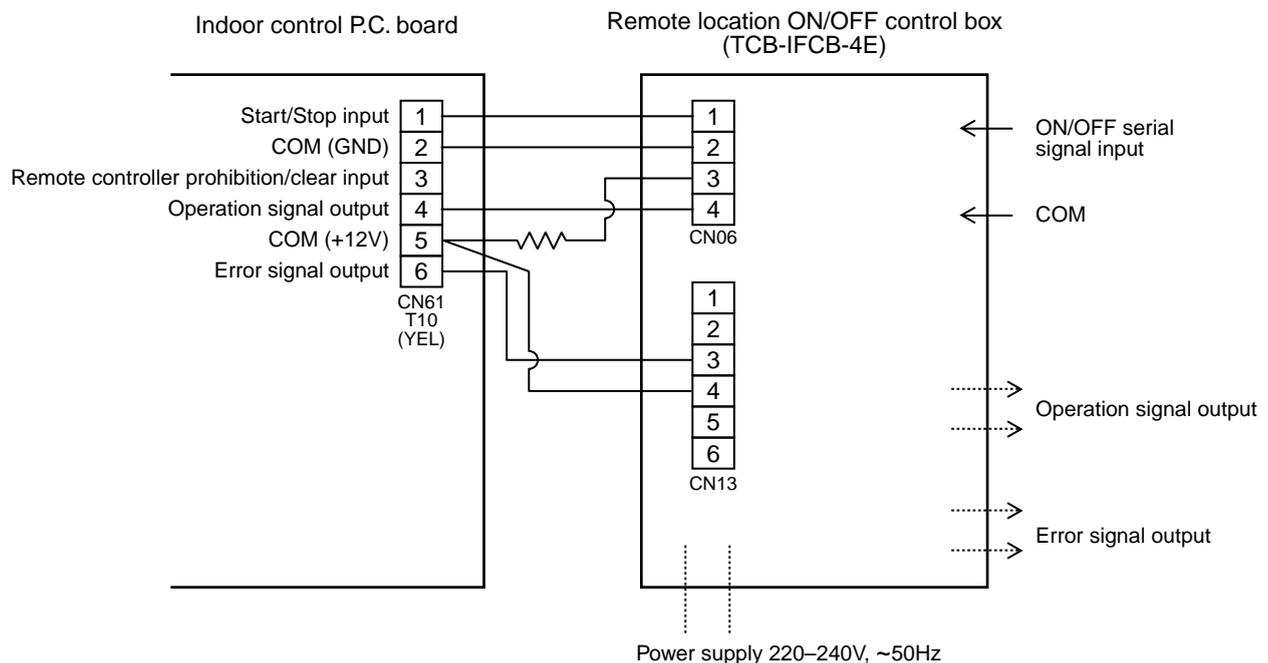

■ Ventilating fan control from remote controller

[Function]

- The start/stop operation can be operated from the wired remote controller when air to air heat exchanger or ventilating fan is installed in the system.
- The fan can be operated even if the indoor unit is not operating.
- Use a fan which can receive the no-voltage A contact as an outside input signal.
- In a group control, the units are collectively operated and they can not be individually operated.

(1) Operation

Handle a wired remote controller in the following procedure.

- * Use the wired remote controller during stop of the system.
- * Be sure to set up the wired remote controller to the header unit. (Same in group control)
- * In a group control, if the wired remote controller is set up to the header unit, both header and follower units are simultaneously operable.

1 Push concurrently **SET** + **CL** + **TEST** buttons for 4 seconds or more.

The unit No. displayed firstly indicates the header indoor unit address in the group control.

In this time, the fan of the selected indoor unit turns on.

2 Every pushing **UNIT** button, the indoor unit numbers in group control are displayed successively.

In this time, the fan of the selected indoor unit only turns on.

3 Using the setup temp **▼** or **▲** button, specify the item code **31**.

4 Using the timer time **▼** or **▲** button, select the setup data. (At shipment: **0000**)

The setup data are as follows:


Setup data	Handling of operation of air to air heat exchanger or ventilating fan
0000	Unavailable (At shipment)
0001	Available

5 Push **SET** button. (OK if display goes on.)

- To change the selected indoor unit, go to the procedure **2**).
- To change the item to be set up, go to the procedure **3**).

6 Pushing **TEST** returns the status to the usual stop status.

(2) Wiring

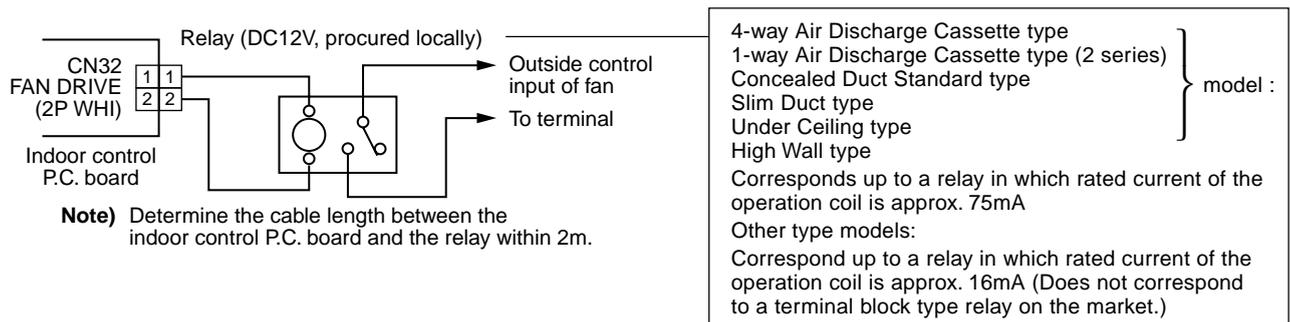

■ Leaving-ON prevention control

[Function]

- This function controls the indoor units individually. It is connected with cable to the control P.C. board of the indoor unit.
- In a group control, it is connected with cable to the indoor unit (Control P.C. board), and the item code $\mathcal{Z}\mathcal{E}$ is set to the connected indoor unit.
- It is used when the start operation from outside if unnecessary but the stop operation is necessary.
- Using a card switch box, card lock, etc, the forgotten-OFF of the indoor unit can be protected.
 - When inserting a card, start/stop operation from the remote controller is allowed.
 - When taking out a card, the system stops if the indoor unit is operating and start/stop operation from the remote controller is forbidden.

(1) Control items

- 1) Outside contact ON : The start/stop operation from the remote controller is allowed.
(Status that card is inserted in the card switch box)
- 2) Outside contact OFF : If the indoor unit is operating, it is stopped forcedly.
(Start/Stop prohibited to remote controller)
(Status that card is taken out from the card switch box)

* When the card switch box does not perform the above contact operation, convert it using a relay with b contact.


(2) Operation

Handle the wired remote controller switch in the following procedure.

* Use the wired remote controller switch during stop of the system.

- 1 Push concurrently SET + CL + TEST buttons for 4 seconds or more.**
- 2 Using the setup temp ∇ or \blacktriangle button, specify the item code $\mathcal{Z}\mathcal{E}$.**
- 3 Using the timer time ∇ or \blacktriangle button, set 0001 to the setup data.**
- 4 Push SET button.**
- 5 Push TEST button. (The status returns to the usual stop status.)**


(3) Wiring

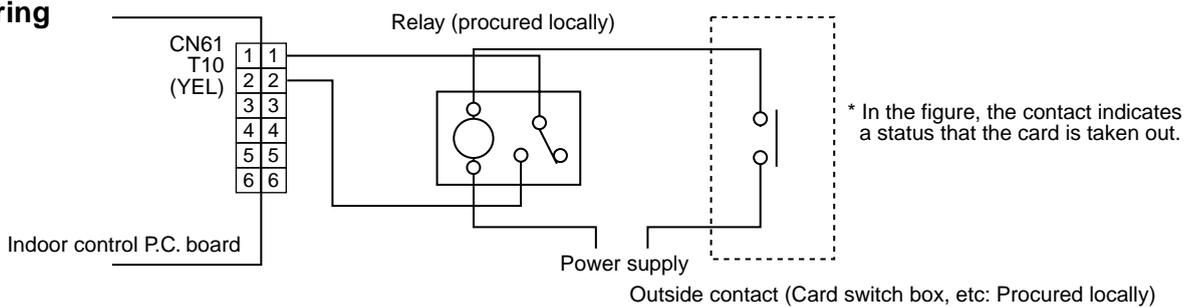

Note) Determine the cable length between the indoor control P.C. board and the relay within 2m.

■ Power peak-cut from indoor unit

When the relay is turned on, a forced thermostat-OFF operation starts.

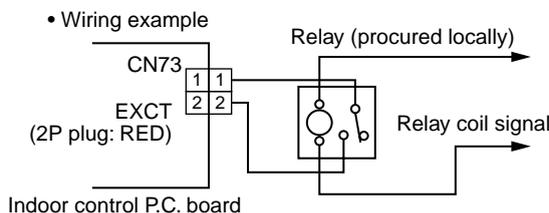

Note) Determine the cable length between the indoor or outdoor control P.C. board and the relay within 2m.

7. TROUBLESHOOTING

7-1. Troubleshooting Summary


1. Before troubleshooting

- 1) Applied models
Super Heat Recovery Multi type models
(Indoor unit: MMX-APXXX, Outdoor unit: MMY-MAPXXXFT8)
- 2) Required tools / measuring devices
 - Screwdrivers (Philips, Minus), spanner, radio pinchers, nipper, push pin for reset switch, etc.
 - Tester, thermometer, pressure gauge, etc.
- 3) Confirmation before check (The following items are not troubles.)

No.	Operation	Check items
1	Compressor does not operate.	<ul style="list-style-type: none"> • Is not delayed for 3 minutes? (3 minutes after compressor-OFF) • Is not thermostat OFF? • Is not the fan operating or timer? • Is not the system initially communicating? Heating operation cannot be performed under condition of outside temperature 21°C or higher. Cooling operation cannot be performed under condition of outside temperature -5°C or lower.
2	Indoor fan does not work.	<ul style="list-style-type: none"> • Is not the cold draft prevention being controlled in heating operation?
3	Outdoor fan does not rotate, or fan speed changes.	<ul style="list-style-type: none"> • Is not low cooling operation being controlled? • Is not a defrost operation being performed?
4	Indoor fan does not stop.	<ul style="list-style-type: none"> • Is not after-heat elimination operation being controlled after heating operation?
5	Start/stop operation on remote controller is unavailable.	<ul style="list-style-type: none"> • Is not auxiliary unit or remote control being operated?
6	—	<ul style="list-style-type: none"> • Is connecting wire of indoor unit or remote controller correct?

2. Troubleshooting procedure

When a trouble occurred, advance the check operation in the following procedure.

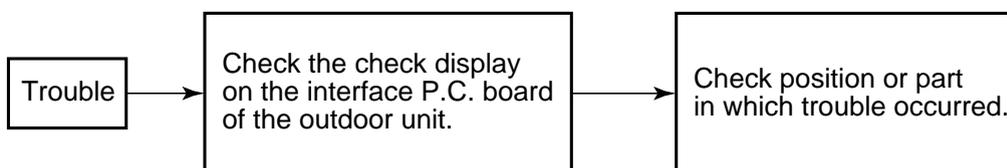

NOTE) While a check operation is performed, a malfunction of the microprocessor may be caused due to condition of the power supply or the external noise. If there is any noise source, change wires of the remote controller and signal wires to shield wires.

7-2. Check Method

On the remote controller (Main remote controller, Central control remote controller) and the interface P.C. board of the outdoor unit, a check display LCD (Remote controller) or 7-segment display (on the outdoor interface P.C. board) to display the operation is provided. Therefore the operation status can be known. Using this self-diagnosis function, a trouble or position with trouble of the air conditioner can be found as shown in the table below.

Check code list

The following list shows each check code. Find the check contents from the list according to part to be checked.

- In case of check from indoor remote controller: See “Main remote controller display” in the list.
- In case of check from outdoor unit: See “Outdoor 7-segment display” in the list.
- In case of check from AI-NET central control remote controller: See “AI-NET central control display” in the list.
- In case of check from indoor unit with wireless remote controller: See “Sensor block display of receiving unit” in the list.

IPDU: Intelligent Power Drive Unit

○ : Lighting, ✕ : Flashing, ● : Goes off

ALT.: Flashing is alternately when there are two flashing LED.

SIM: Simultaneous flashing when there are two flashing LED

Main remote controller display	Check code		AI-NET central control display	Wireless remote controller				Check code name	Judging device
	Outdoor 7-segment display			Sensor block display of receiving unit					
		Sub code		Operation ⏴	Timer ⏵	Ready ⊗	Flash		
E01	—	—	—	✕	●	●		Communication error between indoor and remote controller (Detected at remote controller side)	Remote controller
E02	—	—	—	✕	●	●		Sending error of remote controller	Remote controller
E03	—	—	97	✕	●	●		Communication error between indoor and remote controller (Detected at indoor side)	Indoor
E04	—	—	04	●	●	✕		Communication circuit error between indoor and outdoor (Detected at indoor side)	Indoor
E06	E06	No. of indoor units in which sensor has been normally received	04	●	●	✕		Decrease of No. of indoor units	I/F
—	E07	—	—	●	●	✕		Communication circuit error of indoor and outdoor (Detected at outdoor side)	I/F
E08	E08	Duplicated indoor addresses	96	✕	●	●		Duplicated indoor addresses	Indoor / I/F
E09	—	—	99	✕	●	●		Duplicated master remote controllers	Remote controller
E10	—	—	CF	✕	●	●		Communication error in indoor P.C. B ass'y	Indoor
E12	E12	01: Indoor/Outdoor communication 02: Communication between outdoor units	42	✕	●	●		Automatic address start error	I/F
E15	E15	—	42	●	●	✕		No indoor automatic address	I/F
E16	E16	00: Capacity over 01: No. of connected units	89	●	●	✕		No. of connected indoor units / Capacity over	I/F
E18	—	—	97, 99	✕	●	●		Communication error between indoor header and follower units	Indoor
E19	E19	00: No header unit 02: Two or more header units	96	●	●	✕		Outdoor header units quantity error	I/F
E20	E20	01: Outdoor of other line connected 02: Indoor of other line connected	42	●	●	✕		Other line connected during automatic address	I/F
E23	E23	—	15	●	●	✕		Sending error in communication between outdoor units	I/F
E25	E25	—	15	●	●	✕		Duplicated follower outdoor addresses	I/F
E26	E26	No. of outdoor units which received signal normally	15	●	●	✕		Decrease of No. of connected outdoor units	I/F
E28	E28	Detected outdoor unit number	d2	●	●	✕		Follower outdoor error	I/F
E31	E31	01: IPDU1 error 02: IPDU2 error 03: IPDU1, 2 error 04: Fan IPDU error 05: IPDU + Fan IPDU error 06: IPDU2 + Fan IPDU error 07: All IPDU error	CF	●	●	✕		IPDU communication error	I/F

Main remote controller display	Check code			Wireless remote controller				Check code name	Judging device
	Outdoor 7-segment display		AI-NET central control display	Sensor block display of receiving unit					
	Sub code	Operation ⏻		Timer ⌚	Ready ⦿	Flash			
F01	—	—	OF	⦿	⦿	●	ALT	Indoor TCJ sensor error	Indoor
F02	—	—	Od	⦿	⦿	●	ALT	Indoor TC2 sensor error	Indoor
F03	—	—	93	⦿	⦿	●	ALT	Indoor TC1 sensor error	Indoor
F04	F04	—	19	⦿	⦿	○	ALT	TD1 sensor error	I/F
F05	F05	—	A1	⦿	⦿	○	ALT	TD2 sensor error	I/F
F06	F06	—	18	⦿	⦿	○	ALT	TE1 sensor error	I/F
F07	F07	—	18	⦿	⦿	○	ALT	TL sensor error	I/F
F08	F08	—	1b	⦿	⦿	○	ALT	TO sensor error	I/F
F10	—	—	OC	⦿	⦿	●	ALT	Indoor TA sensor error	Indoor
F12	F12	01: TS1 02: TS2	A2	⦿	⦿	○	ALT	TS1, TS2 sensor error	I/F
F13	F13	01: Comp. 1 side 02: Comp. 2 side	43	⦿	⦿	○	ALT	TH sensor error	IPDU
F15	F15	—	18	⦿	⦿	○	ALT	Outdoor temp sensor misconnecting (TE, TL)	I/F
F16	F16	—	43	⦿	⦿	○	ALT	Outdoor pressure sensor misconnecting (Pd, Ps)	I/F
F23	F23	—	43	⦿	⦿	○	ALT	Ps sensor error	I/F
F24	F24	—	43	⦿	⦿	○	ALT	Pd sensor error	I/F
F29	—	—	12	⦿	⦿	●	SIM	Indoor other error	Indoor
F31	F31	—	1C	⦿	⦿	○	SIM	Outdoor EEPROM error	I/F
H01	H01	01: Comp. 1 side 02: Comp. 2 side	IF	●	⦿	●		Compressor break down	IPDU
H02	H02	01: Comp. 1 side 02: Comp. 2 side	1d	●	⦿	●		Magnet switch error Overcurrent relay operation Compressor error (lock)	MG-SW Overcurrent relay IPDU
H03	H03	01: Comp. 1 side 02: Comp. 2 side	17	●	⦿	●		Current detect circuit system error	IPDU
H04	H04	—	44	●	⦿	●		Comp 1 case thermo operation	I/F
H06	H06	—	20	●	⦿	●		Low pressure protective operation	I/F
H07	H07	—	d7	●	⦿	●		Oil level down detective protection	I/F
H08	H08	01: TK1 sensor error 02: TK2 sensor error 03: TK3 sensor error 04: TK4 sensor error	d4	●	⦿	●		Oil level detective temp sensor error	I/F
H14	H14	—	44	●	⦿	●		Comp 2 case thermo operation	I/F
H16	H16	01: TK1 oil circuit system error 02: TK2 oil circuit system error 03: TK3 oil circuit system error 04: TK4 oil circuit system error	d7	●	⦿	●		Oil level detective circuit error Magnet switch error Overcurrent relay operation	I/F MG-SW Overcurrent relay
L03	L03	—	96	⦿	●	⦿	SIM	Duplicated indoor header units	Indoor
L04	L04	—	96	⦿	○	⦿	SIM	Duplicated outdoor line addresses	I/F
L05	L05	—	96	⦿	●	⦿	SIM	Duplicated indoor units with priority (Displayed on indoor unit with priority)	I/F
L06	L06	No. of indoor units with priority	96	⦿	●	⦿	SIM	Duplicated indoor units with priority (Displayed in unit other than indoor unit with priority)	I/F
L07	—	—	99	⦿	●	⦿	SIM	Group line in individual indoor unit	Indoor
L08	L08	—	99	⦿	●	⦿	SIM	Indoor group/Address unset	Indoor I/F
L09	—	—	46	⦿	●	⦿	SIM	Indoor capacity unset	Indoor
L10	L10	—	88	⦿	○	⦿	SIM	Outdoor capacity unset	I/F
L17	L17	—	46	⦿	○	⦿	SIM	Inconsistency error of outdoor units	I/F
L18	L18	—	8A	⦿	⦿	⦿	SIM	FS unit error	FS unit
L20	—	—	98	⦿	○	⦿	SIM	Duplicated central control addresses	AI-NET Indoor
L28	L28	—	46	⦿	○	⦿	SIM	Over No. of connected outdoor units	I/F
L29	L29	01: IPDU1 error 02: IPDU2 error 03: IPDU3 error 04: Fan IPDU error 05: IPDU1 + Fan IPDU error 06: IPDU2 + Fan IPDU error 07: All IPDU error	CF	⦿	○	⦿	SIM	No. of IPDU error	I/F
L30	L30	Detected indoor address	b6	⦿	○	⦿	SIM	Auxiliary interlock in indoor unit	Indoor
—	L31	—	—	—	—	—		IC error	I/F

Check code				Wireless remote controller				Check code name	Judging device
Main remote controller display	Outdoor 7-segment display		AI-NET central control display	Sensor block display of receiving unit					
		Auxiliary code		Operation 	Timer 	Ready 	Flash		
P01	—	—	11	●	☒	☒	ALT	Indoor fan motor error	Indoor
P03	P03	—	1E	☒	●	☒	ALT	Discharge temp TD1 error	I/F
P04	P04	01: Comp. 1 side 02: Comp. 2 side	21	☒	●	☒	ALT	High-pressure SW detection error	IPDU
P05	P05	01: Phase-missing detection 02: Phase order error	AF	☒	●	☒	ALT	Phase-missing detection / Phase order error	I/F
P07	P07	01: Comp. 1 side 02: Comp. 2 side	1C	☒	●	☒	ALT	Heat sink overheat error	IPDU I/F
P10	P10	Detected indoor address	Ob	●	☒	☒	ALT	Indoor overflow error	Indoor
P12	—	—	11	●	☒	☒	ALT	Indoor fan motor error	Indoor
P13	P13	—	47	●	☒	☒	ALT	Outdoor liquid back detection error	I/F
P15	P15	01: TS condition 02: TD condition	AE	☒	●	☒	ALT	Gas leak detection	I/F
P17	P17	—	bb	☒	●	☒	ALT	Discharge temp TD2 error	I/F
P19	P19	Detected outdoor unit number	08	☒	●	☒	ALT	4-way valve inverse error	I/F
P20	P20	—	22	☒	●	☒	ALT	High-pressure protective operation	I/F
P22	P22	0 _ : IGBT short 1 _ : Fan motor position detective circuit error 3 _ : Fan motor trouble C _ : TH sensor temp. error (Heat sink overheat) D _ : TH sensor error E _ : Vdc output error	1A	☒	●	☒	ALT	Outdoor fan IPDU error	Fan IPDU
P26	P26	01: Comp. 1 side 02: Comp. 2 side	14	☒	●	☒	ALT	G-TR short protection error	IPDU
P29	P29	01: Comp. 1 side 02: Comp. 2 side	16	☒	●	☒	ALT	Comp position detective circuit system error	IPDU
P31	—	—	47	☒	●	☒	ALT	Other indoor unit error (Group follower unit error)	Indoor
—	—	—	b7	By alarm device			ALT	Error in indoor group	AI-NET
—	—	—	97	—			—	AI-NET communication system error	AI-NET
—	—	—	99	—			—	Duplicated network adaptors	AI-NET

Error detected by TCC-LINK central control device

Check code				Wireless remote controller				Check code name	Judging device
Central control device indication	Outdoor 7-segment display		AI-NET central control display	Sensor block display of receiving unit					
		Auxiliary code		Operation 	Timer 	Ready 	Flash		
C05	—	—	—	—				Sending error in TCC-LINK central control device	TCC-LINK
C06	—	—	—	—				Receiving error in TCC-LINK central control device	TCC-LINK
C12	—	—	—	—				Batch alarm of general-purpose equipment control interface	HA control interface I/F
P30	Differs according to error contents of unit with occurrence of alarm			—				Group control follower unit error	TCC-LINK
	—	—	(L20 is displayed.)	—				Duplicated central control addresses	

New check code

1. Difference between the TCC LINK and AI-NET check code

The displaying method of the check code changes in this model and after.

	AI-NET check code	TCC Link
Used characters	Hexadecimal notation, 2 digits	Alphabet + Decimal notation, 2 digits
Characteristics of code classification	Few classification of communication/incorrect setup system	Many classification of communication/incorrect setup system
Block display	Indoor P.C. board, Outdoor P.C. board, Cycle, Communication	Communication/Incorrect setup (4 ways), Indoor protection, Outdoor protection, Sensor, Compressor protection, etc.

< Display in wired remote controller >

- [△] goes on.
- [UNIT No.] + Check code + Operation lamp (Green) flash

<Display on sensor part in wireless remote controller>

- Block display of combination of [⏻] [⊖] [🌀]

<Display on 7-segment in outdoor unit>


- Unit No. and check code are displayed.
- In a case of error with auxiliary code, the check code and the auxiliary code are displayed alternately.

Display	Classification
A	Unused
C	Central control system error
E	Communication system error
F	Each sensor error (Failure)
H	Compressor protective system error
J	Unused
L	Setup error, Other errors
P	Protective device operation

2. Special mention

- 1) If this model is connected to AI-NET by network adaptor, the different check codes are displayed on the main remote controller (New check code display on new remote controller) and AI-NET central control remote controller (AI-NET check code display on AI-NET central control remote controller).

Example) Indoor TA sensor error

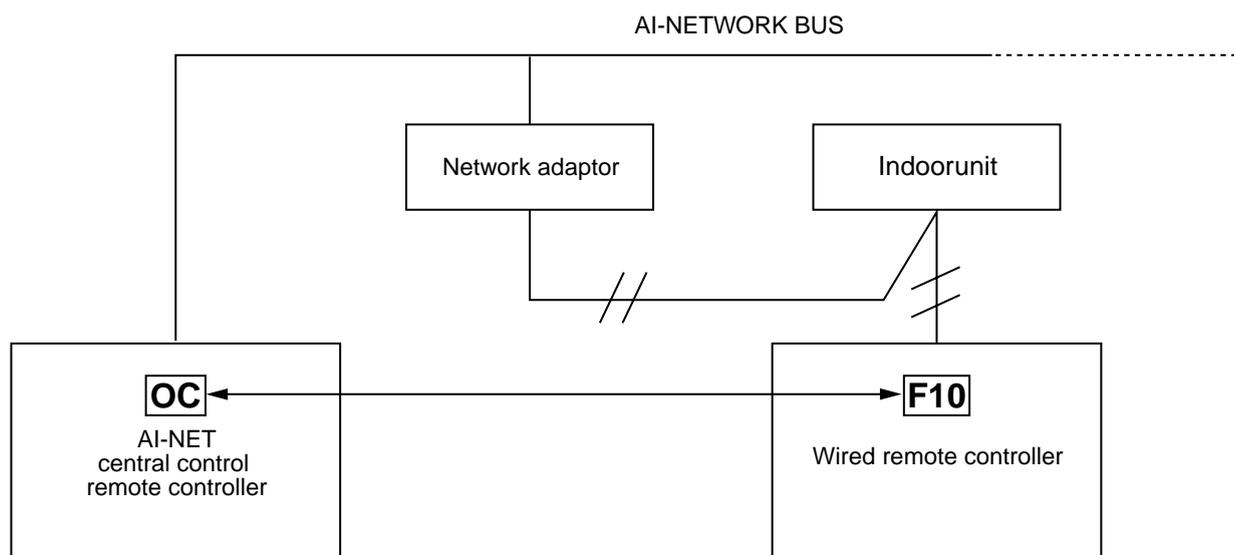

- 2) The check code of the remote controller is displayed only while the air conditioner is operating (Remote controller start button ON). When the air conditioner stopped and the error has been cleared, the check code display on the remote controller also disappears. However, if the error continues after stop of the operation, the check code is immediately displayed with restarting of the operation.

7-3. Troubleshooting by Check Display on Remote Controller


In case of wired remote controller (RBC-AMT31E)

1. Confirmation and check

When a trouble occurred on the air conditioner, the check code and the indoor unit No. are displayed on the display section of the remote controller.

The check code is displayed while the air conditioner operates.

If the display disappeared, operate the air conditioner and check the error based upon the following "Confirmation of error history".

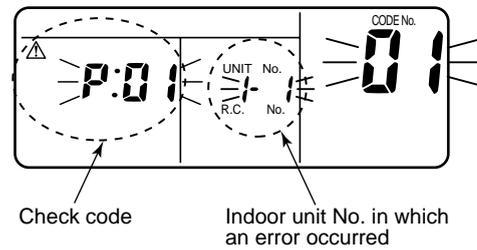


2. Confirmation of error history

When a trouble occurred on the air conditioner, the error history can be confirmed with the following procedure.


(Up to 4 error histories are stored in memory.)

This history can be confirmed from either operating status or stop status.

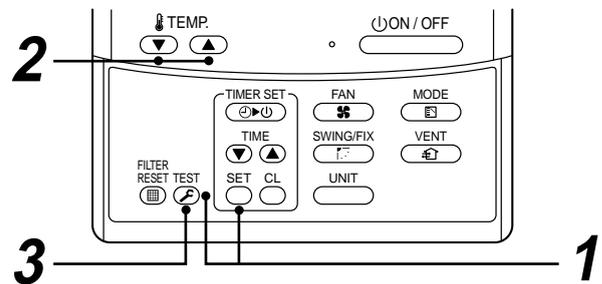

Procedure	Description
1	<p>When pushing SET and TEST buttons simultaneously for 4 seconds or more, the below display appears.</p> <p>If [Service Check] is displayed, the mode enters in the error history mode.</p> <ul style="list-style-type: none"> • [01: Error history order] is displayed in code number window. • [Check Code] is displayed in check code window. • [Indoor unit address with error] is displayed in UNIT No.
2	<p>Every pushing temp. set ▼ / ▲ buttons, the error histories stored in the memory are displayed in order.</p> <p>The numbers in item code indicates item code [01] (Latest) to [04] (Oldest).</p> <p>CAUTION</p> <p>Do not push [CL] button because all the error histories of the indoor unit will be deleted.</p>
3	<p>After confirmation, push TEST button to return to the usual display.</p>

In case of central remote controller (TCB-SC642TLE)

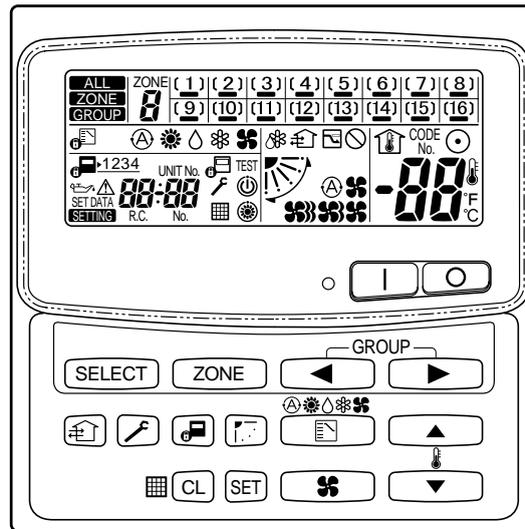


1. Confirmation and check

When a trouble occurred on the air conditioner, the check code and the indoor unit No. are displayed on the display section of the remote controller.

The check code is displayed while the air conditioner operates.

If the display disappeared, operate the air conditioner and check the error based upon the following "Confirmation of error history".

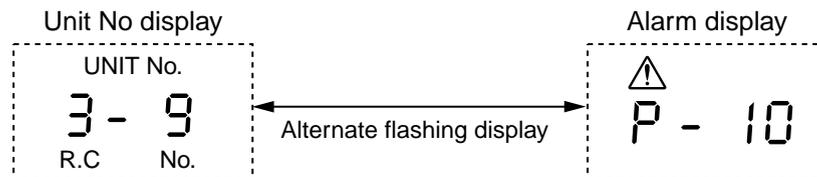


2. Confirmation of error history

When a trouble occurred on the air conditioner, the error history can be confirmed with the following procedure. (Up to 4 error histories are stored in memory.)

This history can be confirmed from either operating or stop.


- 1) Push and buttons in succession for 4 seconds or more.
- 2) SERVICE CHECK goes on and Item code 01 goes on.
- 3) When selecting (flash) the group number if there is the alarm history, the UNIT number and the latest alarm history are displayed alternately.
 - * In this time, the temperature cannot be set up.
- 4) To confirm the alarm history other than the latest one, push temp. set / to select Item code (01 to 04).
- 5) To confirm the alarm in the other group, push and to select the group number. Do not push button because all the alarm histories of the currently selected group are deleted.
- 6) To finish the service check, push button.

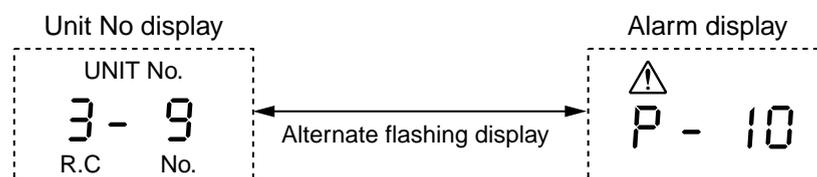

In case of AI-NET central remote controller


1. Operation for CHECK display

When pushing the CHECK switch, the indoor unit No. (Network address No.) including the check data is displayed in the UNIT No. display section, and the check code is displayed in the set up temp. display section.

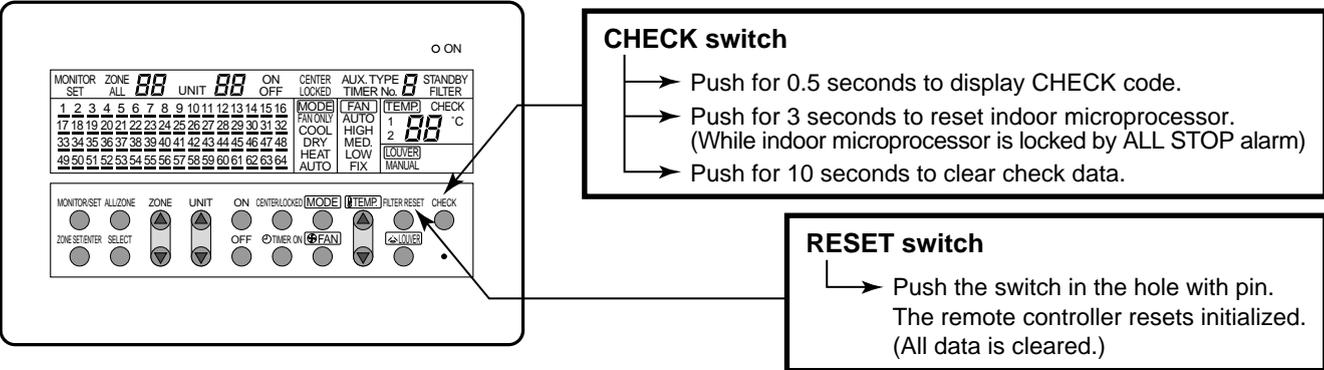


2. Reading of CHECK monitor display

<7 segment display>

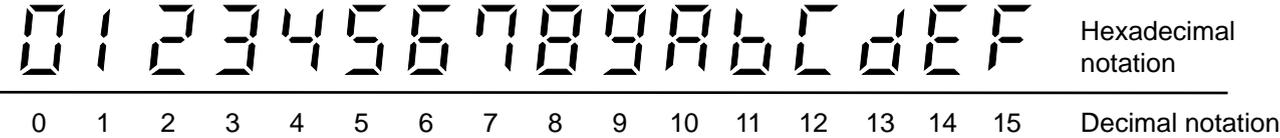

<Display on CHECK monitor>


Unit line No. (Network address No.)

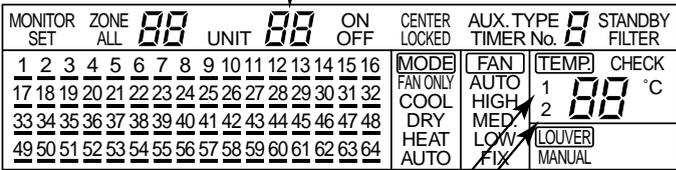

Check code detected at first →

Check code detected at last →


(Example)
There is no check data.

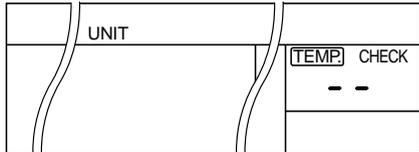

<CHECK data>

(Example)

In No.1 unit, first the interconnection wire (bus communication line) of indoor/outdoor has failed.
Next, the room temp. sensor is defective.
For No.16 unit, the high pressure switch at the inverter unit side operates.

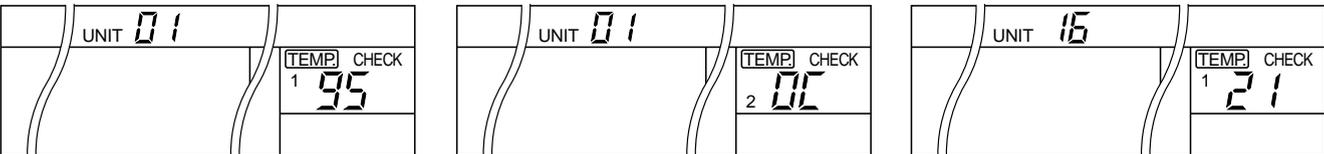

7-4. Check Code and Check Position Displayed on the Remote Controller and Outdoor Unit (7-Segment Display of Interface)

Check code				Detected position	Check code name	Status	Error detection condition	Check item (position)
Main remote controller	Outdoor 7-segment display		AI-NET central control remote controller					
	Check code	Sub-code						
E01	—	—	—	Remote controller	Communication error between indoor and remote controller (Detected at remote controller side)	Corresponding unit only stops.	Communication interrupted between indoor P.C. board and remote controller.	<ul style="list-style-type: none"> • Check remote controller inter-unit cable (A/B). • Check disconnection, connector contact error. • Check indoor power supply. • Check indoor P.C. board error. • Check remote controller address setup. (When two remote controllers operate) • Check remote controller P.C. board.
E02	—	—	—	Remote controller	Remote controller sending error	Corresponding unit only stops.	Signal could not be sent from remote controller to indoor unit.	<ul style="list-style-type: none"> • Check the communication wire of remote controller: Exchange remote controller.
E03	—	—	97	Indoor unit	Communication error between indoor and remote controller (Detected at indoor side)	Corresponding unit only stops.	No communication from remote controller (including wireless) and communication adapter.	<ul style="list-style-type: none"> • Check remote controller and communication adapter wiring.
E04	—	—	4	Indoor unit	Indoor/outdoor communication circuit error (Detected at indoor side)	Corresponding unit only stops.	Indoor unit does not receive communication from outdoor unit.	<ul style="list-style-type: none"> • Check power-ON order of indoor/outdoor. • Check indoor address setup. • Check inter-unit cabling between indoor and outdoor. • Check outdoor end terminal resistance setup (SW30-2).
E06	E06	No. of indoor units which received signal normally	4	I/F	Decreased number of indoor units	All stop	When signal is not sent for a certain period from the indoor unit which has been used to send signals, [E06] is normally displayed.	<ul style="list-style-type: none"> • Check the power supply of indoor unit. (Power-ON) • Check connection of communication line between indoor and outdoor. • Check connector connection for communication in indoor P.C. board. • Check connector connection for communication in outdoor P.C. board. • Check indoor P.C. board failure. • Check outdoor P.C. board (I/F) failure.
—	E07	—	—	I/F	Indoor/outdoor communication circuit error (Detected at outdoor side)	All stop	Transmission from outdoor to indoor cannot continue for 30 seconds.	<ul style="list-style-type: none"> • Check outdoor terminator resistor setup (SW30-2). • Check the communication connection between indoor and outdoor.
E08	E08	Duplicated indoor addresses	96	Indoor I/F	Duplicated indoor addresses	All stop	Multiple indoor unit address setup are duplicated.	<ul style="list-style-type: none"> • Check indoor address. • Check the change of remote controller connection (Group / individual) after setup of indoor address.
E09	—	—	99	Remote controller	Duplicated master remote controllers	Corresponding unit only stops.	In 2-remote controller control (including wireless), both are setup as master (Header indoor unit stops and other indoor unit is operating.)	<ul style="list-style-type: none"> • Check remote controller setup. • Check remote controller P.C. board.
E10	—	—	CF	Indoor unit	Communication error between indoor P.C. board assembly	Corresponding unit only stops.	There is any trouble in power line.	<ul style="list-style-type: none"> • Indoor P.C. board failure

Check code				Detected position	Check code name	Status	Error detection condition	Check item (position)
Main remote controller	Outdoor 7-segment display		AI-NET central control remote controller					
	Check code	Sub-code						
E12	E12	01: Indoor/outdoor communication 02: Between outdoors communication	42	I/F	Automatic address start error	All stop	<ul style="list-style-type: none"> When indoor automatic address started, other refrigerant circuit system was setting automatic address. When outdoor automatic address started, indoor automatic address was executed. 	Setup the address again after disconnecting communication connection with other refrigerant circuit system.
E15	E15	—	42	I/F	No corresponding indoor unit during automatic address	All stop	Indoor unit is not found when indoor automatic address start was set up.	<ul style="list-style-type: none"> Check the communication line connection between indoor and outdoor. Check the electric power line error in indoor. Check the noise of surrounding devices. Power failure Check indoor P.C. board error.
E16	E16	00: Capacity over 01 to: No. of connected units	89	I/F	No. of connected indoor units / Capacity over	All stop	<ul style="list-style-type: none"> Total capacity of indoor units exceeded 135% of total outdoor capacity. No. of connected indoor units are more than 48 units. <p>[Note] If this code appears after backup setup of outdoor unit trouble, set up "No. capacity-over detection".</p> <p><Setup method of "No. capacity-over detection"> Turn on SW09/Bit 2 on I/F P.C. board of outdoor header unit.</p>	<ul style="list-style-type: none"> Check the connection capacity of indoor unit. Check the HP capacity of indoor unit. Check the indoor/outdoor capacity setup Check the No. of connected indoor units. Check the outdoor I/F P.C. board error
E18	—	—	97, 99	Indoor unit	Communication error between indoor header and follower units	Corresponding unit only stops.	Regular communication between indoor header and follower units	<ul style="list-style-type: none"> Check cable of the remote controller. Check power cabling of indoor. Check P.C. board of indoor.
E19	E19	00: No header unit 02: Two or more header units	96	I/F	Outdoor unit quantity error	All stop	<ul style="list-style-type: none"> There are multiple outdoor units in 1 line. There is none of outdoor unit in 1 line. 	The outdoor unit connected with communication cable between indoor and outdoor (U1.U2) is the outdoor unit. <ul style="list-style-type: none"> Check connection of communication line between indoor and outdoor. Check outdoor P.C. board(I/F) error.
E20	E20	01: Connection of outdoor of other line 02: Connection of indoor of other line	42	I/F	Other line unit connected during automatic address	All stop	Unit of other line was connected when indoor automatic address started.	Separate the cable between lines according to automatic address setup method in "Address setup".
E23	E23	—	15	I/F	Communication sending error between outdoor units	All stop	Transmission of other outdoor unit was unavailable for 30 seconds or more.	In this model, only one outdoor unit is provided to one refrigerant line. Be sure to check there is no communication connection with outdoor unit in the other refrigerant line.
E25	E25	—	15	I/F	Duplicated outdoor follower address setup	All stop	Outdoor addresses manually set up are duplicated.	Note) Do not set up the outdoor address manually.
E26	E26	No. of normally received outdoor units	15	I/F	Decreased number of connected outdoor units	All stop	The signal was not returned for constant from the outdoor unit which was receiving signal.	In this model, only one outdoor unit is provided to one refrigerant line. Be sure to check there is no communication connection with outdoor unit in the other refrigerant line.
E28	E28	No. of detected outdoor units	d2	I/F	Outdoor follower unit error	All stop	Outdoor header unit received error code from outdoor follower unit.	Check the check code of outdoor follower unit.

<Convenient functions>

When pushing SW04 for 1 second or more under condition that [E28] is displayed on 7-segment display of outdoor header unit, the fan of outdoor unit which stopped abnormally starts rotating.
If pushing SW04 and SW05 simultaneously, the fan of normal outdoor unit operates.
When pushing SW05 singly, the operation of fan is cleared.

Check code			AI-NET central control remote controller	Detected position	Check code name	Status	Error detection condition	Check item (position)
Main remote controller	Outdoor 7-segment display							
	Check code	Sub-code						
E31	E31	01: IPDU1 error 02: IPDU2 error 03: IPDU1, 2 errors 04: Fan IPDU error 05: IPDU1 + Fan IPDU error 06: IPDU2 + Fan IPDU error 07: All IPDU error or communication error between IPDU and I/F P.C. board or outdoor I/F P.C. board error	CF	I/F	IPDU communication error	All stop	Communication of each IPDU (P.C. board) in inverter box interrupted.	<ul style="list-style-type: none"> • Check connection of communication connector and disconnection between IPDU and I/F P.C. board. • Check outdoor P.C. board (I/F, IPDU, Fan IPDU) error. • Check external noise. • Check power supply P.C. board for fan error.
F01	—	—	OF	Indoor unit	Indoor TCJ sensor error	Corresponding unit only stops	• Resistance value of sensor is infinite or zero. (Open/Short)	<ul style="list-style-type: none"> • Check connection/cabling of TCJ sensor connector. • Check characteristics of TCJ sensor resistance value. • Check indoor P.C. board error.
F02	—	—	Od	Indoor unit	Indoor TC2 sensor error	Corresponding unit only stops.	• Resistance value of sensor is infinite or zero (Open/Short).	<ul style="list-style-type: none"> • Check connection/cabling of TC2 sensor connector. • Check characteristics of TC2 sensor resistance value. • Check indoor P.C. board error.
F03	—	—	93	Indoor unit	Indoor TC1 sensor error	Corresponding unit only stops.	• Resistance value of sensor is infinite or zero (Open/Short).	<ul style="list-style-type: none"> • Check connection/cabling of TC1 sensor connector. • Check characteristics of TC1 sensor resistance value. • Check indoor P.C. board error.
F04	F04	—	19	I/F	TD1 sensor error	All stop	• Resistance value of sensor is infinite or zero (Open/Short)	<ul style="list-style-type: none"> • Check connection of TD1 sensor connector. • Check characteristics of TD1 sensor resistance value. • Check outdoor P.C. board (I/F) error.
F05	F05	—	A1	I/F	TD2 sensor error	All stop	• Resistance value of sensor is infinite or zero (Open/Short)	<ul style="list-style-type: none"> • Check connection of TD2 sensor connector. • Check characteristics of TD2 sensor resistance value. • Check outdoor P.C. board (I/F) error.
F06	F06	—	18	I/F	TE1 sensor error	All stop	• Resistance value of sensor is infinite or zero (Open/Short).	<ul style="list-style-type: none"> • Check connection of TE1 sensor connector. • Check characteristics of TE1 sensor resistance value. • Check outdoor P.C. board (I/F) error.
F07	F07	—	18	I/F	TL sensor error	All stop	• Resistance value of sensor is infinite or zero (Open/Short).	<ul style="list-style-type: none"> • Check connection of TL sensor connector. • Check characteristics of TL sensor resistance value. • Check outdoor P.C. board (I/F) error.
F08	F08	—	1b	I/F	TO sensor error	All stop	• Resistance value of sensor is infinite or zero (Open/Short).	<ul style="list-style-type: none"> • Check connection of TO sensor connector. • Check characteristics of TO sensor resistance value. • Check outdoor P.C. board (I/F) error.
F10	—	—	OC	Indoor	Indoor TA sensor error	Corresponding unit only stops.	• Resistance value of sensor is infinite or zero (Open/Short).	<ul style="list-style-type: none"> • Check connection/cabling of TA sensor connector. • Check characteristics of TA sensor resistance value. • Check indoor P.C. board error.
F12	F12	01: TS1 02: TS2	A2	I/F	TS1, TS2 sensor error	All stop	• Resistance value of sensor is infinite or zero (Open/Short).	<ul style="list-style-type: none"> • Check connection of TS1 or TS2 sensor connector. • Check characteristics of TS1, TS2 sensor resistance value. • Check outdoor P.C. board (I/F) error.

Check code				Detected position	Check code name	Status	Error detection condition	Check item (position)
Main remote controller	Outdoor 7-segment display		AI-NET central control remote controller					
	Check code	Sub-code						
F13	F13	01: Compressor 1 side 02: Compressor 2 side	43	IPDU	TH sensor error	All stop	<ul style="list-style-type: none"> Resistance value of sensor is infinite or zero (Open/Short). 	<ul style="list-style-type: none"> IGBT built-in temp sensor error → Exchange IPDU P.C. board.
F15	F15	—	18	I/F	Outdoor temp sensor miscabling (TE1, TL)	All stop	<ul style="list-style-type: none"> During operation of compressor in HEAT mode, the TE1 detection temp was higher than that of TL by the specified value continued for 3 minutes or more. 	<ul style="list-style-type: none"> Check installation of TE1 sensor and TL sensor. Check characteristics of TE1 and TL sensor resistance value. Check outdoor P.C. board (I/F) error.
F16	F16	—	43	I/F	Outdoor pressure sensor miscabling (Pd, Ps)	All stop	<ul style="list-style-type: none"> High-pressure Pd sensor and low-pressure Ps sensor were exchanged, or output voltages of both sensors are zero. 	<ul style="list-style-type: none"> Check connection of high-pressure Pd sensor connector. Check connection of low-pressure Ps sensor connector. Check pressure sensors Pd and Ps error. Check outdoor P.C. board (I/F) error. Check compression error of compressor.
F23	F23	—	43	I/F	Ps sensor error	All stop	<ul style="list-style-type: none"> Output voltage of Ps sensor was zero. 	<ul style="list-style-type: none"> Misconnection of Ps sensor and Pd sensor connectors Check connection of Ps sensor connector. Check Ps sensor error. Check compression error of compressor. Check 4-way valve error. Check outdoor P.C. board (I/F) error. Check SV4 circuit error.
F24	F24	—	43	I/F	Pd sensor error	All stop	<ul style="list-style-type: none"> Output voltage of Pd sensor was zero. (Sensor Open) Pd > 4.15MPa during stop of compressor 	<ul style="list-style-type: none"> Check connection of Pd sensor connector. Check Pd sensor error. Check outdoor P.C. board (I/F) error.
F29	—	—	12	Indoor	Indoor other error	Corresponding unit only stops.	<ul style="list-style-type: none"> Indoor P.C. board did not operate normally. 	<ul style="list-style-type: none"> Check indoor P.C. board error (EEPROM error).
F31	F31	—	1C	I/F	Outdoor EEPROM error	All stop (*1)	<ul style="list-style-type: none"> Outdoor P.C. board (I/F) did not operate normally. 	<ul style="list-style-type: none"> Check power voltage. Check power noise. Check outdoor P.C. board (I/F) error.
H01	H01	01: Compressor 1 side 02: Compressor 2 side	1F	IPDU	Compressor breakdown	All stop	<ul style="list-style-type: none"> Inverter current detection circuit detected over-current and stopped. 	<ul style="list-style-type: none"> Check power voltage. (AC220–240V ± 10%). Check compressor error. Check cause of abnormal overload operation. Check outdoor P.C. board (IPDU) error.
H02	H02	01: Compressor 1 side 02: Compressor 2 side	1d	IPDU	Compressor error (lock) MG-SW error OCR operation	All stop	<ul style="list-style-type: none"> Over-current was detected several seconds after header compressor had started. 	<ul style="list-style-type: none"> Check compressor error. Check power voltage. (AC380–10%, 415V +10%). Check cable of compressor and phase-missing. Check connector/terminal connection on IPDU P.C. board. Check conduction of case heater. (Check activation error due to liquid stagnation in compressor.) Check outdoor P.C. board (IPDU) error. Check outdoor MG-SW or OCR.

(*1) All stop only in case of the header unit The follower unit continues operation.

MG-SW : Magnet Switch, OCR : Over-current Relay

Check code				Detected position	Check code name	Status	Error detection condition	Check item (position)
Main remote controller	Outdoor 7-segment display		AI-NET central control remote controller					
	Check code	Sub-code						
H03	H03	01: Compressor 1 side 02: Compressor 2 side	17	IPDU	Current detection circuit system error	All stop	While header compressor stopped, current flowed more than the specified current and was detected.	<ul style="list-style-type: none"> • Check cabling of current detection circuit system. • Check outdoor P.C. board (IPDU) error.
H04	H04	—	44	I/F	Compressor 1 case thermo operation	All stop	Compressor 1 case thermostat performed protective operation.	<ul style="list-style-type: none"> • Check compressor 1 case thermo circuit. (Connector, cable, P.C. board) • Check full opening of service valve. (Gas and liquid side) • Check outdoor PMV clogging. (PMV1, 2, 3) • Check SV41 circuit leakage. • Check miscabling/misinstallation of SV41 and SV42. • Check valve open status of indoor PMV. • Check 4-way valve error. • Check refrigerant shortage. • Check SV5 leak. • Check SV11 circuit. (Wiring, OFF at one side only) • Check mispiping of discharge gas/suction gas main pipe. • Check Flow selector unit. • Check leakage of SVD valve and SVS valve. (Check leakage of SVDD valve and SVSS.) • Check mispiping of FS unit connecting pipe (Suction gas/Discharge gas), wiring between FS unit and indoor unit, and connection of connectors. • Check miswiring of SVS/SVD valves.
H06	H06	—	20	I/F	Low-pressure protective operation	All stop	Low-pressure Ps detected operation lower than 0.02MPa.	<ul style="list-style-type: none"> • Check full opening of service valve. (Discharge gas, suction gas and liquid side) • Check outdoor PMV clogging. (PMV1, 2) • Check SV2 circuit and SV4 circuit error. • Check low-pressure Ps sensor error. • Check indoor air filter clogging. • Check valve open of indoor PMV. • Check refrigerant pipe clogging. • Check outdoor fan operation. (All heating, mainly heating, part cooling operation) • Check refrigerant shortage. • Check clogging of circuit at auxiliary heat exchanger side. (PMV3, SV12, check valve) • Check 4-way valve error. (Reversal error) • Check mispiping of discharge gas/suction gas main pipe. • Check Flow selector unit. • Check miswiring of discharge gas/suction gas pipe to FS unit. • Check wiring between FS unit and indoor unit. • Check miswiring of SVD/SVS valves, misinstallation of coil. • Check opened status of SVS valve.

Check code				Detected position	Check code name	Status	Error detection condition	Check item (position)
Main remote controller	Outdoor 7-segment display		AI-NET central control remote controller					
	Check code	Sub-code						
H07	H07	—	d7	I/F	Protection for oil level drop detection	All stop	The operating compressor detected oil shortage continuously for 2 hours.	<p><Check all the outdoor units in the corresponding line.></p> <ul style="list-style-type: none"> • Check full opening of service valve of balance pipe. • Check connection and installation of TK1, TK2, TK3, and TK4 sensors. • Check characteristics of TK1, TK2, TK3, and TK4 resistance values. • Check gas leak and oil leak in the same line. • Check refrigerant stagnation in compressor. • Check error of SV3A, SV3B, SV3C, SV3D, and SV3E valves. • Check clogging of oil separator oil return circuit. • Check clogging of oil-equation circuit. <p><Check clogging of oil equation pipe between compressors.></p> <ul style="list-style-type: none"> • Check TS1, TS2 sensors (Miswiring and misinstallation of TS1 and TS2) • Check leakage of SV6 circuit. • Check FS unit. <p>Leakage of check valve of bypass between liquid pipe and discharge gas pipe Mispiping of discharge/suction gas connection Miswiring of SVD/SVS valve/Misinstallation of coil</p> <ul style="list-style-type: none"> • Check whether there is no setup missing of indoor unit in all cooling operation mode
H08	H08	01: TK1 sensor error 02: TK2 sensor error 03: TK3 sensor error 04: TK4 sensor error	d4	I/F	Oil level detective temp sensor error	All stop	• Resistance value of sensor is infinite or zero. (Open/Short)	<ul style="list-style-type: none"> • Check connection of TK1 sensor connector. • Check characteristics of TK1 sensor resistance value. • Check outdoor P.C. board (I/F) error.
						All stop	• Resistance value of sensor is infinite or zero. (Open/Short)	<ul style="list-style-type: none"> • Check connection of TK2 sensor connector. • Check characteristics of TK2 sensor resistance value. • Check outdoor P.C. board (I/F) error.
						All stop	• Resistance value of sensor is infinite or zero. (Open/Short)	<ul style="list-style-type: none"> • Check connection of TK3 sensor connector. • Check characteristics of TK3 sensor resistance value. • Check outdoor P.C. board (I/F) error.
						All stop	• Resistance value of sensor is infinite or zero. (Open/Short)	<ul style="list-style-type: none"> • Check connection of TK4 sensor connector. • Check characteristics of TK4 sensor resistance value. • Check outdoor P.C. board (I/F) error.
H14	H14	—	44	I/F	Compressor 2 case thermo operation	All stop	Compressor 2 case thermostat operated.	<ul style="list-style-type: none"> • Check compressor 2 case thermo circuit. (Connector, cable, P.C. board) • Check full opening of service valve. (Gas and liquid side) • Check outdoor PMV clogging. (PMV1, 2) • Check SV42 valve leak. • Check miscabling/misinstallation of SV41 and SV42. • Check valve opening of indoor PMV. • Check 4-way valve error. • Check refrigerant shortage. • Check SV11 circuit. (Wiring, OFF at one side only) • Check mispiping of discharge gas/suction gas main pipe. • Check Flow selector unit. <p>Check leakage of SVD valve and SVS valve. (Check leakage of SVDD valve and SVSS.) Check mispiping of FS unit connecting pipe (Suction gas/Discharge gas), wiring between FS unit and indoor unit, and connection of connectors. Check miswiring of SVS/SVD valves.</p>

Check code				Detected position	Check code name	Status	Error detection condition	Check item (position)
Main remote controller	Outdoor 7-segment display		AI-NET central control remote controller					
	Check code	Sub-code						
H16	H16	01: TK1 oil circuit system error 02: TK2 oil circuit system error 03: TK3 oil circuit system error 04: TK4 oil circuit system error	d7	I/F	Oil level detective circuit system error MG-SW error OCR operation	All stop	Temperature change of TK1 could not be detected though compressor 1 started the operation.	<ul style="list-style-type: none"> • Check TK1 sensor coming-off. • Check characteristics of TK1 sensor resistance value. • Check TK1, TK2, TK3, and TK4 misconnection. • Check operation error of SV3E valve. • Check capillary clogging of oil-equation circuit and operation error of stop valve. • Check refrigerant stagnation in compressor. • Check MG-SW or OCR.
							Temperature change of TK2 could not be detected though compressor 2 started the operation.	<ul style="list-style-type: none"> • Check TK2 sensor coming-off. • Check characteristics of TK2 sensor resistance value. • Check TK1, TK2, TK3, and TK4 misconnection. • Check SV3E valve operation. • Check capillary clogging of oil equalization circuit and check stop valve operation. • Check refrigerant stagnation in compressor shell. • Check MG-SW or OCR.
							Temperature change of TK3 could not be detected though compressor started the operation.	<ul style="list-style-type: none"> • Check TK3 sensor coming-off. • Check characteristics of TK3 sensor resistance value. • Check TK1, TK2, TK3, and TK4 misconnection. • Check SV3E valve operation. • Check capillary clogging of oil-equalization circuit and check valve operation. • Check refrigerant stagnation in compressor shell. • Check MG-SW or OCR.
							Temperature change of TK4 could not be detected though compressor started the operation, or the difference from other TK sensor changed for a constant time only within the specified range.	<ul style="list-style-type: none"> • Check TK4 sensor coming-off. • Check characteristics of TK4 sensor resistance value. • Check TK1, TK2, TK3, and TK4 misconnection. • Check SV3E valve operation. • Check capillary clogging of oil-equalization circuit and check valve operation. • Check refrigerant stagnation in compressor shell. • Check MG-SW or OCR.
L03	—	—	96	Indoor	Duplicated indoor center units	Corresponding unit only stops.	There are multiple center units in a group.	<ul style="list-style-type: none"> • Check indoor address. • Check the change of remote controller connection (Group/individual) after indoor address setup.
L04	L04	—	96	I/F	Duplicated outdoor line address	All stop	Line address setup is duplicated against the outdoor unit in different refrigerant pipe system.	<ul style="list-style-type: none"> • Check line address.
L05	—	—	96	I/F	Duplicated indoor units with priority (Displayed on indoor unit with priority)	All stop	Indoor units with priority were duplicated.	<ul style="list-style-type: none"> • Check display of indoor unit with priority.

MG-SW : Magnet Switch, OCR : Over-current Relay

Check code				Detected position	Check code name	Status	Error detection condition	Check item (position)
Main remote controller	Outdoor 7-segment display		AI-NET central control remote controller					
	Check code	Sub-code						
L06	L06	No. of indoor units with priority	96	I/F	Duplicated indoor units with priority (Displayed on the unit other than indoor unit with priority)	All stop	Indoor units with priority were duplicated.	<ul style="list-style-type: none"> • Check display of indoor unit with priority and outdoor unit.
L07	—	—	99	Indoor	Group line in individual indoor unit.	Corresponding unit only stops.	At least one indoor unit connected to a group existed in the individual indoor units.	<ul style="list-style-type: none"> • Check indoor address.
L08	L08	—	99	Indoor	Indoor group / address unset	Corresponding unit only stops.	Address was not yet set up.	<ul style="list-style-type: none"> • Check indoor address. <p>Note After installation, this code is displayed when the power is firstly turned on.</p>
L09	—	—	46	Indoor	Indoor capacity unset	Corresponding unit only stops.	Indoor unit capacity was unset.	Set up indoor capacity. (DN=11)
L10	L10	—	88	I/F	Outdoor capacity unset	All stop	On the I/F P.C. board for service, jumper line was not cut according to the model.	Check model setup on outdoor I/F P.C. board Assy for service.
L17	L17	—		I/F	Inconsistent models of outdoor units		Outdoor units of 1 series and those of 2 series were mixed.	<ul style="list-style-type: none"> • Check outdoor units.
L18	L18	Corresponding indoor address	8A	I/F	FS unit system error	Corresponding unit only stops.	An indoor unit which is not connected with FS unit is driving without setup for cooling only mode.	<ul style="list-style-type: none"> • Check setup of remote controller (DN=[OFF]). • Check FS unit. • Check pipe connection to FS unit. (Mispiping between discharge gas and suction gas) • Check miswiring/misinstallation of SVS/SVD valves.
L20	—	—	98	AI-NET, Indoor	Duplicated central control addresses	All stop	Duplicated central control addresses	<ul style="list-style-type: none"> • Check central control address. • Check network adaptor P.C. board. (In case of AI-NET)
L28	L28	—	46	I/F	Quantity over of connected outdoor units	All stop	There were more than four outdoor units.	<ul style="list-style-type: none"> • Check No. of connected outdoor units. (Max. 4 units per 1 system) • Check communication line between outdoor units. • Check outdoor P.C. board (I/F) error.
L29	L29	01: IPDU1 error 02: IPDU2 error 03: IPDU1, 2 errors 04: Fan IPDU error 05: IPDU1 + Fan IPDU error 06: IPDU2 + Fan IPDU error 07: All IPDU error or communication error between IPDU and I/F P.C. board, or outdoor I/F P.C. board error	CF	I/F	IPDU quantity error	All stop	No. of IPDU units detected when power was turned on were less.	<ul style="list-style-type: none"> • Check model setup for outdoor I/F service P.C. board. • Check connection of UART communication connector. • Check IPDU, fan IPDU, and I/F P.C. board error. <p>Note UART: Universal Asynchronous Receiver Transmitter</p>
L30	L30	Detected indoor address	b6	Indoor	Interlock in indoor unit from outside	Corresponding unit only stops.	<ul style="list-style-type: none"> • Outside error input terminal Detected signal to (CN80) for more 1 minute 	<ul style="list-style-type: none"> ■ Outside device is connected to connector (CN80): 1) Check outside device error. 2) Check indoor P.C. board error. ■ Outside device is not connected to connector (CN80): 1) Check indoor P.C. board error.
—	L31	—	—	I/F	Extended IC (Integrated Circuit) error	Operation continues.	P.C. board (I/F) parts error	Check indoor (I/F) P.C. board.

Check code				Detected position	Check code name	Status	Error detection condition	Check item (position)
Main remote controller	Outdoor 7-segment display		AI-NET central control remote controller					
	Check code	Sub-code						
P01	—	—	11	Indoor	Indoor fan motor error	Corresponding unit only stops.		<ul style="list-style-type: none"> • Check the lock of fan motor (AC fan). • Check cabling.
P03	P03	—	1E	I/F	Discharge temp TD1 error	All stop	Discharge temp (TD1) exceeded 115°C.	<ul style="list-style-type: none"> • Check full opening of outdoor service valves (Gas side, Liquid side). • Check clogging of outdoor PMV. (PMV1,2) • Check characteristics of TD1 sensor resistance value. • Check refrigerant shortage. • Check 4-way valve error. • Check leakage of SV41 circuit. • Check SV4 circuit. (Miswiring and misinstallation of SV41 and SV42) • Check leakage of SV5 circuit. • Check leakage of SV6 circuit. (Capillary clogging, valve operation error) • Check mispiping of discharge gas/suction gas main pipe. • Check Flow selector unit. <p>Check leakage of SVD valve and SVS valve. (Check leakage of SVDD valve and SVSS.)</p> <p>Check mispiping of FS unit connecting pipe (Suction gas/Discharge gas), wiring between FS unit and indoor unit, and connection of connectors.</p> <p>Check miswiring of SVS/SVD valves.</p>
P04	P04	01: Compressor 1 side 02: Compressor 2 side	21	I/F	Actuation of high-pressure SW	All stop	High-pressure SW actuated.	<ul style="list-style-type: none"> • Check Pd pressure sensor error. • Check full opening of outdoor service valves (Gas side, Liquid side). • Check outdoor fan error. • Check outdoor fan motor error. • Check clogging of outdoor PMV. (PMV1,2) • Check clogging of indoor/outdoor heat exchangers. • Check short-circuiting of outdoor suction/discharge air. • Check clogging of SV2 circuit. • Check outdoor P.C. board (I/F) error. • Check indoor fan system error. (Cause of air volume decrease) • Check opening of indoor PMV. • Check miscabling of communication line between indoor and outdoor. • Check operation error of check valve of discharge pipe. • Check SV4 valve circuit. • Check SV5 valve circuit. • Check refrigerant overcharge. • Check mispiping of discharge gas/suction gas main pipe. • Check circuit clogging at auxiliary heat exchanger side. (PMV3, SV12, check valve) • Check FS unit. <p>Check clogging of SVD valve and operation error.</p> <p>Check wiring inside of FS unit. (SVD/SVS coil miswiring, etc.)</p> <p>Check wiring between FS unit and indoor unit. (Miswiring, Disconnection, Wiring missing)</p>
P05	P05	01: Power supply open phase 02: Power supply negative phase	AF	I/F	Open phase negative phase	All stop	<ul style="list-style-type: none"> • Open phase was detected when the power turned on. • Negative phase was detected when the power turned on. 	<ul style="list-style-type: none"> • Check outdoor power line. • Check outdoor P.C. board (I/F) error.

Check code				Detected position	Check code name	Status	Error detection condition	Check item (position)
Main remote controller	Outdoor 7-segment display		AI-NET central control remote controller					
	Check code	Sub-code						
P07	P07	01: Compressor 1 side 02: Compressor 2 side	1C	I/PDU I/F	Heat sink overheat error	All stop	IGBT built-in temp sensor (TH) was overheated.	<ul style="list-style-type: none"> • Check power voltage. • Check outdoor fan system error. • Check clogging of heat sink cooling duct. • Check fixation between IGBT and heat sink. (Check screwing and contact.) • Check IPDU error.(IGBT built-in temp sensor (TH) error).
P10	P10	Indoor address with trouble	Ob	Indoor	Indoor overflow error	All stop	<ul style="list-style-type: none"> • Float switch operated. • Float switch circuit disconnected or the connector came off. 	<ul style="list-style-type: none"> • Check the float switch connector. • Check operation of drain pump unit. • Check the drain pump circuit. • Check clogging of drain pipe. • Check indoor P.C. board error.
P12	—	—	11	Indoor	Indoor fan motor error	Corresponding unit only stops.	<ul style="list-style-type: none"> • The value of motor speed deviated from target value was detected for certain time. • Over-current protection operated. 	<ul style="list-style-type: none"> • Check connection of fan connector and wiring. • Check fan motor error. • Check indoor P.C. board error. • Check influence of outside air control. • Check indoor type code (DN=10) and the capacity code (DN=11).
P13	P13	—	47	I/F	Outdoor liquid back detection error	All stop	<p><In heating> While the system is operating in HEAT mode, outdoor PMV of which opening degree was 100 pulse or less for a certain time.</p>	<ul style="list-style-type: none"> • Check full close operation of outdoor PMV (1, 2). • Check Pd and Ps sensor error. • Check clogging of SV2 circuit. • Check clogging of 4-way valve error circuit. • Check outdoor P.C. board (I/F) error. • Check capillary clogging of oil return circuit from oil separator. • Check TS1, TS2 sensor error.
P15	P15	01: TS condition	AE	I/F	Gas leak detection (TS1 condition)	All stop	<p>Suction temp exceeded the judgment standard temp for 10 minutes or more.</p> <p><TS error judgment standard temperature> In cooling operation: 60°C or higher In heating operation: 40°C or higher</p>	<ul style="list-style-type: none"> • Check refrigerant shortage. • Check full open of outdoor service valves (gas side, liquid side). • Check outdoor PMV clogging (PMV1, 2). • Check characteristics of TS1 sensor resistance value. • Check 4-way valve error. • Check leakage of SV4 circuit. • Check leakage of SV5 circuit. • Check mispiping of discharge gas/suction gas main pipe. • Check Flow selector unit. • Check leakage of SVD valve and SVS valve. (Check leakage of SVDD valve and SVSS.) • Check mispiping of FS unit connecting pipe (Suction gas/Discharge gas), wiring between FS unit and indoor unit, and connection of connectors. • Check miswiring of SVS/SVD valves.
		02: TD condition	AE	I/F	Gas leak detection (TD condition)	All stop	<p>Discharge temperature TD1 or TD2 was continuously 108°C or higher for 10 minutes.</p>	<ul style="list-style-type: none"> • Check refrigerant shortage. • Check outdoor PMV clogging (PMV1, 2). • Check characteristics of TD1, TD2 sensor resistance value. • Check indoor air filter clogging. • Check pipe clogging. • Check SV4 circuit (Valve leakage, misinstallation) • Check mispiping of discharge gas/suction gas main pipe. • Check Flow selector unit. • Check leakage of SVD valve and SVS valve. (Check leakage of SVDD valve and SVSS.) • Check mispiping of FS unit connecting pipe (Suction gas/Discharge gas), wiring between FS unit and indoor unit, and connection of connectors. • Check miswiring of SVS/SVD valves.

Check code				Detected position	Check code name	Status	Error detection condition	Check item (position)
Main remote controller	Outdoor 7-segment display		AI-NET central control remote controller					
	Check code	Sub-code						
P17	P17	—	bb	I/F	Discharge temp TD2 error	All stop	Discharge temperature (TD2) exceeded 115°C.	<ul style="list-style-type: none"> • Check full opening of outdoor service valves (gas side, liquid side). • Check clogging of outdoor PMV (PMV1, 2). • Check characteristics of TD2 sensor resistance value. • Check 4-way valve error. • Check leakage of SV42 circuit. • Check SV4 circuit. (Miscabling and misinstallation of SV41 and SV42) • Check leakage of SV5 valve circuit. • Check SV6 circuit. (Clogging, Valve operation error) • Check mispiping of discharge gas/suction gas main pipe. • Check Flow selector unit. • Check leakage of SVD valve and SVS valve. (Check leakage of SVDD valve and SVSS.) • Check mispiping of FS unit connecting pipe (Suction gas/Discharge gas), wiring between FS unit and indoor unit, and connection of connectors. • Check miswiring of SVS/SVD valves.
P19	P19	Detected outdoor unit No.	8	I/F	4-way valve operation error	All stop	When abnormal refrigerating cycle data was detected in heating	<ul style="list-style-type: none"> • Error of 4-way valve error • Check coil error and connector connection of 4-way valve. • Check characteristics of TS1/TE1 sensor resistance value. • Check characteristics of Pd, Ps pressure sensor output voltage. • Check misconnection of TE1 and TL sensors. • Check Flow selector unit. • Check leakage of SVD valve and SVS valve. (Check leakage of SVDD valve and SVSS.) • Check mispiping of FS unit connecting pipe (Suction gas/Discharge gas).
P20	P20	—	22	I/F	High-pressure protective operation	All stop	Pd sensor detected 3.6MPa or more.	<ul style="list-style-type: none"> • Check Pd pressure sensor error. • Check full opening of service valves (Gas side, Liquid side). • Check outdoor fan error. • Check outdoor fan motor error. • Check clogging of outdoor PMV. (PMV1,2) • Check clogging of indoor/outdoor heat exchangers. • Check air short-circuiting in outdoor unit. • Check clogging of SV2 circuit. • Check outdoor P.C. board (I/F) error. • Check indoor fan system error. (Cause of air volume decrease) • Check valve opening of indoor PMV. • Check miscabling of communication line between indoor and outdoor. • Check operation error of check valve of discharge pipe. • Check circuit of gas balance SV4 valve. • Check mispiping of discharge gas/suction gas main pipe. • Check operation error of check valve of discharge gas pipe. • Check circuit of SV11 valve. (Clogging, OFF at one side only) • Check clogging of circuit at auxiliary heat exchanger side. (Miswiring, Disconnection, Wiring missing) • Check Flow selector unit. • Check leakage of SVD valve and operation error. • Check wiring inside of FS unit. (SVD/SVS coil miswiring, etc.) • Check wiring between FS unit and indoor unit. (Miswiring, Disconnection, Wiring missing) • Check circuit of SV5 valve. • Check refrigerant overcharge.

Check code				Detected position	Check code name	Status	Error detection condition	Check item (position)
Main remote controller	Outdoor 7-segment display		AI-NET central control remote controller					
	Check code	Sub-code						
P22	P22	0: IGBT shortage 1: Position detection circuit error 3: Motor lock error 4: Motor current error detection C: TH sensor temp. error D: TH sensor error E: Vdc error	1A	FAN-IPDU	Outdoor fan IPDU error	All stop	(Sub-code: 0) • Short-circuit current was detected at start time. • Short-circuit current was detected when checking IGBT short-circuit before start time.	• Check fan motor. (Interphase short-circuit) • Check fan IPDU error.
						All stop	(Sub-code: 1) • The standard value of detection circuit of fan IPDU current fluctuated at start time.	• Check fan IPDU error.
						All stop	(Sub-code: 3) • Abnormal current was detected within 30 seconds after start time.	• Check fan motor. (Lock, phase missing) • Check cause of abnormal overload at start time. • Check connection of connector to fan motor.
						All stop	(Sub-code: 4) • Short-circuit current was detected when 2 seconds or more passed after start time. • Over-current was detected when 30 seconds or more passed after start time.	• Check power supply voltage. • Check fan IPDU error.
						All stop	(Sub-code: C) • Heat sink sensor (TH) of fan IPDU detected 95°C error.	• Check outdoor fan system. • Check fan IPDU error. • Check fixation between fan IPDU and heat sink.
						All stop	(Sub-code: D) • Heat sink sensor (TH) of fan IPDU detected short-circuiting or open.	• Check fan IPDU error.
						All stop	(Sub-code: E) • Input power supply voltage of the fan IPDU over the setup value was detected. • Input power supply terminal of the fan IPDU was unconnected. • Power supply P.C. board error of the fan IPDU	• Check input power supply voltage of the fan IPDU. • Check power supply P.C. board error of the fan IPDU. • Check error of external electrolytic condenser.
P26	P26	01: Compressor 1 side 02: Compressor 2 side	14	IPDU	G-Tr short-circuit protection error	All stop	Instantaneous over-current was detected when compressor started.	• Check connector connection and wiring on IPDU P.C. board. • Check compressor error and defect of compressor coil. • Check outdoor P.C. board (IPDU) error.
P29	P29	01: Compressor 1 side 02: Compressor 2 side	16	IPDU	Compressor position detection circuit error	All stop	Position was not normally detected.	• Check connector connection and wiring. • Check compressor error and defect of compressor coil. • Check P.C. board (IPDU) error.
P31	—	—	47	Indoor	Other indoor error (Group follower unit error)	Corresponding unit only stops.	E07/L07/L03/L08 was detected when other indoor unit in the group was defective.	• Check indoor P.C. board.

Error detected by TCC-LINK central control device

Check code				Detected position	Check code name	Status	Error detection condition	Check item (position)
Display on central control device	Outdoor 7-segment display		AI-NET central control remote controller					
	Check code	Sub-code						
C05	—		—	TCC-LINK	TCC-LINK central control device transmission error	Operation continued.	Signal is not transmit from central control device.	<ul style="list-style-type: none"> • Check central control device error. • Check communication line error of central control device. • Check setup of terminator resistor.
C06	—		—		TCC-LINK central control device receiving error	Operation continued.	Signal is not received from central control device.	<ul style="list-style-type: none"> • Check central control device error. • Check communication line error of central control device. • Check setup of terminator resistor. • Check the power of connecting destination connected device. • Check P.C. board error of the connected device.
C12	—		—	HA control interface	Interface batch alarm of HA control interface	Operation continued.	Error was input in HA control interface	<ul style="list-style-type: none"> • Check error input.
P30	Differs according to error contents of the with alarm			TCC-LINK	Follower unit error of group control	Operation continued.	An error occurred in follower unit of the group control. ([P30] is displayed only on the central remote controller.)	<ul style="list-style-type: none"> • Check the check code of the unit with alarm.
	(L20 is displayed.)				Duplicated central control address	Operation continued.	Central control addresses were duplicated.	<ul style="list-style-type: none"> • Check the address setup.

Error detected by AI-NET central control device

Check code				Detected position	Check code name	Status	Error detection condition	Check item (position)
Main remote controller	Outdoor 7-segment display		AI-NET central control remote controller					
	Check code	Sub-code						
—	—	—	97	AI-NET	AI-NET communication system error	Operation continued.	E07/L07/L03/L08 was detected when other indoor unit in the group was defective.	<ul style="list-style-type: none"> • Check multiple network adapters. • Check wire and miscabling of remote controller: Only one network adapter can be connected to communication line of remote controller.
—	—	—	99	AI-NET	Duplicated network adapters	Operation continued.	Multiple network adapters were connected to communication line of remote controller. (Detected at central controller side)	<ul style="list-style-type: none"> • Check communication line, miscabling, and power of indoor unit. • Check communication. (X, Y terminals) • Check network adapter P.C. board. • Check the central controller (Central control remote controller, etc.)
—	—	—	b7	AI-NET	Error in indoor group	Operation continued.	Error of follower unit in the group	<ul style="list-style-type: none"> • Check follower unit in the group.

* These errors are concerned to communication of remote controllers (A, B) and central system [AI-NET X, Y], and the main remote controller displays [E01], [E02], [E03], [E09], or [E18] in some cases and displays none in other cases according to the contents.

Cautions when servicing for compressor

1. Removing wires of both compressors check output of the inverter as described below.

How to check inverter output

1. Turn off the power supply.
2. Remove the compressor lead cables from the compressors.
(Be sure to remove lead cables of both compressors.)
3. Turn on the power supply and start cooling or heating operation.
In this time, pay attention to touch the fasten receptacle terminal lug of the compressor leads so that they do not contact with other fasten receptacle terminal lug or other position (unit cabinet, etc.).
4. Check output voltage of compressor lead cable at inverter side.

When the output voltage does not satisfy the criteria in the following table, replace IPDU P.C. board.

No.	Measured position	Criteria
1	Between Red and White	400 V to 650 V
2	Between White and Black	400 V to 650 V
3	Between Black and Red	400 V to 650 V

- * After checking the output, when connecting the compressor lead again to the compressor terminal, check surely there is no distortion on the fasten terminal lug. If it is loosened, caulk it with pinchers, etc and then connect lead to the terminal.

How to check resistance of compressor winding


1. Turn off the power supply.
2. Remove the compressor lead cables from the compressors.
In each compressor, check the winding resistance between phases and resistance of the outdoor cabinet using a tester.
 - Is not it earthed?
→ Normal if $10\text{M}\Omega$ or more are measured
 - Is not shorted between windings?
→ Normal if 0.7Ω to 0.9Ω are measured (Use a precise digital tester.)

How to check the outdoor fan motor

1. Turn off the power supply.
2. Take off three connectors (U.V.W) from the fan IPDU P.C. board.
3. Turn the fan with hands. If the fan does not turn, it is a fan motor error (Lock). Replace the fan motor.
If the fan turns, measure the winding resistance between the phases of the connector (Motor winding) with a tester. If 13 to 33Ω are measured, it is normal. (Use a digital tester.)


7-5. Diagnosis Procedure for Each Check Code

Check code	Check code name	Cause of operation
[E01] / [-] (d07 / AI-NET)	Communication error between indoor and remote controller (Detected at remote controller side)	<ol style="list-style-type: none"> 1. Remote controller inter-unit cable error 2. Indoor power error 3. Indoor P.C. board error 4. Remote controller address setup error 5. Remote controller P.C. board error

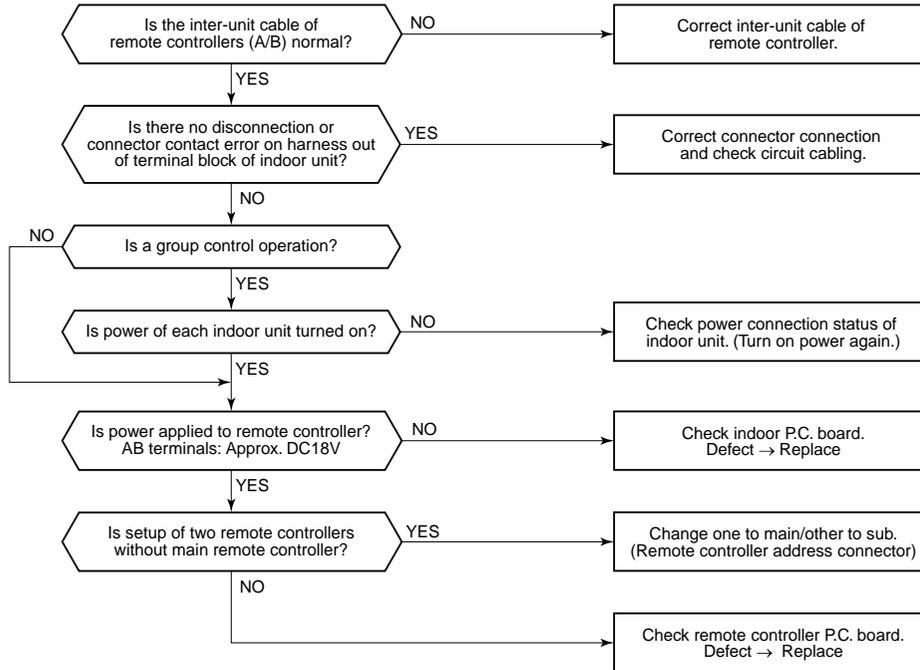

Check code	Check code name	Cause of operation
[E02] / [-] (d07 / AI-NET)	Remote controller sending error	Signal could not be sent to indoor unit. Check the communication wire of the remote controller.


* It is not displayed on 7-segment display of the central control controller.

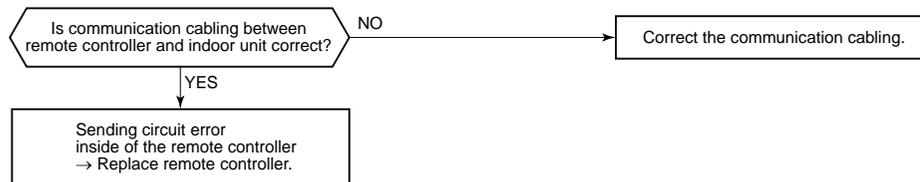

Check code	Check code name	Cause of operation
[E03] / [97] (d07 / AI-NET)	Communication error between indoor and remote controller (Detected at indoor side)	No communication from remote controller and communication adaptor

This error is detected when the indoor unit cannot receive a signal from the remote controller. Check communication wires of the remote controllers A and B. As communication is impossible, this check code [E03] is not displayed on the main remote controller. It is displayed on TCC-LINK central controller.


Check code	Check code name	Cause of operation
[E04] / [04] (d07 / AI-NET)	Indoor/Outdoor communication circuit error (Detected at indoor side)	<ol style="list-style-type: none"> 1. Power of outdoor unit was firstly turned on. 2. Connection error of communication line between indoor and outdoor 3. End terminal resistance setup error on communication between indoor and outdoor 4. Address setup error

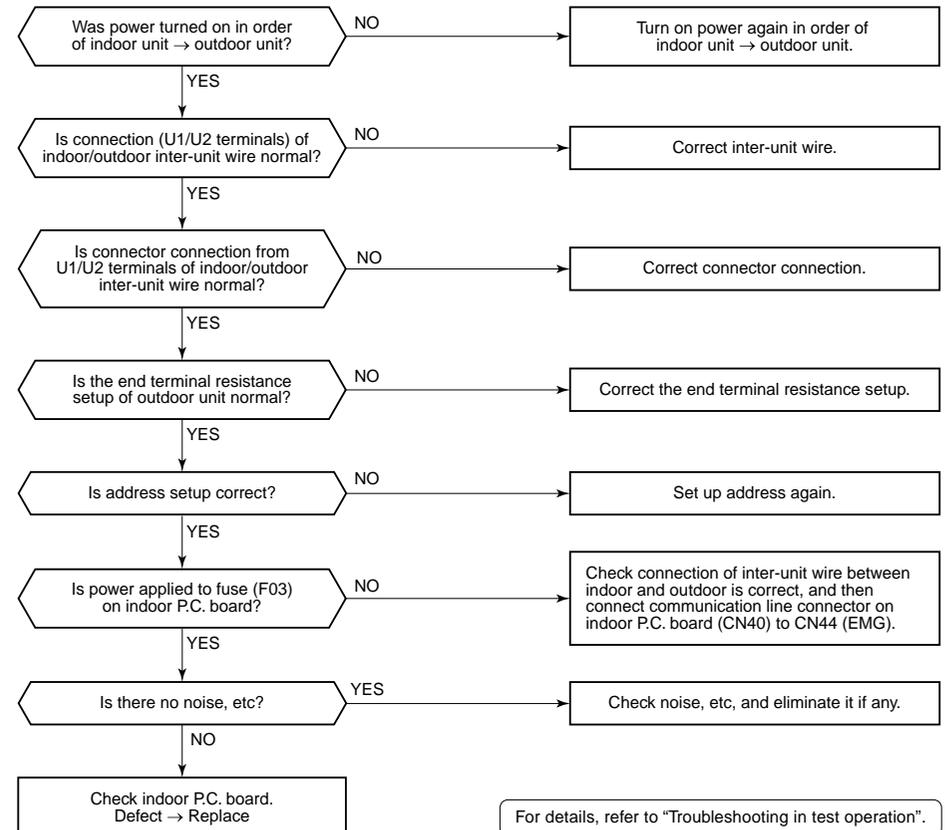

For details, refer to "Troubleshooting in test operation".


Check code	Check code name	Cause of operation
[E06] / [04] (d07 / AI-NET)	Decreased number of indoor units	<ol style="list-style-type: none"> 1. Communication lines (U1, U2) connection error between indoor and outdoor 2. Connector connection error of communication for indoor P.C. board 3. Connector connection error of communication for outdoor I/F board 4. Power supply of indoor unit (Is power turned on?)

Sub-code: No. of indoor units which received signals normally

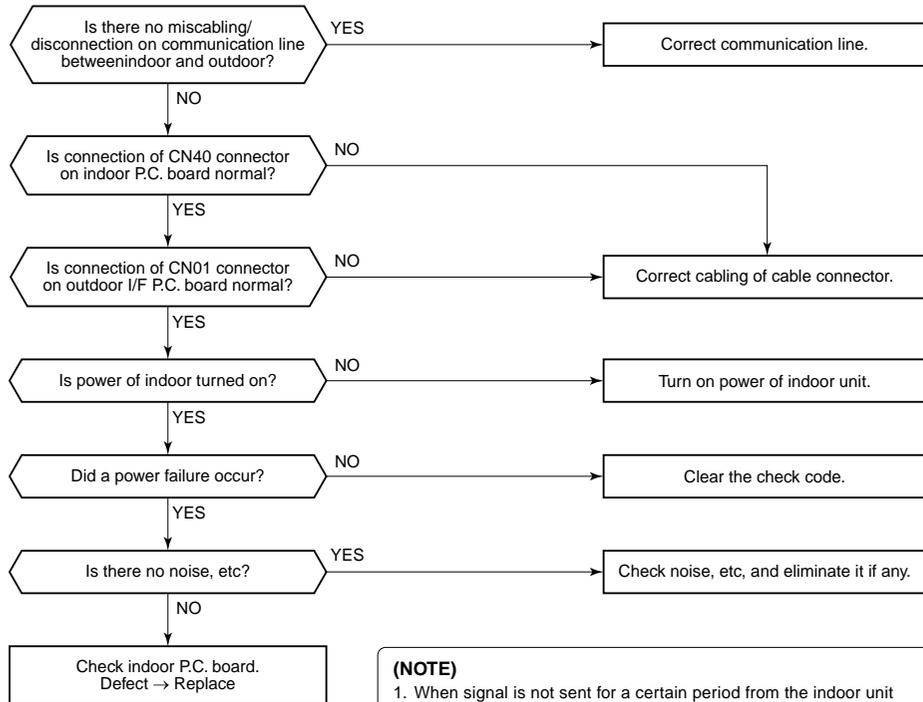

(NOTE)
1. When signal is not sent for a certain period from the indoor unit which has used to send signals normally, [E06] is displayed.


Check code	Check code name	Cause of operation
[E07] / [-] (d07 / AI-NET)	Indoor/Outdoor communication circuit error (Detected at outdoor side)	<ol style="list-style-type: none"> 1. Indoor/outdoor communication end terminal resistance setup error 2. Indoor/outdoor communication connection error

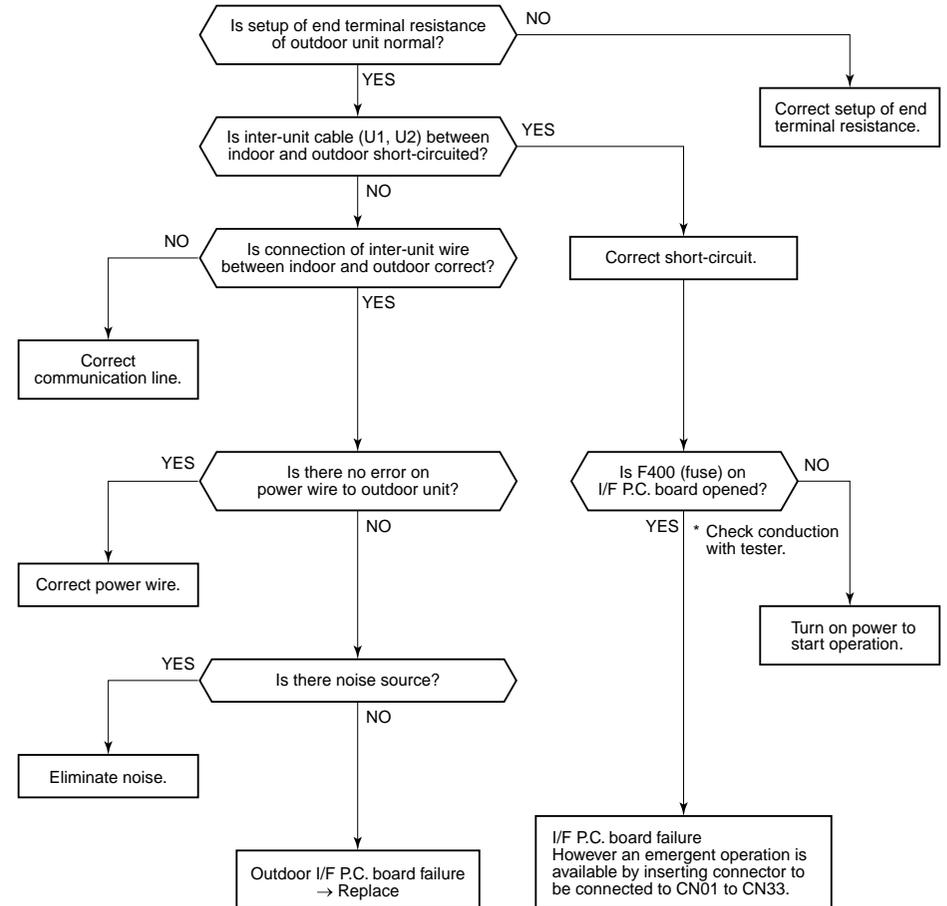


Check code	Check code name	Cause of operation
[E08] / [96] (d07 / AI-NET)	Duplicated indoor addresses	Indoor addresses are duplicated.

Sub-code: Duplicated indoor address


Using a main remote controller (RBC-AMT21E), check the setup item codes (DN code) 12, 13, and 14. When there is no address duplication, check to the following flowchart.

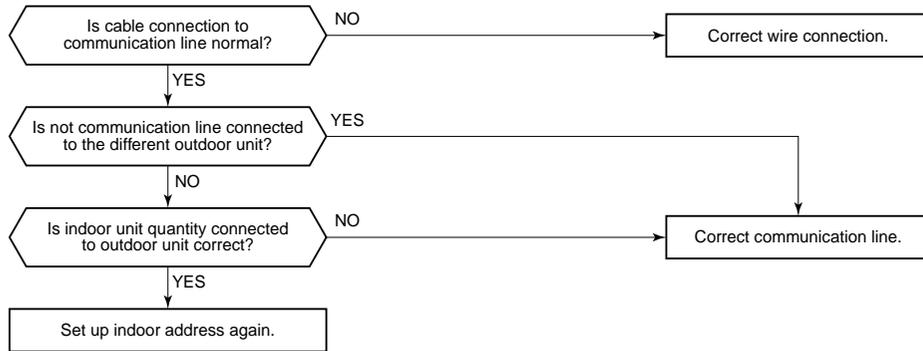

Check code	Check code name	Cause of operation
[E09] / [99] (d07 / AI-NET)	Duplicated master remote controller	Setup of master remote controller is duplicated.

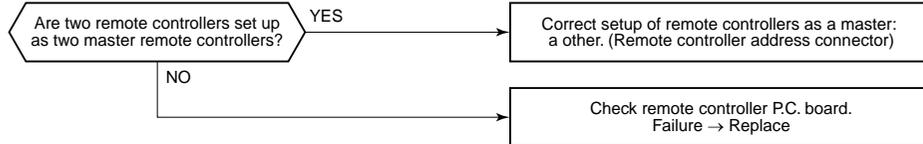


Check code	Check code name	Cause of operation
[E10] / [CF] (d07 / AI-NET)	Communication error in indoor P.C. board A'ssy	Indoor P.C. board error A'ssy failure

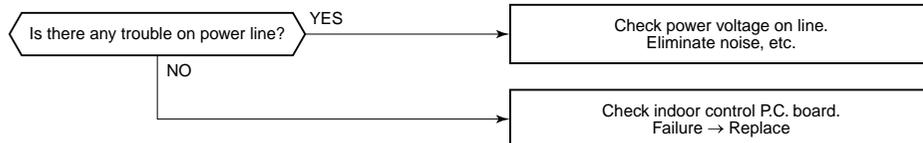


Check code	Check code name	Cause of operation
[E12] / [42] (d07 / AI-NET)	Automatic address start error	<ol style="list-style-type: none"> When indoor automatic address started, other refrigerant circuit system was setting automatic address. (Sub code : 01) When outdoor automatic address started, the indoor automatic address was being set. (Sub-code: 02)

Sub-code: 01: Communication between indoor and outdoor 02: Communication between outdoor units

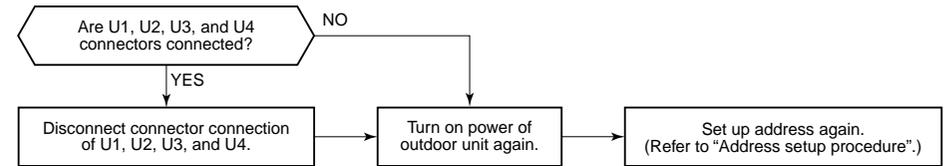


Check code	Check code name	Cause of operation
[E15] / [42] (d07 / AI-NET)	No corresponding indoor unit during automatic address	<ol style="list-style-type: none"> Communication line connection error between indoor and outdoor. Indoor power system error Noise from surrounding devices Power failure Indoor P.C. board error

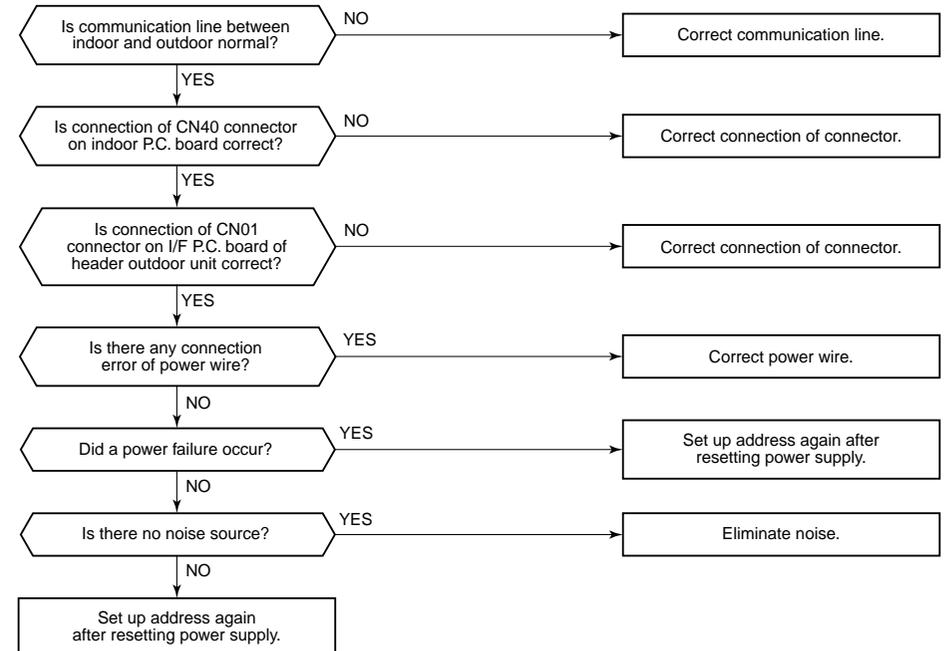

Check code	Check code name	Cause of operation
[E16] / [89] (d07 / AI-NET)	Connected indoor units capacity over	1. There are 48 or more connected indoor units. 2. Capacity over of total connected indoor units. 3. Incorrect setup of indoor/outdoor capacity


Sub-code: 00 : Capacity over 01 : ~ : Number of connected indoor units

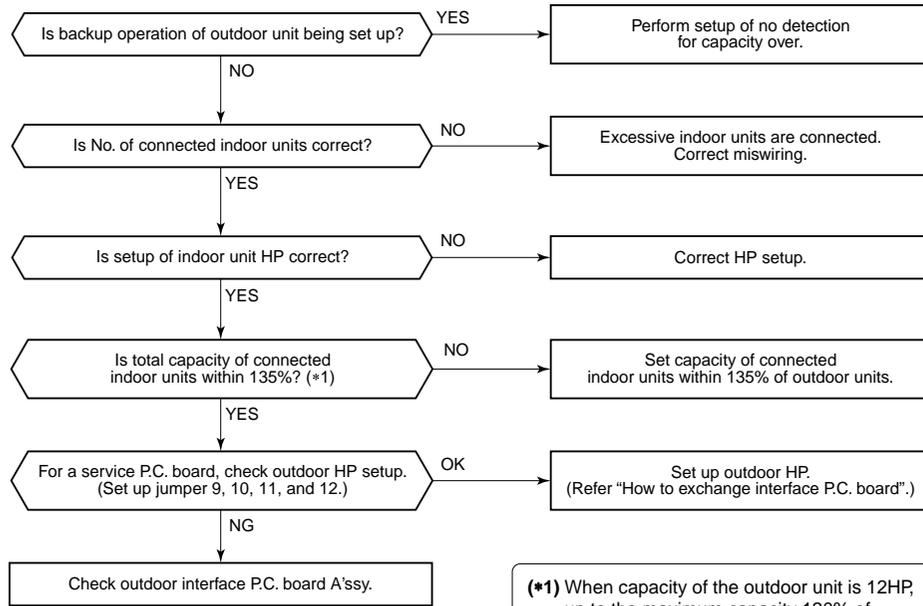

(*1) When capacity of the outdoor unit is 12HP, up to the maximum capacity 120% of indoor units can be connected.


70

Check code	Check code name	Cause of operation
[E18] / [97/99] (d07 / AI-NET)	Communication error between indoor header and follower	Regular communication between indoor header and follower is unavailable.

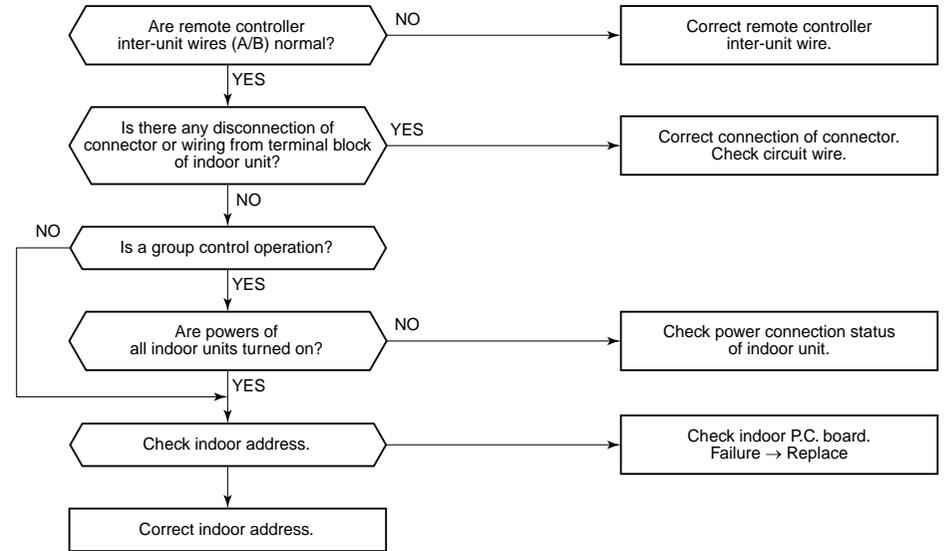

Check code	Check code name	Cause of operation
[E19] / [96] (d07 / AI-NET)	Header outdoor units quantity error	1. Misconnection of inter-unit cable between indoor and outdoor 2. Outdoor I/F P.C. board error

Sub-code: 00: No header unit 02: Two or more header units

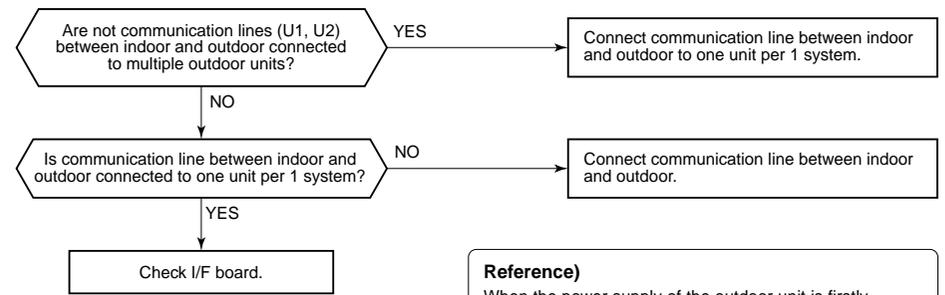


Reference)
When the power supply of the outdoor unit is firstly turned on, the check code [E19 00] is displayed until the power supplies of the indoor units are turned on. However it is not an error. If the power supplies of the indoor units are turned on, the check code is automatically reset.

Check code	Check code name	Cause of operation
[E20] / [42] (d07 / AI-NET)	Unit connected to other line during automatic address	When starting automatic indoor address, a device in other line is connected.

Sub-code: 01: Connection of outdoor in other line 02: Connection of indoor unit in other line

Separate the wire between lines according to address setup method.

Check code	Check code name	Cause of operation
[E23] / [15] (d07 / AI-NET)	Communication sending error between outdoor units	1. Inter-unit cable connection error between outdoor units 2. Communication connector connection error between outdoor units, I/F P.C. board error 3. End terminal resistance setup error between outdoor units

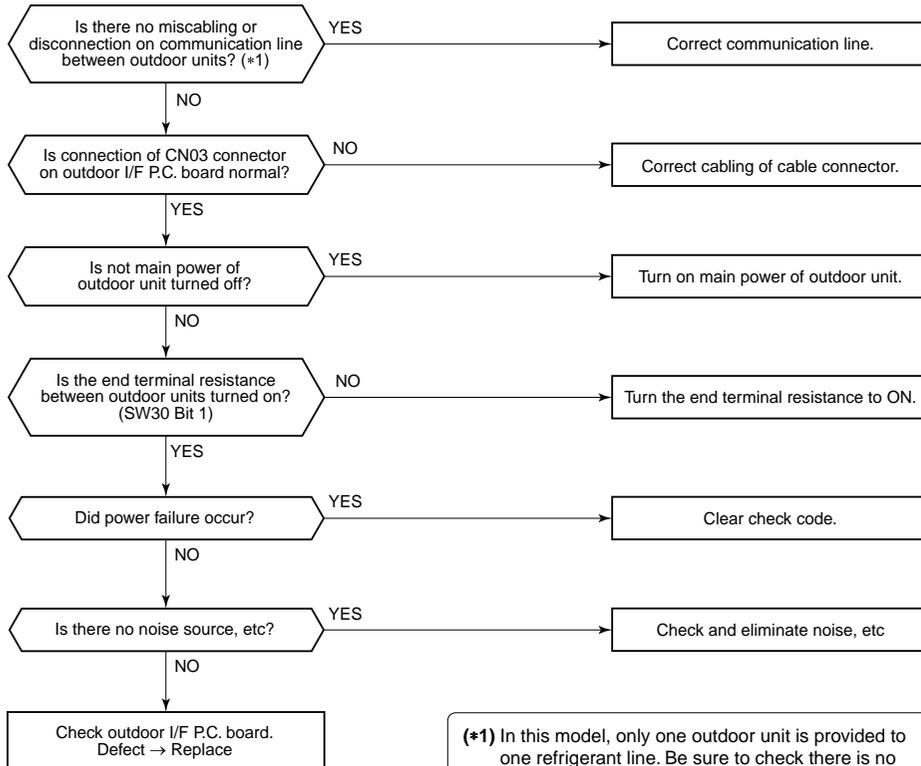


(*1) In this model, only one outdoor unit is provided to one refrigerant line. Be sure to check there is no communication connection with outdoor unit in the other refrigerant line.

Check code	Check code name	Cause of operation
[E25] / [15] (d07 / AI-NET)	Duplicated address setup of terminal outdoor units	Addresses are duplicated by manual setting of outdoor address

Never set up the outdoor address manually.

Check code	Check code name	Cause of operation
[E26] / [15] (d07 / AI-NET)	Decrease of connected outdoor units	1. Outdoor unit backup setup 2. Outdoor power error 3. Communication line connection error between outdoor units 4. Connector connection error for communication 5. Outdoor I/F P.C. board error

Sub-code: No. of outdoor units which received signals normally

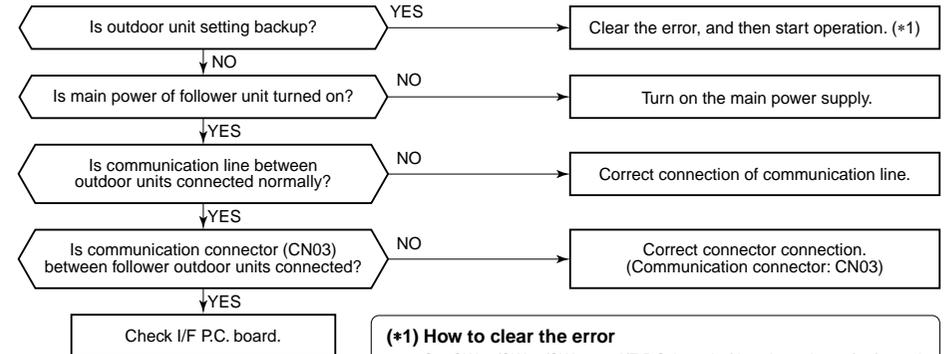

(*1) How to clear the error

Set SW01/SW02/SW03 on I/F P.C. board of header unit to 2/16/1, and push SW04 for 5 seconds or more. (7-segment display: [Er.] [CL])

• In this model, only one outdoor unit is provided to one refrigerant line. Be sure to check there is no communication connection with outdoor unit in the other refrigerant line.

Check code	Check code name	Cause of operation
[E28] / [d2] (d07 / AI-NET)	Terminal outdoor unit error	Terminal unit error

Sub-code: Detected outdoor unit number

SA n error occurred on the terminal unit. Confirm the check code of the terminal unit using 7-segment display on the I/F P.C. board of the terminal unit and check it according to the diagnostic procedure for each check code.

<How to specify the terminal outdoor unit on which error occurred>

Under condition that [E28] is displayed on the 7-segment display of the header unit, when pushing SW04 for 1 second or more, the fan of the outdoor unit which stopped due to the error rotates. If pushing SW05 alone, fan running is released.

Check code	Check code name	Cause of operation
[F04] / [19] (d07 / AI-NET)	TD1 sensor error	TD1 sensor Open/Short

This error code means detection of Open/Short of TD1 sensor. Check disconnection of circuit for connection of connector (TD1 sensor: CN502, White) and characteristics of sensor resistance value. (Refer to Outdoor unit temperature sensor characteristics.)
If sensor is normal, replace outdoor I/F P.C. board.

Check code	Check code name	Cause of operation
[F05] / [A1] (d07 / AI-NET)	TD2 sensor error	TD2 sensor Open/Short

This error code means detection of Open/Short of TD2 sensor. Check disconnection of circuit for connection of connector (TD2 sensor: CN503, Pink) and characteristics of sensor resistance value. (Refer to Outdoor unit temperature sensor characteristics.)
If sensor is normal, replace outdoor I/F P.C. board.

Check code	Check code name	Cause of operation
[F06] / [18] (d07 / AI-NET)	TE1 sensor error	TE1 sensor Open/Short

This error code means detection of Open/Short of TE1 sensor. Check disconnection of circuit for connection of connector (TE1 sensor: CN505, Green) and characteristics of sensor resistance value. (Refer to Outdoor unit temperature sensor characteristics.)
If sensor is normal, replace outdoor I/F P.C. board.

Check code name	Check code name	Cause of operation
[F07] / [18] (d07 / AI-NET)	TL sensor error	TL sensor Open/Short

This error code means detection of Open/Short of TL sensor. Check disconnection of circuit for connection of connector (TL sensor: CN521, White) and characteristics of sensor resistance value. (Refer to Outdoor unit temperature sensor characteristics.)
If sensor is normal, replace outdoor I/F P.C. board.

Check code name	Check code name	Cause of operation
[F08] / [1b] (d07 / AI-NET)	TO sensor error	TO sensor Open/Short

This error code means detection of Open/Short of TO sensor. Check disconnection of circuit for connection of connector (TO sensor: CN507, Yellow) and characteristics of sensor resistance value. (Refer to Outdoor unit temperature sensor characteristics.)
If sensor is normal, replace outdoor I/F P.C. board.

Check code name	Check code name	Cause of operation
[F10] / [0C] (d07 / AI-NET)	Indoor TA sensor error	TA sensor Open/Short

This error code means detection of Open/Short of TA sensor. Check disconnection of circuit for connection of connector (TA sensor: CN104, Yellow) and characteristics of sensor resistance value. (Refer to Outdoor unit temperature sensor characteristics.)
If sensor is normal, replace indoor P.C. board.

Check code name	Check code name	Cause of operation
[F12] / [A2] (d07 / AI-NET)	TS sensor error	TS1, TS2 sensor Open/Short

Sub-code: 01: TS1 sensor 02: TS2 sensor


This error code means detection of Open/Short of TS sensor. Check disconnection of circuit for connection of connector (TS1 sensor: CN504, White TS2 sensor: CN522, Black) and characteristics of sensor resistance value. (Refer to Outdoor unit temperature sensor characteristics.)
If sensor is normal, replace outdoor I/F P.C. board.

Check code name	Check code name	Cause of operation
[F13] / [43] (d07 / AI-NET)	TH sensor error	IGBT built-in sensor error in A3-IPDU

Sub-code: 01: Compressor 1 side 02: Compressor 2 side


This error code means IGBT built-in temperature sensor error. Check connection of connectors CN06 on IPDU P.C. board and CN600 on I/F P.C. board.
If sensor is normal, replace IPDU P.C. board.

Check code name	Check code name	Cause of operation
[F15] / [18] (d07 / AI-NET)	Outdoor temp sensor miscabling (TE1, TL)	1. Misinstallation and misconnection of TE1 sensor and TL sensor 2. Resistance characteristics error of TE1 sensor and TL sensor 3. Outdoor P.C. board (I/F) error

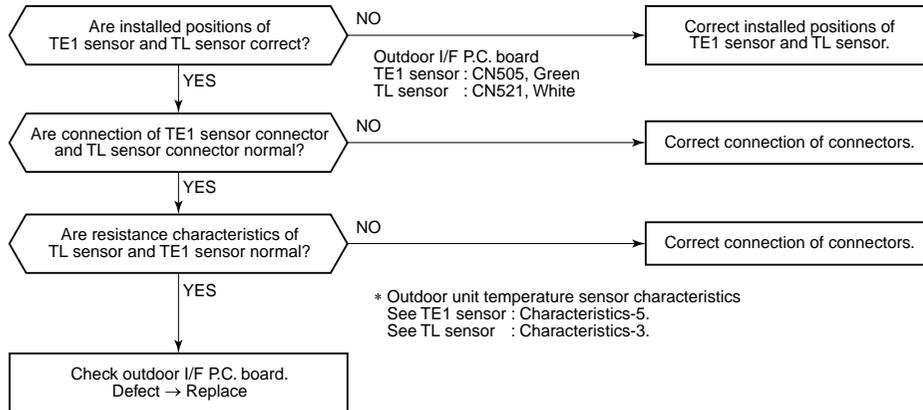


* TE1 sensor : Outdoor heat exchanger temp sensor
TL sensor : Temp sensor between liquid tanks of outdoor PMV1/2

Check code name	Check code name	Cause of operation
[F16] / [43] (d07 / AI-NET)	Outdoor pressure sensor miscabling (Pd, Ps)	1. High-pressure Pd sensor and low-pressure sensor Ps are exchanged. 2. Output voltage of each sensor is zero.

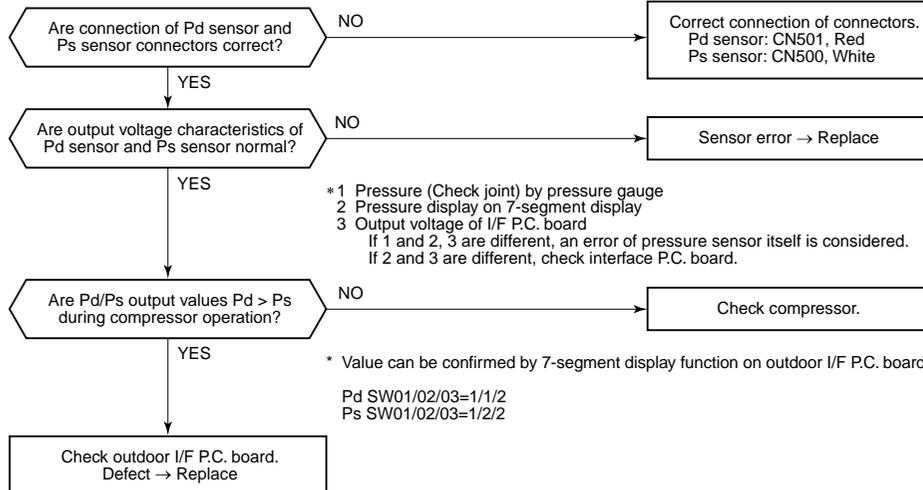


Check code name	Check code name	Cause of operation
[F23] / [43] (d07 / AI-NET)	Ps sensor error	Output voltage error of Ps sensor

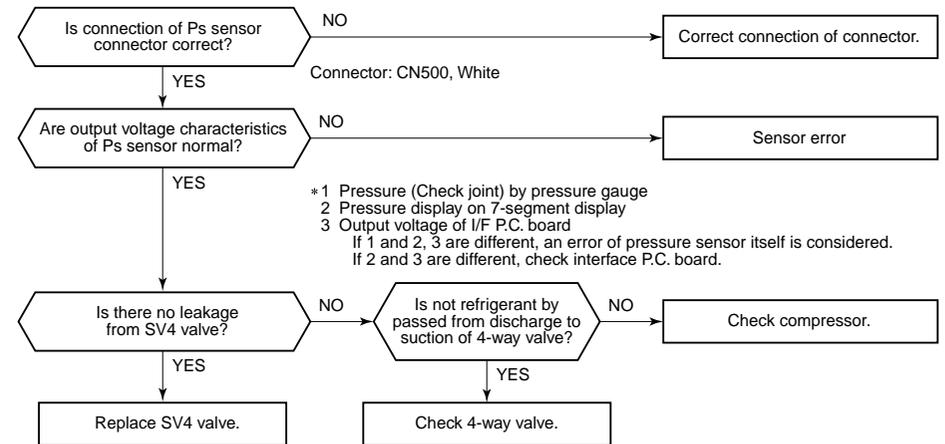

Check code name	Check code name	Cause of operation
[F24] / [43] (d07 / AI-NET)	Pd sensor error	Output voltage error of Pd sensor

It is output voltage error of Pd sensor. Check disconnection of connection of connector (Pd sensor: CN501) circuit and output voltage of sensor.
If the sensor is normal, replace outdoor I/F P.C. board.

Check code name	Check code name	Cause of operation
[F29] / [12] (d07 / AI-NET)	Indoor other error	Indoor P.C. board error EEROM error


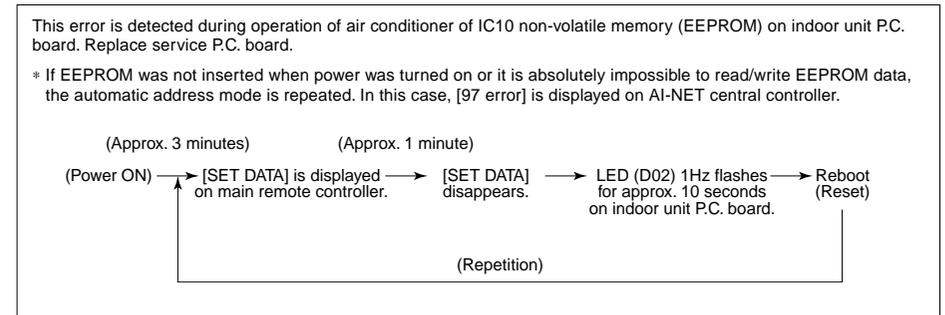


Check code name	Check code name	Cause of operation
[F31] / [1C] (d07 / AI-NET)	Outdoor EEPROM error	1. Outdoor unit power error (Voltage, noise, etc.) 2. Outdoor I/F P.C. board error



Check code name	Check code name	Cause of operation
[H01] / [1F] (d07 / AI-NET)	Compressor breakdown	1. Outdoor unit power line error 2. Compressor circuit system error 3. Compressor error 4. Cause of abnormal overload operation 5. IPDU P.C. board error

Sub-code: 01: Compressor 1 side 02: Compressor 2 side

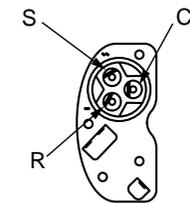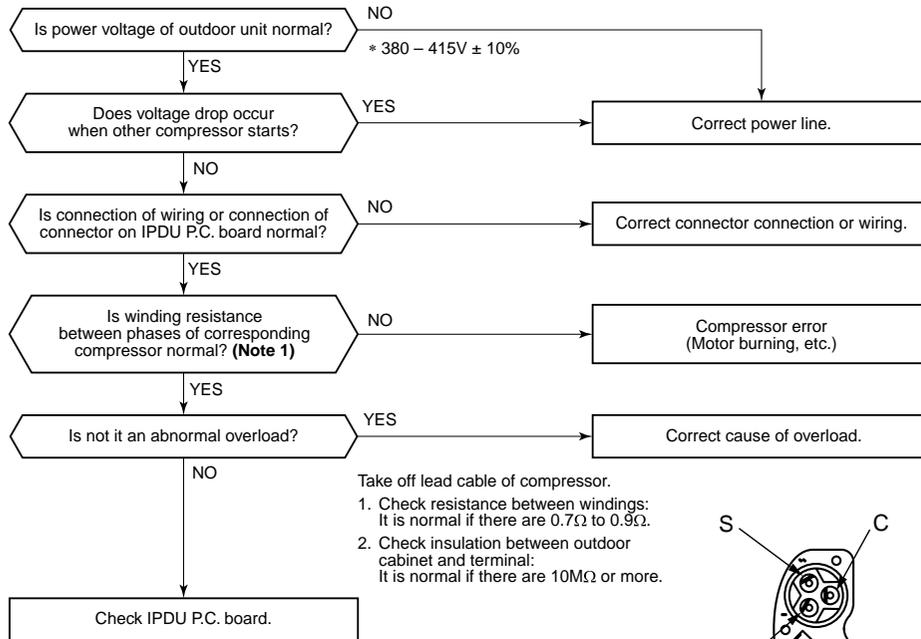


Details of compressor power connecting section

Note 1
 * After checking the output, when connecting the compressor lead again to the compressor terminal, check surely there is no distortion on the Fasten receptacle terminal.
 If it is loosened, caulk it with pinchers, etc and then connect lead to the terminal firmly.


Check code name	Check code name	Cause of operation
[H02] / [1d] (d07 / AI-NET)	Compressor error (Lock)	1. Outdoor unit power line error 2. Compressor circuit system error 3. Compressor error 4. Refrigerant stagnation in compressor shell 5. IPDU P.C. board error

Sub-code: 01: Compressor 1 side 02: Compressor 2 side

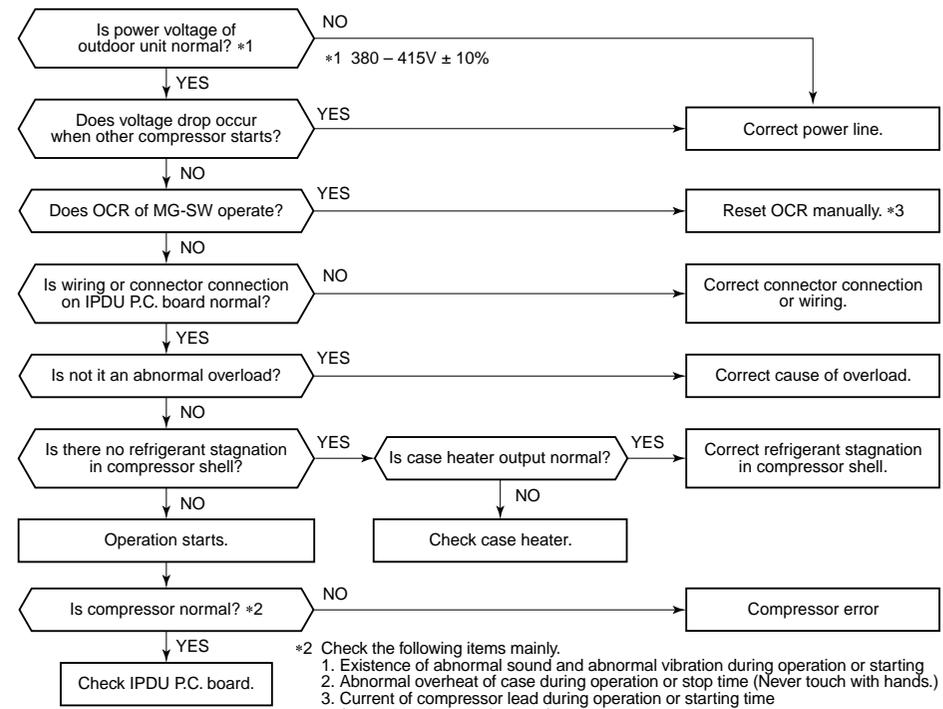


Check code name	Check code name	Cause of operation
[H03] / [17] (d07 / AI-NET)	Current detective circuit system error	1. Cabling or connector connection error on IPDU P.C. board 2. IPDU P.C. board error


Sub-code: 01: Compressor 1 side 02: Compressor 2 side

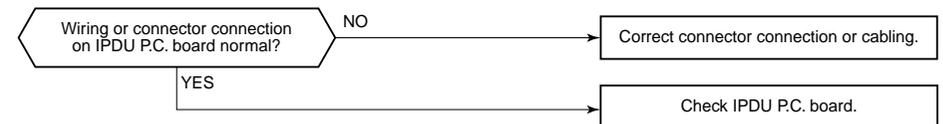


Check code name	Check code name	Cause of operation
[H04] / [44] (d07 / AI-NET)	Compressor 1 case thermo operation	1. Case thermo circuit error 2. I/F P.C. board error
[H14] / [44] (d07 / AI-NET)	Compressor 2 case thermo operation	3. Service valve closed 4. Outdoor PMV clogging 5. SV4 valve leak, Coil misinstallation 6. 4-way valve error 7. Compressor error 8. Refrigerant shortage

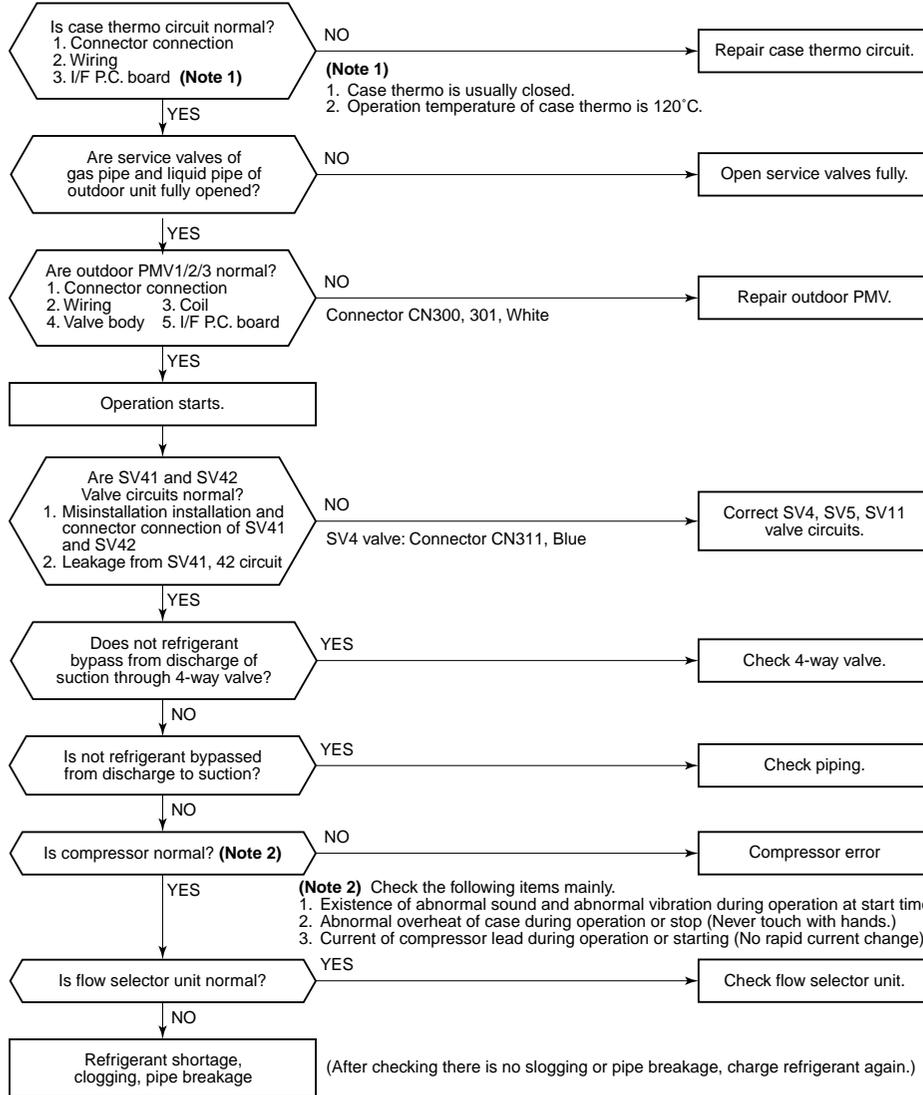

Check code name	Check code name	Cause of operation
[H06] / [20] (d07 / AI-NET)	Low-pressure protective operation	1. Service valve close 2. Ps sensor error 3. SV2, SV4 circuit error 4. Miscabling of communication between indoor and outdoor 5. Indoor/outdoor fan and condenser error 6. Indoor/outdoor PMV clogging 7. Indoor/outdoor heat exchanger clogging 8. Refrigerant shortage

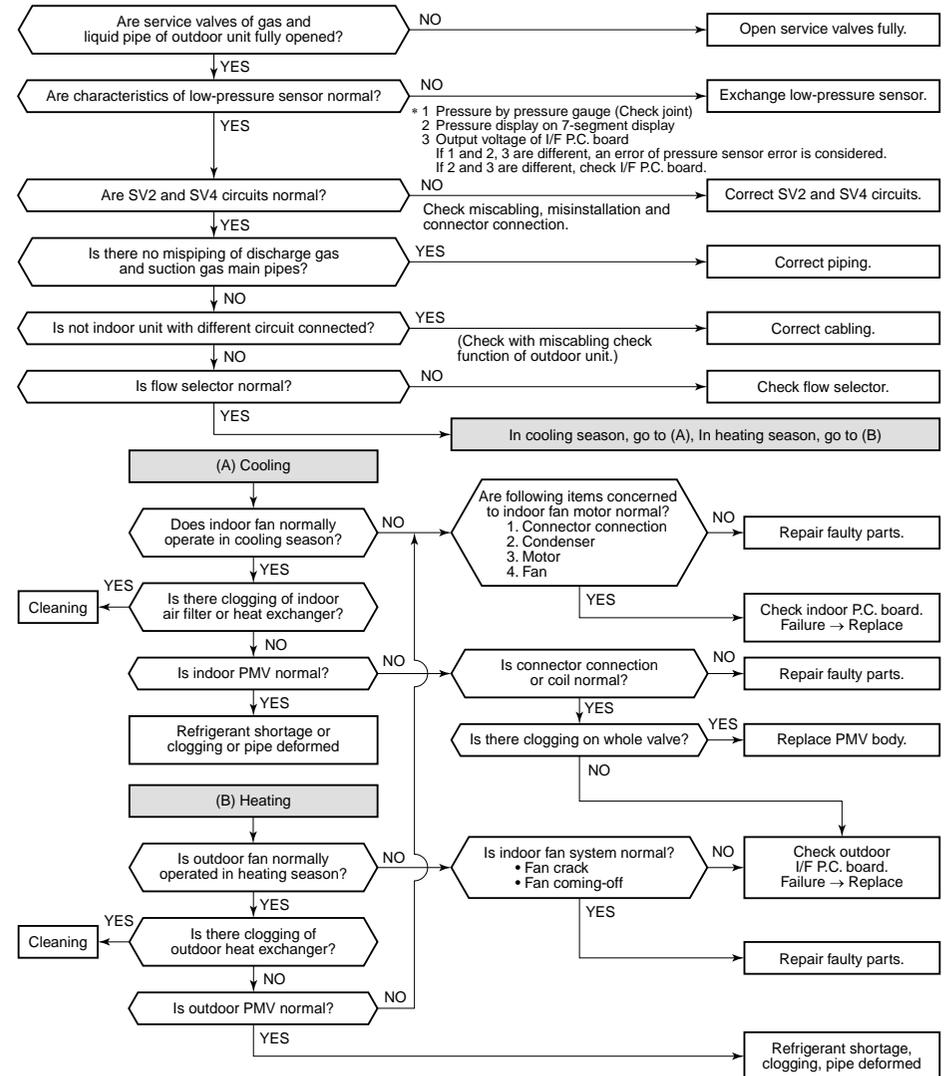

Check code name	Check code name	Cause of operation
[H07] / [d7] (d07 / AI-NET)	Oil level down detection protection	1. Valves of balance pipes closed. 2. Miscabling or misinstallation of TK1 to TK4 sensors 3. TK1 to TK4 sensor error 4. Gas leak or oil leak of all outdoor units 5. Refrigerant stagnation of compressor case 6. SV3A, 3B, 3D, 3C, 3E valve error 7. Clogging of oil return circuit from oil separator 8. Clogging of oil-equation circuit system

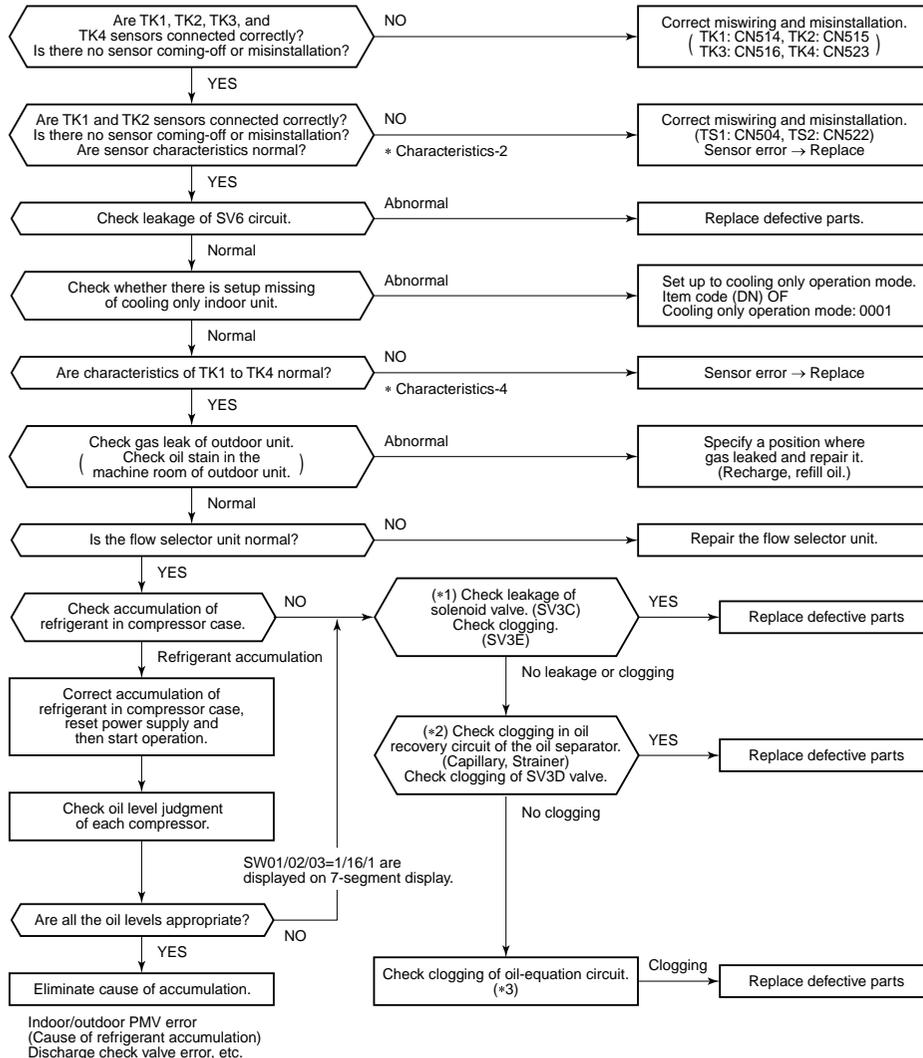

(Reference) If refrigerant is accumulated in the compressor case, oil level short may be judged.

In some cases, it may be difficult to check the leakage of clogging in the following condition of refrigerant stagnation in low ambient temperature condition.

In this case, take a longer operating time prior to check.

(Criterion: Discharge temperature of TD1 and TD2 are 60°C or higher)

(*1)

a) Leakage check for SV3A valve (For multiple outdoor unit system)

- Turn off the power supply, take off connector of SV3A valve, and then start a test operation after power-ON.
- Check the temperature change at secondary side of SV3A valve during operation. (① in the figure.)
→ If temperature is raised, it is a leakage of SV3A valve. Replace SV3A valve.

b) Leakage check for SV3C valve

- Turn off the power supply, take off connector of SV3C valve, and then start a test operation after power-ON.
- After operation for several minutes, check temperature at secondary side of SV3C valve. (② in the figure.)
→ If temperature is high (equivalent to discharge temperature TD), it is a leakage of SV3C valve. Replace SV3C valve.
(Even if there is leakage from SV3C valve does not occur, temperature of SV3C valve at secondary side rises during operation. When the checked temperature is equivalent to TD temperature, it is a leakage of SV3C valve. Replace SV3C valve.)

c) Clogging check for SV3B valve (For multiple outdoor unit system)

- While outdoor unit is operated, set up SW01/02/03 = [2] [1] [3] to 7-segment display [Hr] [2], and push SW04 for 2 seconds or more.
- Set up SW02 = [9], and turn on SV3A, SV3B, SV3C valves. (7-segment display [Hr] [3-])
- While outdoor unit is operating, check temperature change at secondary side of SV3B valve. (③ in the figure.)
→ If temperature does not rise (equivalent to suction temperature), it is a clogging of SV3B valve. Replace SV3B valve.

d) Clogging for SV3E valve

Reset the power supply.



Referring to "Valve forced open/close function" of the outdoor unit, check ON/OFF operation (Sound, coil surface temp up) of SV3E valve is performed.



Start test operation in COOL or HEAT mode.



After operation for several minutes, check the pipe temperature at the secondary side of SV3E valve whether temperature changes or not. If it is equivalent to outside temperature, clogging of SV3E is considered. (④ in the figure.)

(Reference)

If SV3E valve is clogged, temperature of all TK1, TK2, TK3, and TK4 do not change.

(*2) Clogging check for SV3D valve of oil return circuit from oil separator

a) Oil return circuit

- While outdoor unit is operating, check temperature (secondary side of capillary) on oil return circuit. (⑤ in the figure.)
→ If temperature is low (equivalent to suction temperature), a clogging of strainer of oil return circuit or capillary is considered. Repair the clogged part.

b) Clogging check for SV3D valve

- While outdoor unit is operating, set up SW01/02/03 = [2] [1] [3] to 7-segment display [Hr] [2], and push SW04 for 2 seconds or more.
- Set up SW02 = [6], and turn on SV3D valve. (7-segment display [Hr] [3d])
- If temperature is low at secondary side of the valve or it does not change, clogging of valve, capillary, or strainer is considered. (⑥ in the figure.)

(*3) Check for solenoid valve of outdoor unit (For multiple outdoor unit system)

a) Clogging check for SV3A valve

- While outdoor unit is operating, set up SW01/02/03 = [2] [1] [3] to 7-segment display [Hr] [2], and push SW04 for 2 seconds or more.
- Set up SW02 = [4], and turn on SV3A valve. (7-segment display [Hr] [3A])
- If temperature is low at secondary side of the valve or it does not change, clogging of valve or check valve is considered. (① in the figure.)

b) Leakage check for SV3C valve

- While outdoor unit is operating, set up SW01/02/03 = [2] [1] [3] to 7-segment display [Hr] [2], and push SW04 for 2 seconds or more.
- Set up SW02 = [6], and turn on SV3C valve. (7-segment display [Hr] [3C])
- If temperature does not change (up), clogging of valve or strainer is considered. (② in the figure.)

(*4)

a) Clogging check for oil-equalization circuit


- Drive the outdoor unit. (Drive both compressors in the unit.)
- After driving for 10 minutes, check temperature of TK1 and TK2 sensors and temperature of oil-equalization circuit capillary (⑦ in the figure) were raised.

(Criterion)

TK1, TK2=Td1, Td2 temperature – Approx. 10 to 30°C

Oil-equalization capillary tubes should be higher sufficiently than outside air temperature and suction temperature.

- If temperature is low, a malfunction of capillary, strainer, or check valve is considered. Repair the defective parts.

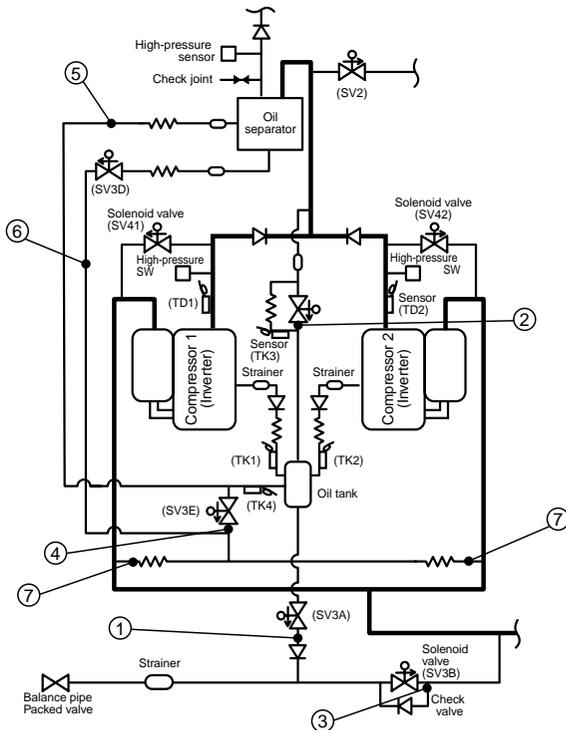



Check code name	Check code name	Cause of operation
[H08] / [d4] (d07 / AI-NET)	Oil level detective temperature sensor error	TK1 to TK4 sensor Open/Short

Sub-code: 01: TK1 sensor error 02: TK2 sensor error 03: TK3 sensor error 04: TK4 sensor error



The detected error is an oil level detective temperature sensor error. Check disconnection of the wiring and resistance value of the sensor. If the sensors are normal, replace the outdoor I/F P.C. board.

Circuit	Connector
TK1	CN514 (Black)
TK2	CN515 (Green)
TK3	CN516 (Red)
TK4	CN523 (Yellow)



Check code name	Check code name	Cause of operation
[H16] / [d7] (d07 / AI-NET)	TK1 temperature detective circuit error (Sub-code: 01)	<ol style="list-style-type: none"> 1. Coming-off of TK1 sensor, miscabling, characteristics error of resistance value 2. Oil-equalization circuit error (Check valve, capillary clogging, strainer clogging) 3. Refrigerant stagnation in case of compressor shell

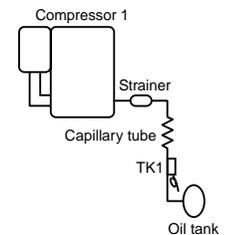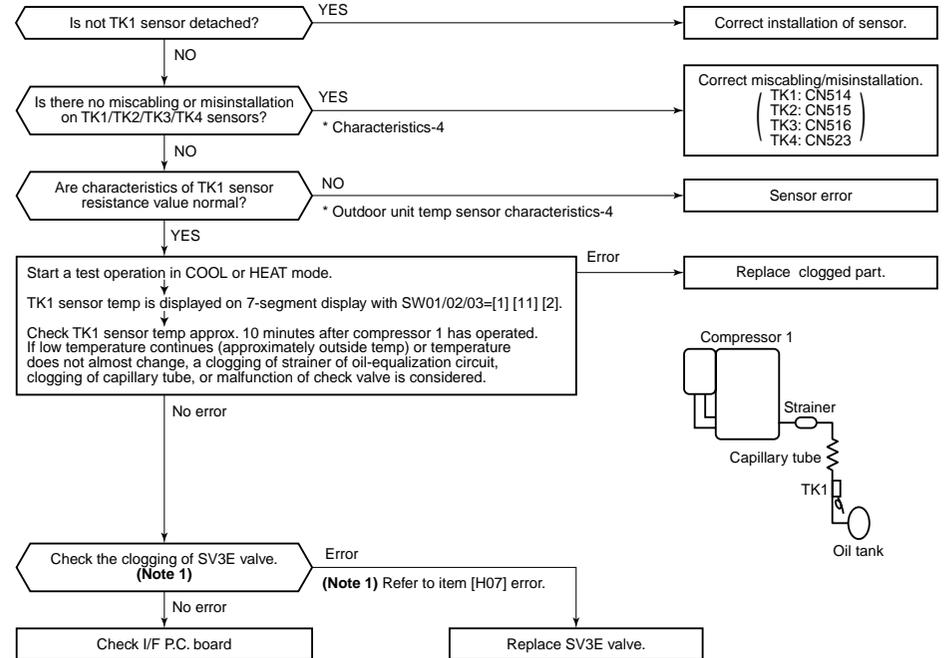

Check code name	Check code name	Cause of operation
[H16] / [d7] (d07 / AI-NET)	Oil level detective circuit system error (Sub-code: 02)	<ol style="list-style-type: none"> 1. Detachment of TK2 sensor, miscabling, characteristics error of resistance value 2. Oil-equalization circuit error (Check valve, capillary clogging, strainer clogging) 3. Refrigerant stagnation in compressor shell

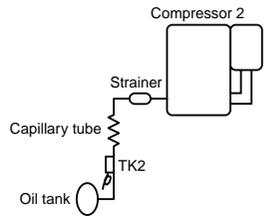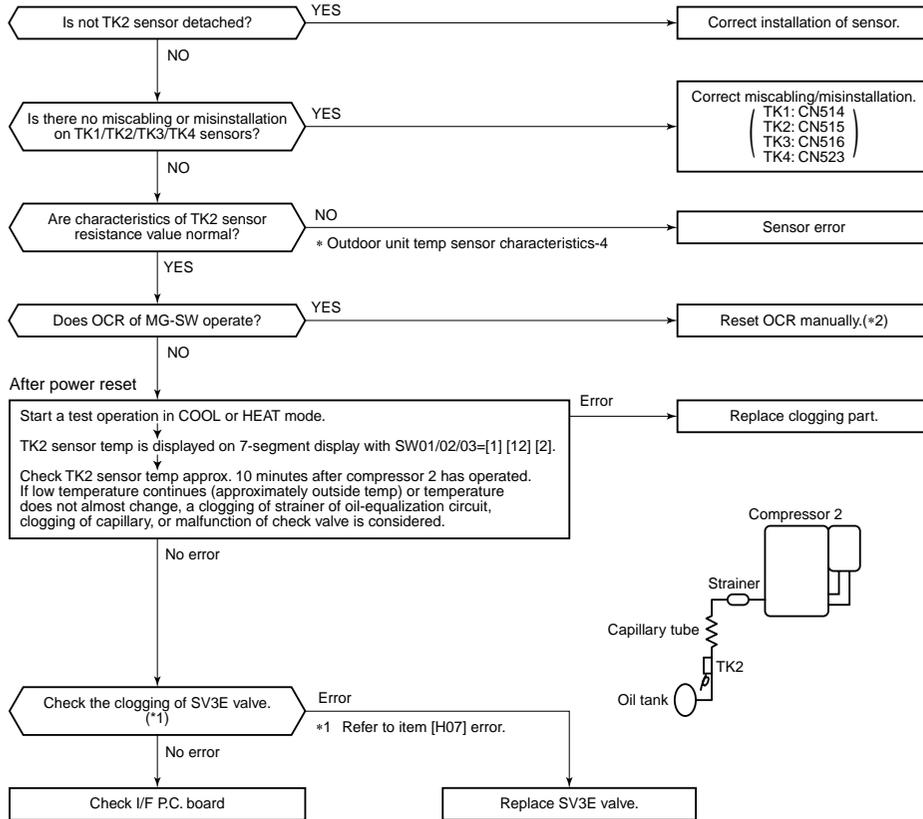


Check code name	Check code name	Cause of operation
[H16] / [d7] (d07 / AI-NET)	TK3 temperature detective circuit error (Sub-code: 03)	<ol style="list-style-type: none"> 1. Detachment of TK3 sensor, miscabling, characteristics error of resistance value 2. Error of SV3C valve circuit periphery (Check capillary clogging, strainer clogging) 3. Refrigerant stagnation in compressor shell

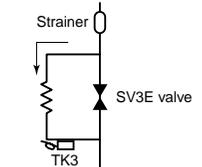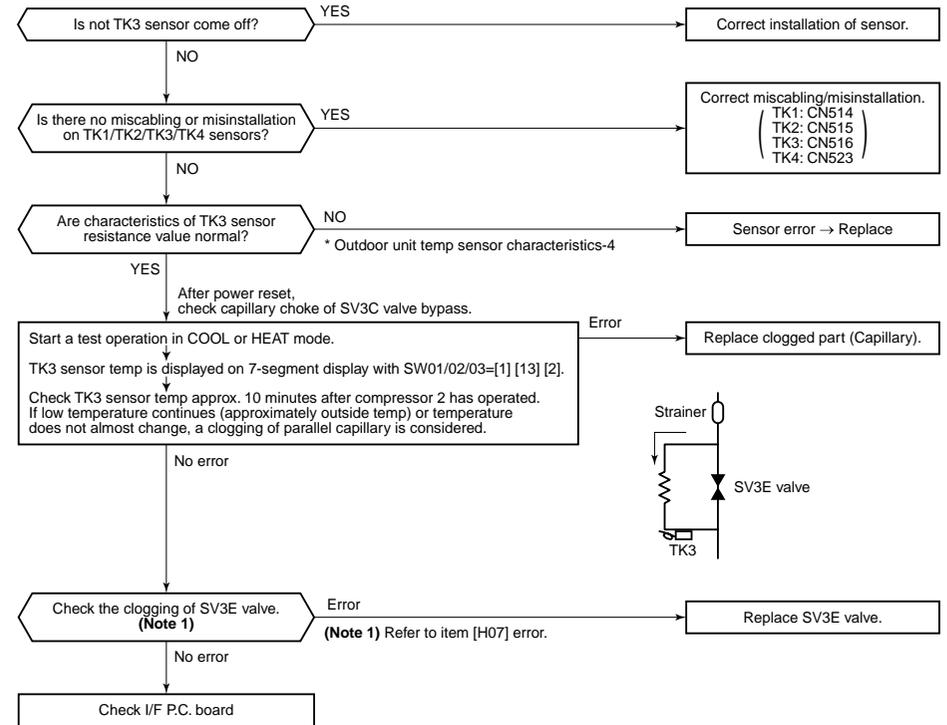

*2 If OCR operates even after manual reset of OCR, check whether the wiring to the current sensor (T02) of Comp-IPDU is correct or not.


Check code name	Check code name	Cause of operation
[H16] / [d7] (d07 / AI-NET)	TK4 temperature detective circuit error (Sub-code: 04)	<ol style="list-style-type: none"> 1. Detachment of TK4 sensor, miscabling, characteristics error of resistance value 2. Check clogging and malfunction of SV3E valve circuit. 3. Oil-equalization circuit error (Check capillary clogging, strainer clogging) 4. Refrigerant stagnation in compressor shell

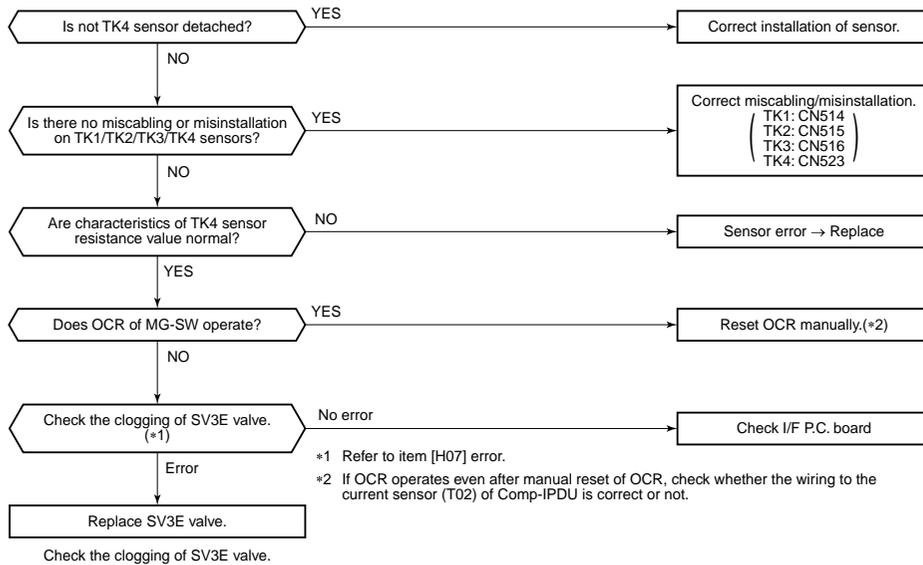

Check code name	Check code name	Cause of operation
[L03] / [96] (d07 / AI-NET)	Duplicated indoor header units	There were two or more indoor header units in some remote controller group control.

- 1) Check the connection changing of the remote controller after the connection has been changed.
- 2) If the group configuration and address are normal when power has been turned on, the mode automatically shifts to address setup mode. (Re-setup of address) → Refer to "Address setup".

Check code name	Check code name	Cause of operation
[L04] / [96] (d07 / AI-NET)	Duplicated setup of outdoor line address	Outdoor line addresses are duplicated.

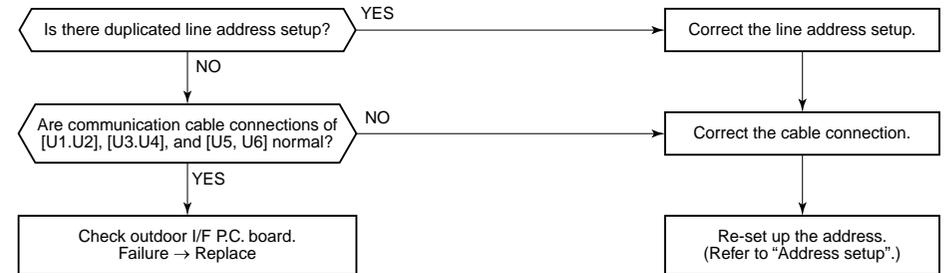

Check code name	Check code name	Cause of operation
[L05] / [96] (d07 / AI-NET)	Duplicated indoor units with priority (Displayed on indoor unit with priority)	1. Two or more prior indoor units exist.

This check code is displayed on the set indoor unit when setup of indoor unit with priority is duplicated.

- Priority setup with two or more units is not available. Choose one prior unit in one refrigerant circuit system.


Check code name	Check code name	Cause of operation
[L06] / [96] (d07 / AI-NET)	Duplicated indoor units with priority (Displayed on the indoor unit other than one with priority and on the outdoor unit)	Two or more indoor units with priority are duplicated.

Sub-code: No. of indoor units with priority


When indoor unit with priority is duplicated, this check code is displayed on the unit other than the setup indoor unit and outdoor unit.

- As only one indoor unit with priority is valid, change the setup.

Check code name	Check code name	Cause of operation
[L07] / [99] (d07 / AI-NET)	Group line in individual indoor unit	The group line is connected in the individual indoor unit.

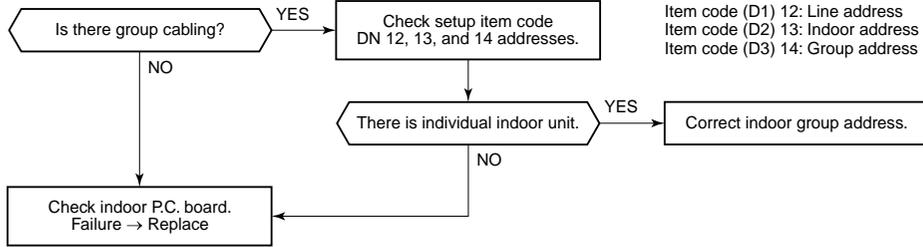


Check code name	Check code name	Cause of operation
[L08] / [99]* (d07 / AI-NET)	Indoor group / address unset	Indoor address unset

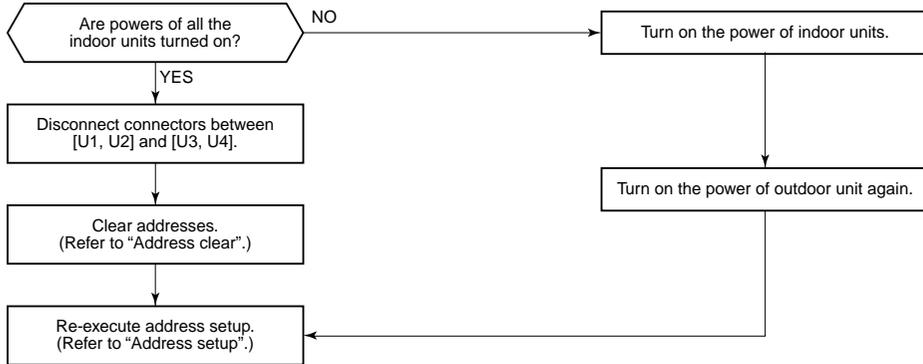

Note) This code is displayed when the power is turned on at the first time after installation. (Because the address is not yet set up)


Check code name	Check code name	Cause of operation
[L09] / [46] (d07 / AI-NET)	Indoor capacity unset	Indoor capacity unset

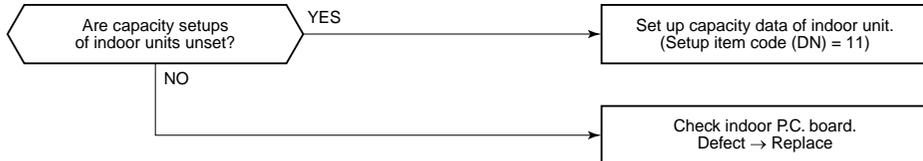

Check code name	Check code name	Cause of operation
[L10] / [88] (d07 / AI-NET)	Outdoor capacity unset	On the outdoor I/F P.C. board for service, the model selecting jumper has not been set up so as to match with the model.


I/F P.C. board A'ssy service for the outdoor unit is common to this series. A setup for model selection different from that for P.C. board with trouble is necessary. Set up a model based upon the P.C. board A'ssy exchange procedure.

Check code name	Check code name	Cause of operation
[L17] / [46] (d07 / AI-NET)	Inconsistent models of outdoor units	There are outdoor units on the communication line other than Super Module Multi Flex type such as Super Module Multi or Super Module Multi ice regenerative type

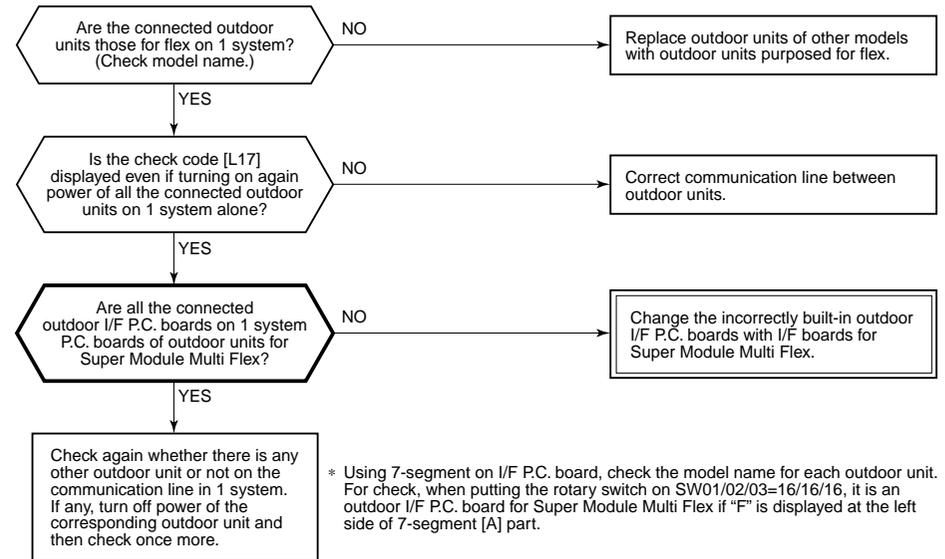


* Using 7-segment on I/F P.C. board, check the model name for each outdoor unit. For check, when putting the rotary switch on SW01/02/03=16/16/16, it is an outdoor I/F P.C. board for Super Module Multi Flex if "F" is displayed at the left side of 7-segment [A] part.


Check code name	Check code name	Cause of operation
[L18] / [8A] (d07 / AI-NET)	Flow selector unit system error	An indoor unit which has been operated in cooling only mode is operated in heating mode without setup for cooling only mode.

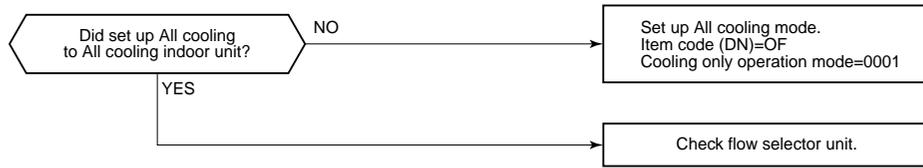

Check code name	Check code name	Cause of operation
[L20] / [98] (d07 / AI-NET)	Duplicated central control addresses	Central control addresses are duplicated.

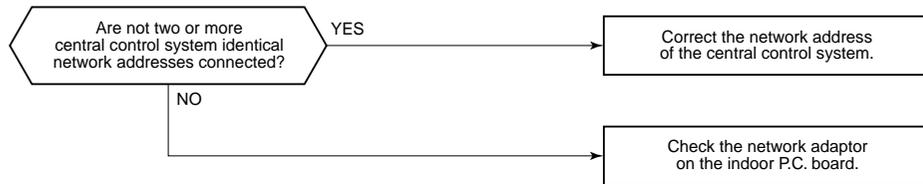


Check code name	Check code name	Cause of operation
[L28] / [46] (d07 / AI-NET)	Quantity over of connected outdoor units	1. Quantity over of connected outdoor units 2. Connection error of communication line between outdoor units 3. Outdoor I/F P.C. board error

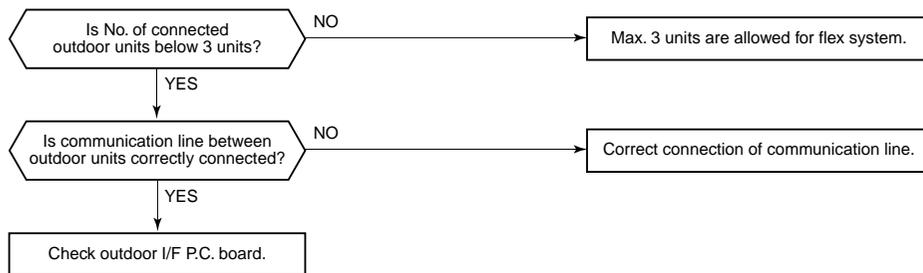


Check code name	Check code name	Cause of operation
[L29] / [CF] (d07 / AI-NET)	IPDU quantity error	1. Incorrect model setup in service for I/F P.C. board 2. Communication error between IPDU, fan IPDU and I/F 3. IPDU, fan IPDU, I/F P.C. board error

Sub-code:
 01: IPDU1 error
 02: IPDU2 error
 03: IPDU1, 2 error
 04: Fan IPDU error
 05: IPDU1, fan IPDU error
 06: IPDU2, fan IPDU error
 07: All IPDU error or disconnection of communication line between IPDU-I/F P.C. board or outdoor I/F P.C. board error

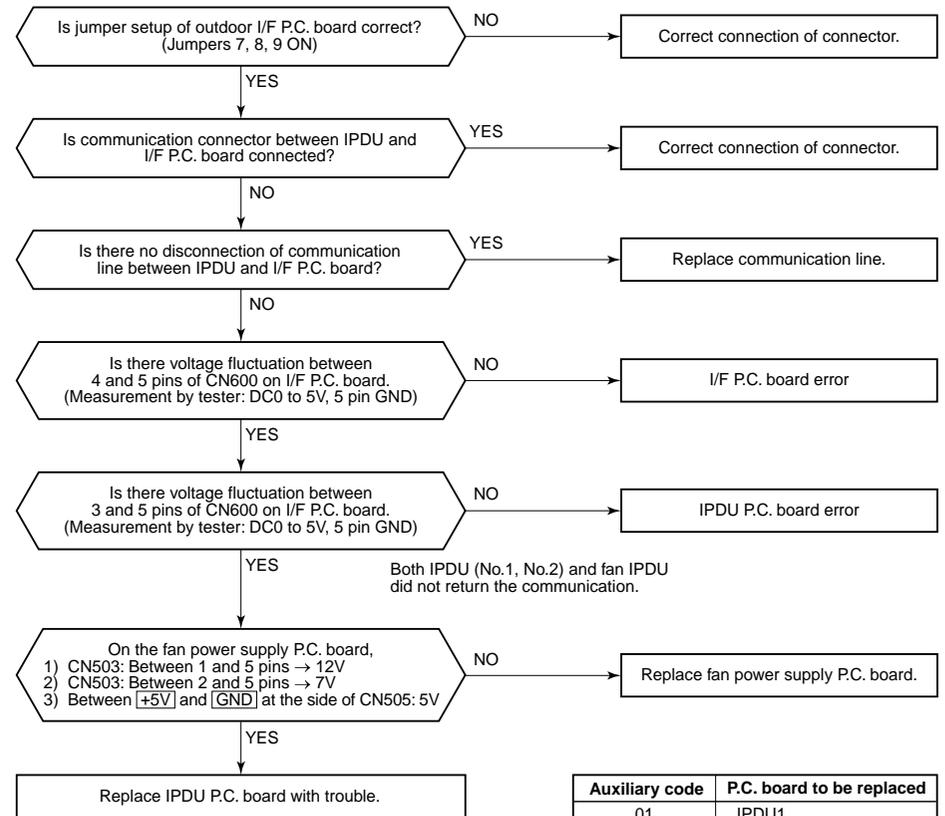


Auxiliary code	P.C. board to be replaced
01	IPDU1
02	IPDU2
03	IPDU1, 2
04	Fan IPDU
05	IPDU1, fan IPDU
06	IPDU2, fan IPDU
07	IPDU1, 2, fan IPDU, I/F

Check code name	Check code name	Cause of operation
[L30] / [b6] (d07 / AI-NET)	Interlock in indoor unit from outside	Outside error was input.

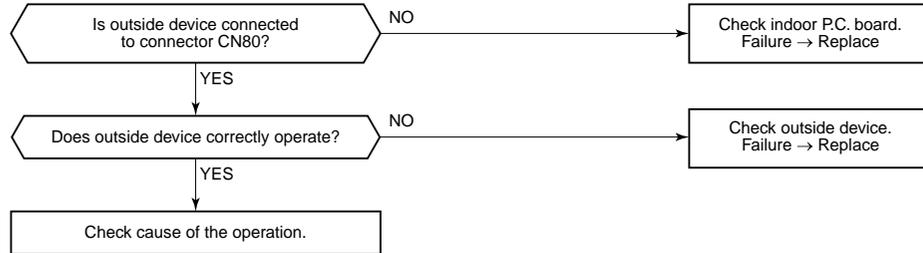


Check code name	Check code name	Cause of operation
[L31] / [-] (d07 / AI-NET)	Extended IC error	1. Outdoor unit power error 2. Outdoor I/F P.C. board error

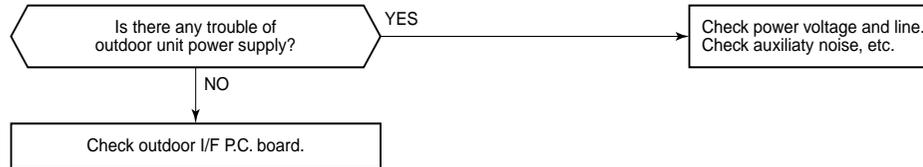


Check code name	Check code name	Cause of operation
[P01] / [11] (d07 / AI-NET)	Indoor fan motor error	1. Cabling error 2. Check fan motor.



* For the models installed with AC fan motor only

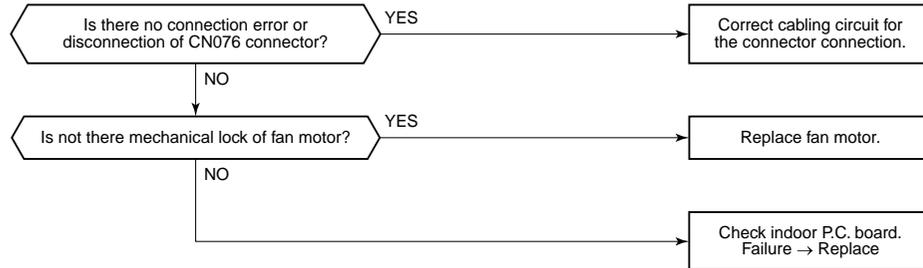

Check code name	Check code name	Cause of operation
[P03] / [1E] (d07 / AI-NET)	Discharge temp TD1 error	1. Service valve of outdoor unit closed. 2. Outdoor PMV1, 2 error 3. TD sensor error 4. Refrigerant short, clogging in pipe 5. 4-way valve error 6. SV4 circuit leakage, misinstallation 7. SV5 circuit leakage 8. SV6 circuit clogging 9. Discharge gas/Suction gas pipes mispiping 10. Flow selector unit error

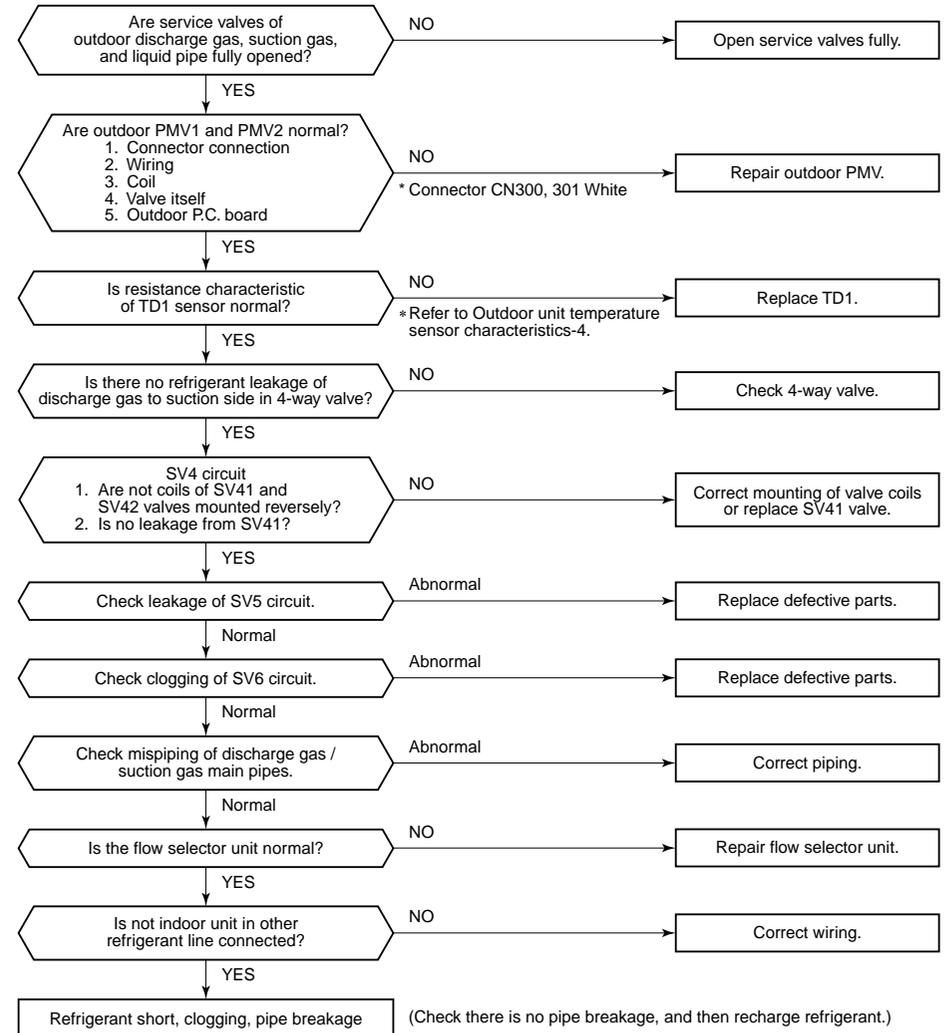

Check code name	Check code name	Cause of operation
[P04] / [Z1] (d07 / AI-NET)	Actuation of high-pressure SW	1. High-pressure SW error 2. Service valve closed 3. Pd sensor error 4. Indoor/outdoor fan error 5. Indoor/outdoor PMV choke 6. Indoor/outdoor heat exchanger clogging, air short circuit 7. SV2 circuit error 8. SV4 circuit error 9. SV5 circuit error 10. Discharge line check valve malfunction 11. Refrigerant overcharge

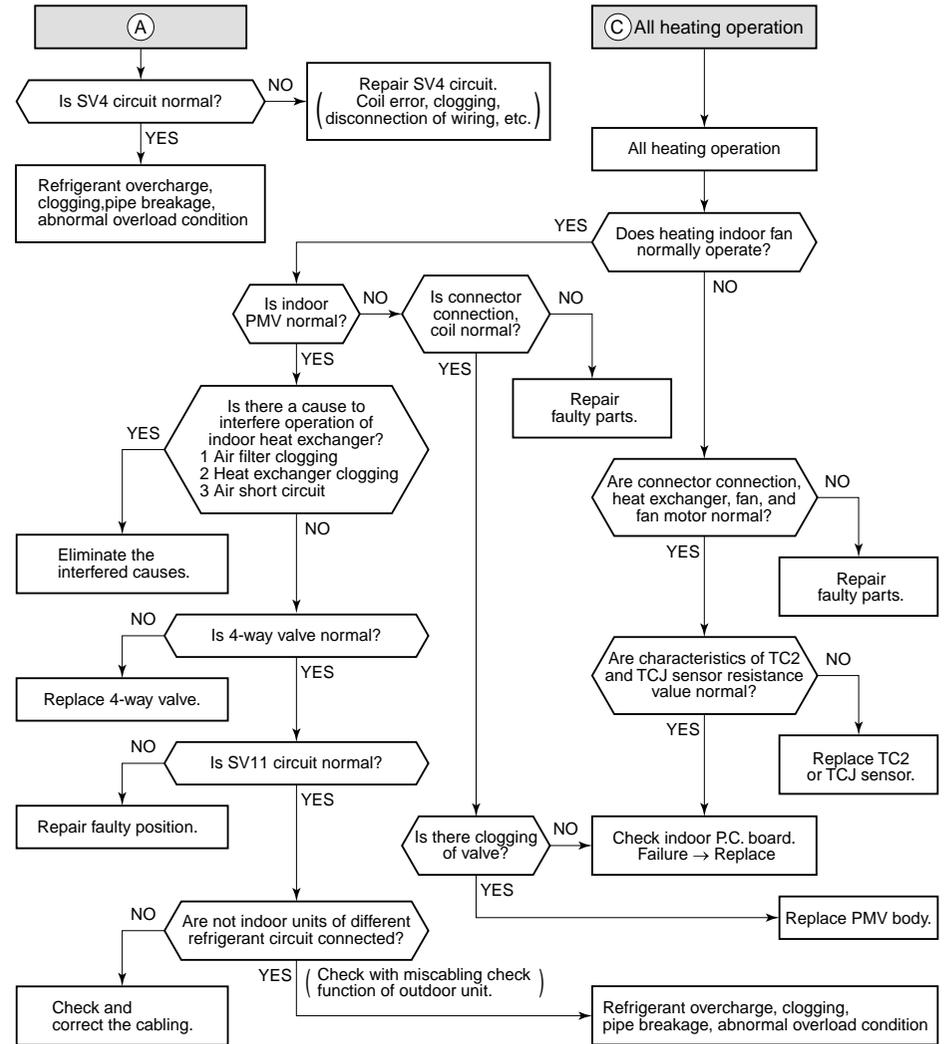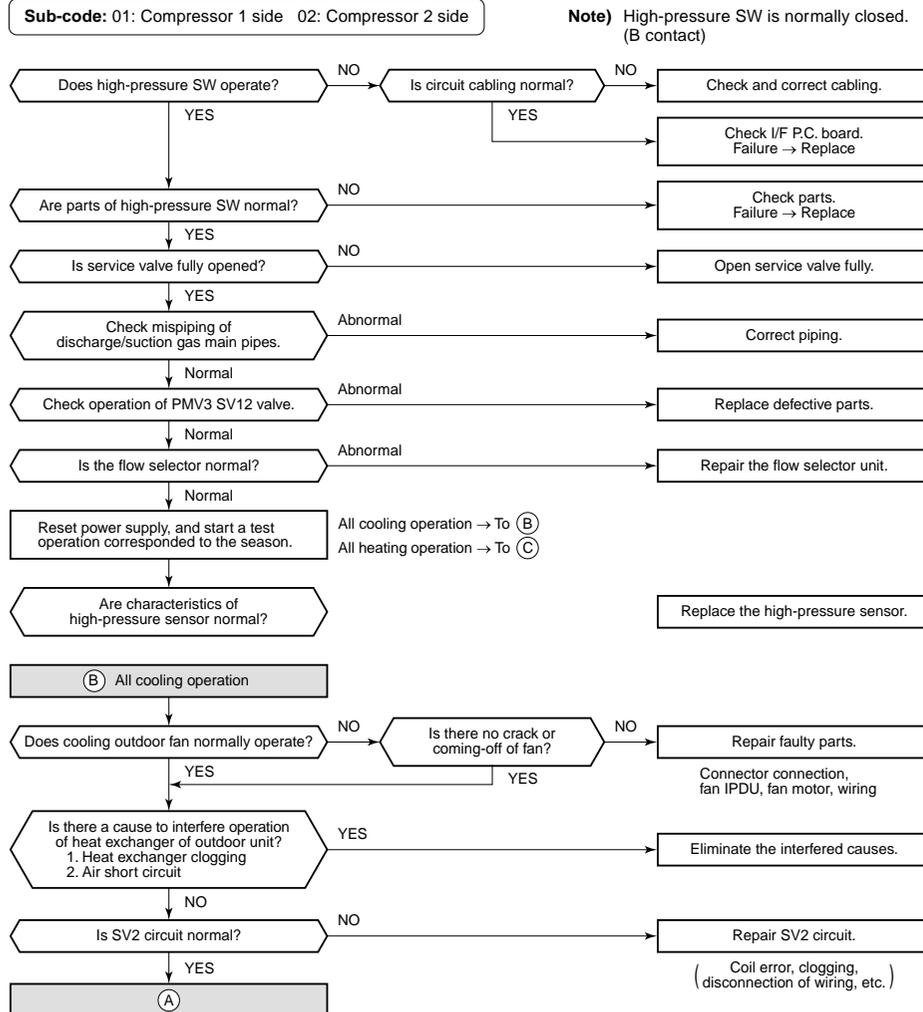


Check code name	Check code name	Cause of operation
[P05] / [AF] (d07 / AI-NET)	Open phase, negative phase	1. Power supply open phase 2. Power supply negative phase

- Check the phase power line of outdoor unit.
- Check error of outdoor I/F P.C. board.
- Check there is no looseness, etc of terminal.


Check code name	Check code name	Cause of operation
[P07] / [1C] (d07 / AI-NET)	Heat sink overhear error	1. Power voltage error 2. Outdoor fan system error 3. Heat sink installation error 4. Clogging of hear sink cooling duct 5. IPDU P.C. board error (TH sensor error)

Sub-code: 01: Compressor 1 side 02: Compressor 2 side

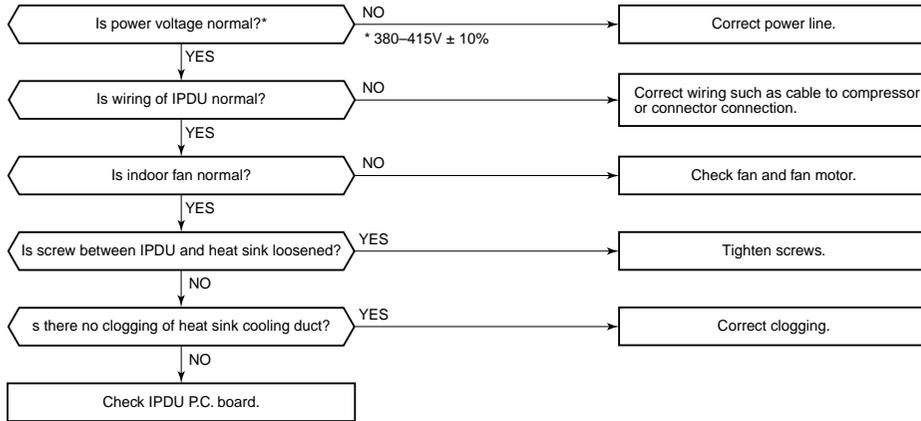


Check code name	Check code name	Cause of operation
[P10] / [0b] (d07 / AI-NET)	Indoor overflow error	1. Float SW operation error 2. Drain pump operation error 3. Clogging of drain pipe 4. Indoor P.C. board error

Sub-code: Indoor address with trouble

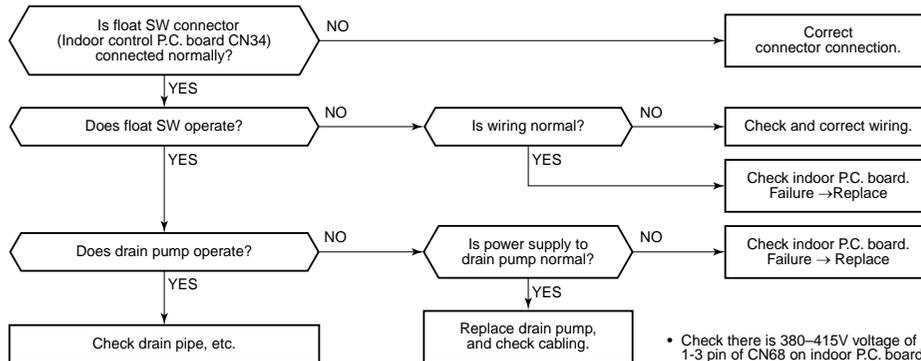

* Check there is 380-415V voltage of 1-3 pin of CN68 on indoor P.C. board.

Check code name	Check code name	Cause of operation
[P12] / [11] (d07 / AI-NET)	Indoor fan motor error	1. Cabling error of fan motor connector 2. Fan motor error 3. Indoor P.C. board error

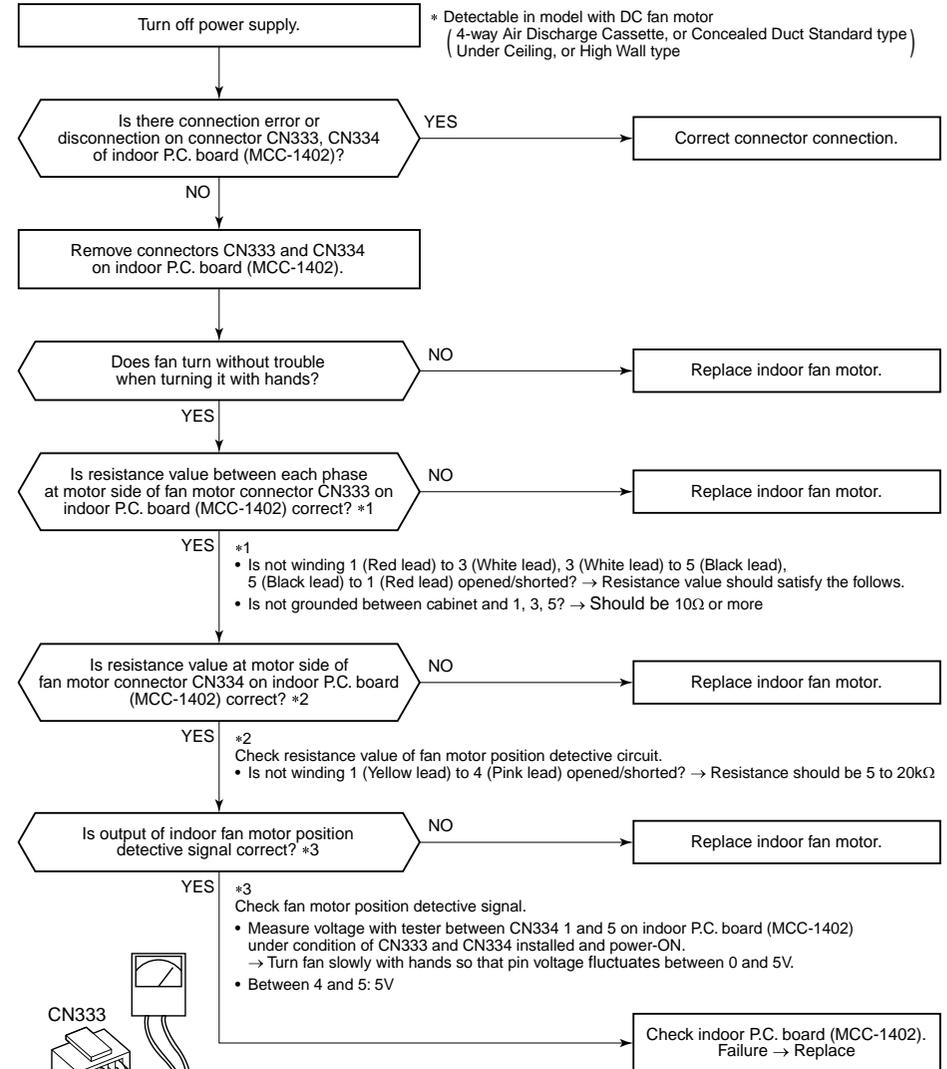


* Detectable in model with DC fan motor (4-way Air Discharge Cassette, or Concealed Duct Standard type) Under Ceiling, or High Wall type


*1
 • Is not winding 1 (Red lead) to 3 (White lead), 3 (White lead) to 5 (Black lead), 5 (Black lead) to 1 (Red lead) opened/shorted? → Resistance value should satisfy the follows.
 • Is not grounded between cabinet and 1, 3, 5? → Should be 10Ω or more

*2
 Check resistance value of fan motor position detective circuit.
 • Is not winding 1 (Yellow lead) to 4 (Pink lead) opened/shorted? → Resistance should be 5 to 20kΩ


*3
 Check fan motor position detective signal.
 • Measure voltage with tester between CN334 1 and 5 on indoor P.C. board (MCC-1402) under condition of CN333 and CN334 installed and power-ON.
 → Turn fan slowly with hands so that pin voltage fluctuates between 0 and 5V.
 • Between 4 and 5: 5V

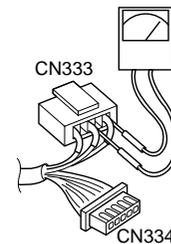


Check code name	Check code name	Cause of operation
[P13] / [47] (d07 / AI-NET)	Outdoor liquid back detection error	1. PMV1/PMV2 error 2. Pd sensor, Ps sensor error 3. Clogging of SV2 circuit 4. Clogging of SV3B circuit, balance pipe 5. Leakage of main discharge pipe 6. Outdoor I/F P.C. board error

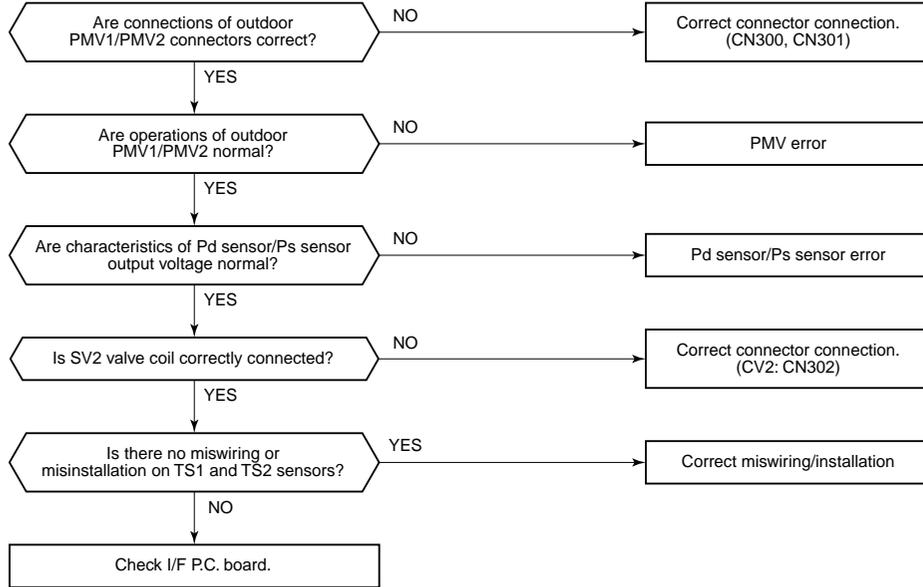


Check code name	Check code name	Cause of operation
[P15] / [AE] (d07 / AI-NET)	Gas leak detection TS condition (Sub-code: 01)	1. Outdoor unit service valve closed 2. Outdoor PMV error 3. TS1 sensor error 4. Refrigerant shortage, clogging refrigerant circuit 5. 4-way valve error 6. SV4 circuit error

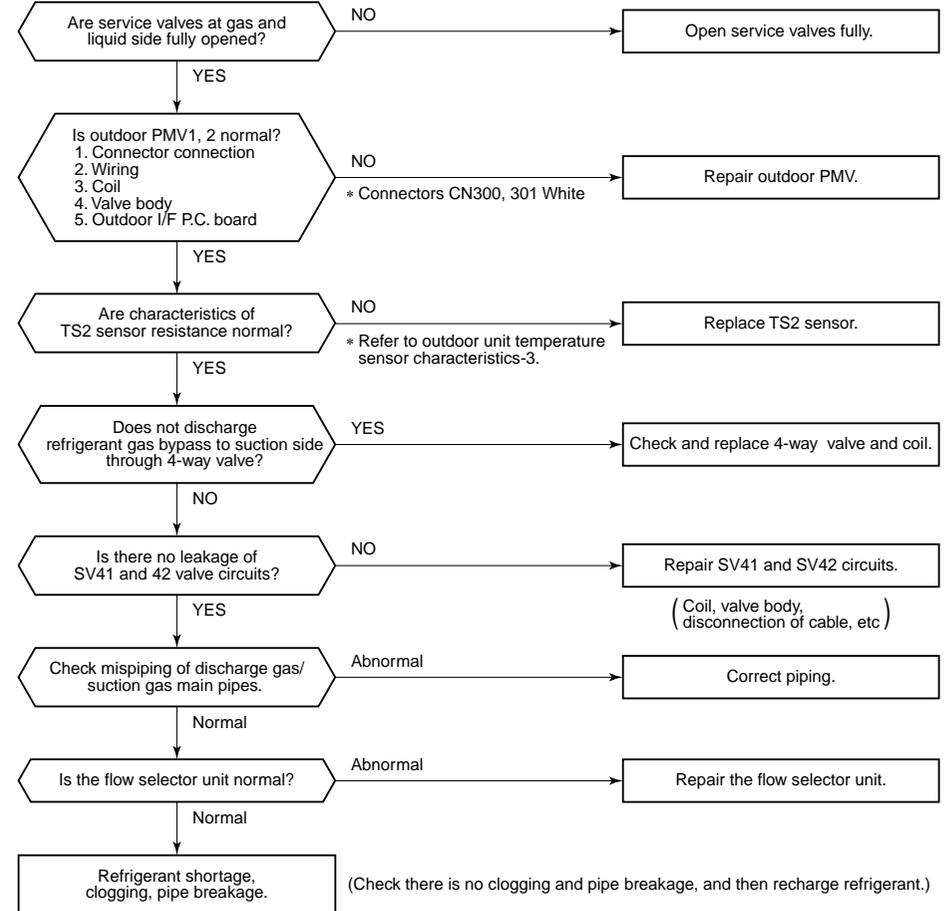

Check code name	Check code name	Cause of operation
[P15] / [AE] (d07 / AI-NET)	Gas leak detection TD condition (Sub-code: 02)	1. Outdoor unit service valve closed 2. Outdoor PMV error 3. TD sensor error 4. SV4 circuit error 5. Refrigerant shortage, clogging refrigerant circuit

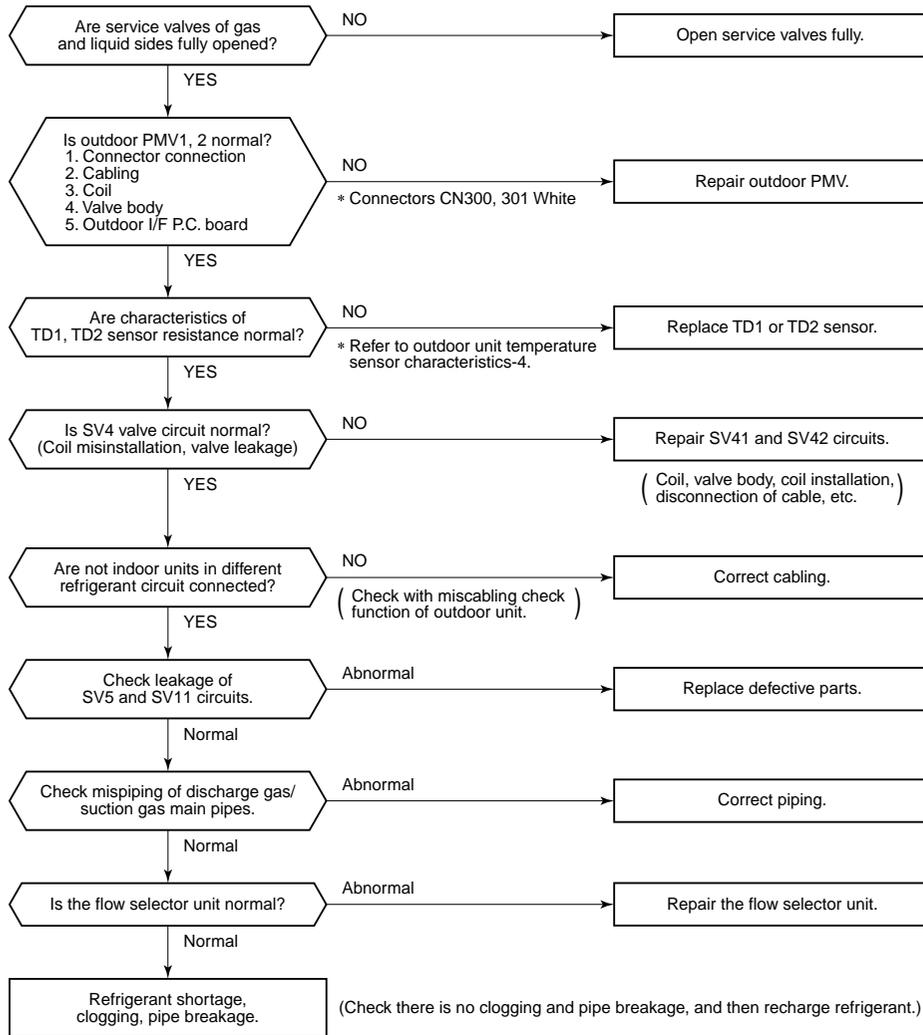


Check code name	Check code name	Cause of operation
[P17] / [bb] (d07 / AI-NET)	Discharge temp TD2 error	1. Outdoor unit service valve closed 2. Outdoor PMV error 3. TD sensor error 4. Refrigerant shortage, clogging of refrigerant circuit 5. 4-way valve error 6. SV4 circuit leakage, misinstallation 7. SV5 circuit leakage 8. SV6 circuit clogging 9. Mispiping of discharge gas/suction gas pipes 10. Flow selector unit error

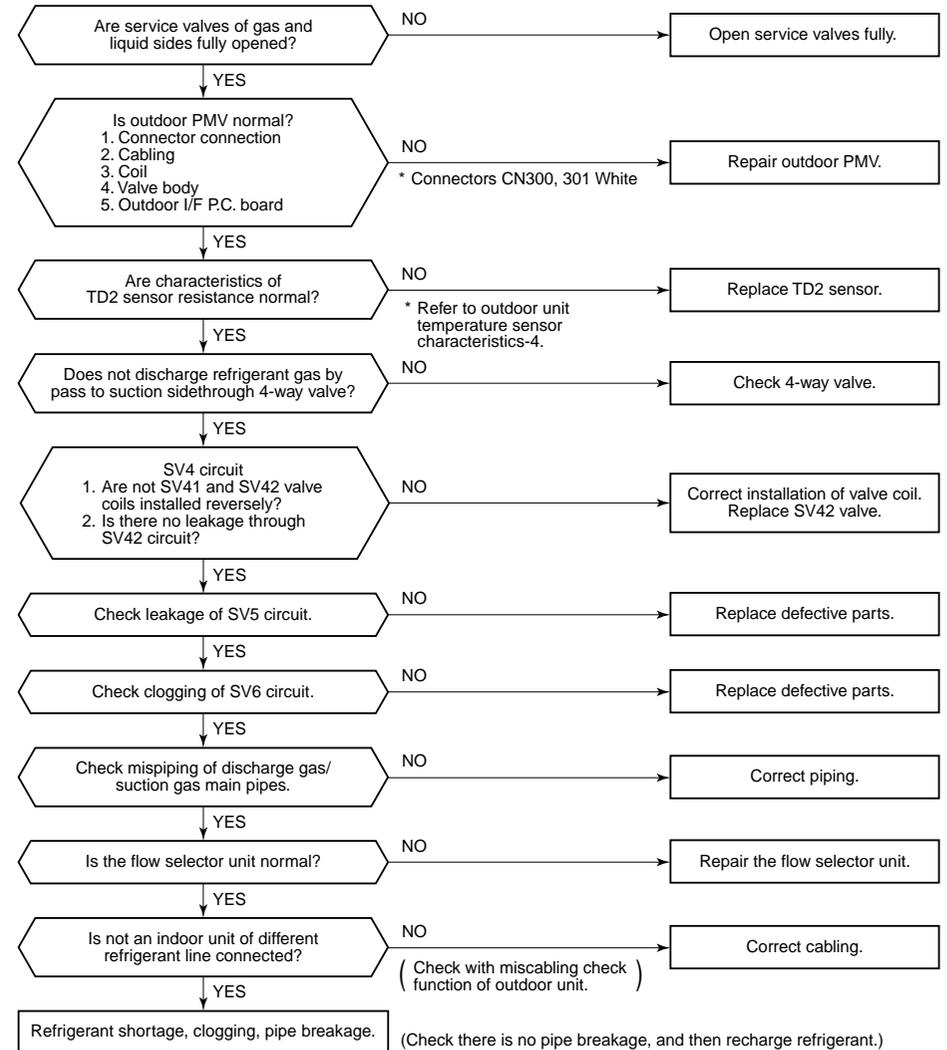


Check code name	Check code name	Cause of operation
[P19] / [08] (d07 / AI-NET)	4-way valve operation error	1. 4-way valve error 2. TS1 sensor/TE1 sensor error 3. Pd sensor/Ps sensor error 4. TE sensor/TL sensor misconnection

Sub-code: Detected outdoor unit No.

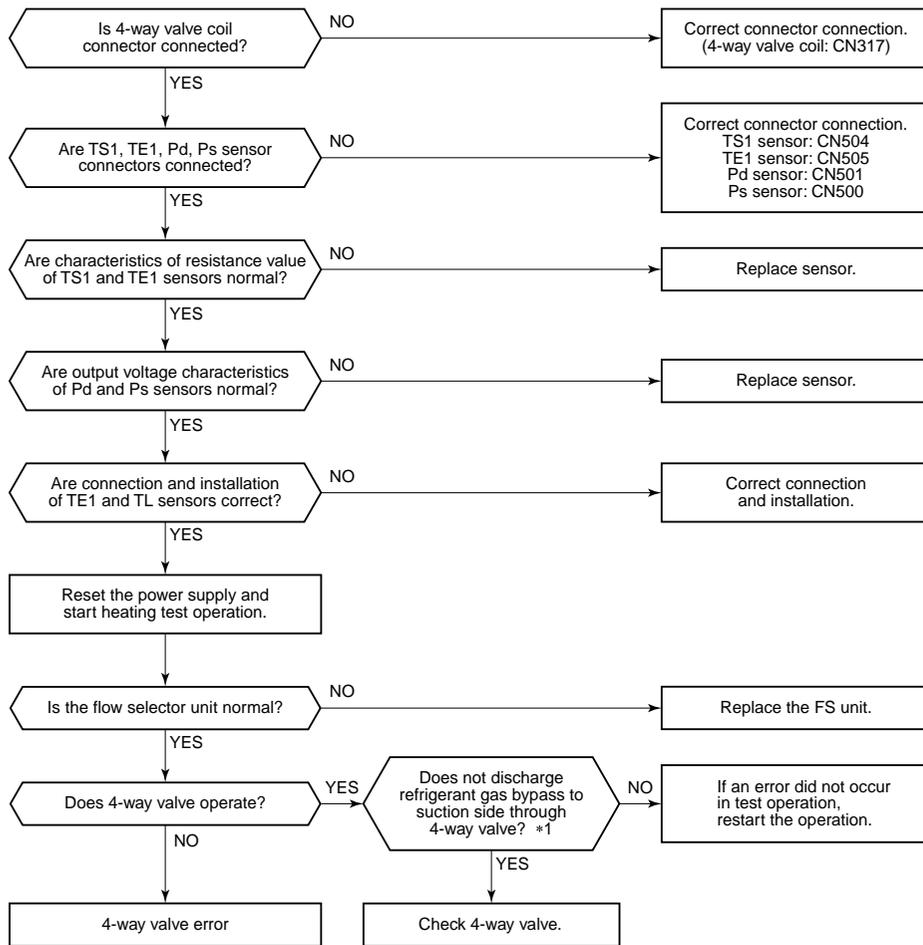


*1 Check TS and TE temperature of the outdoor unit which compressors is operated.
(I/F) SW01=[1], SW02=[6], SW03=[2] → TS sensor temperature
SW01=[1], SW02=[7], SW03=[2] → TE sensor temperature
<Judgment criteria>
TE sensor: Normal if TE ≤ 20°C except summer season (Outside temp 20°C or lower)
TS sensor: Normal if TS ≤ 40°C except summer season (Outside temp 20°C or lower)

Check code name	Check code name	Cause of operation
[P20] / [22] (d07 / AI-NET)	High-pressure protective operation	1. Pd sensor error 2. Service valve closed. 3. Indoor/outdoor fan error 4. Indoor/outdoor PMV clogging 5. Indoor/outdoor heat exchanger clogging 6. SV2 circuit error 7. SV4 circuit error 8. SV5 circuit error 9. Outdoor I/F P.C. board error 10. Operation error of check valve of main discharge pipe 11. Refrigerant overcharge

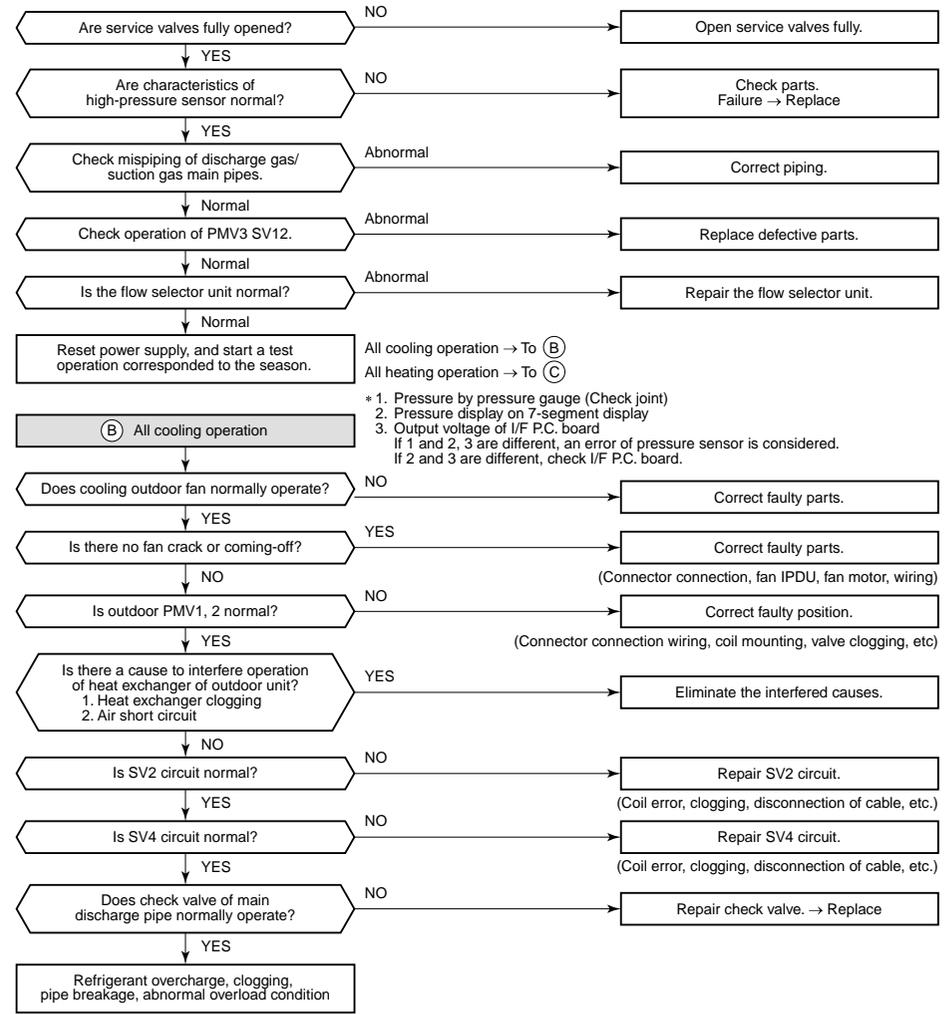


* 1. Pressure by pressure gauge (Check joint)
2. Pressure display on 7-segment display
3. Output voltage of I/F P.C. board
If 1 and 2, 3 are different, an error of pressure sensor is considered.
If 2 and 3 are different, check I/F P.C. board.

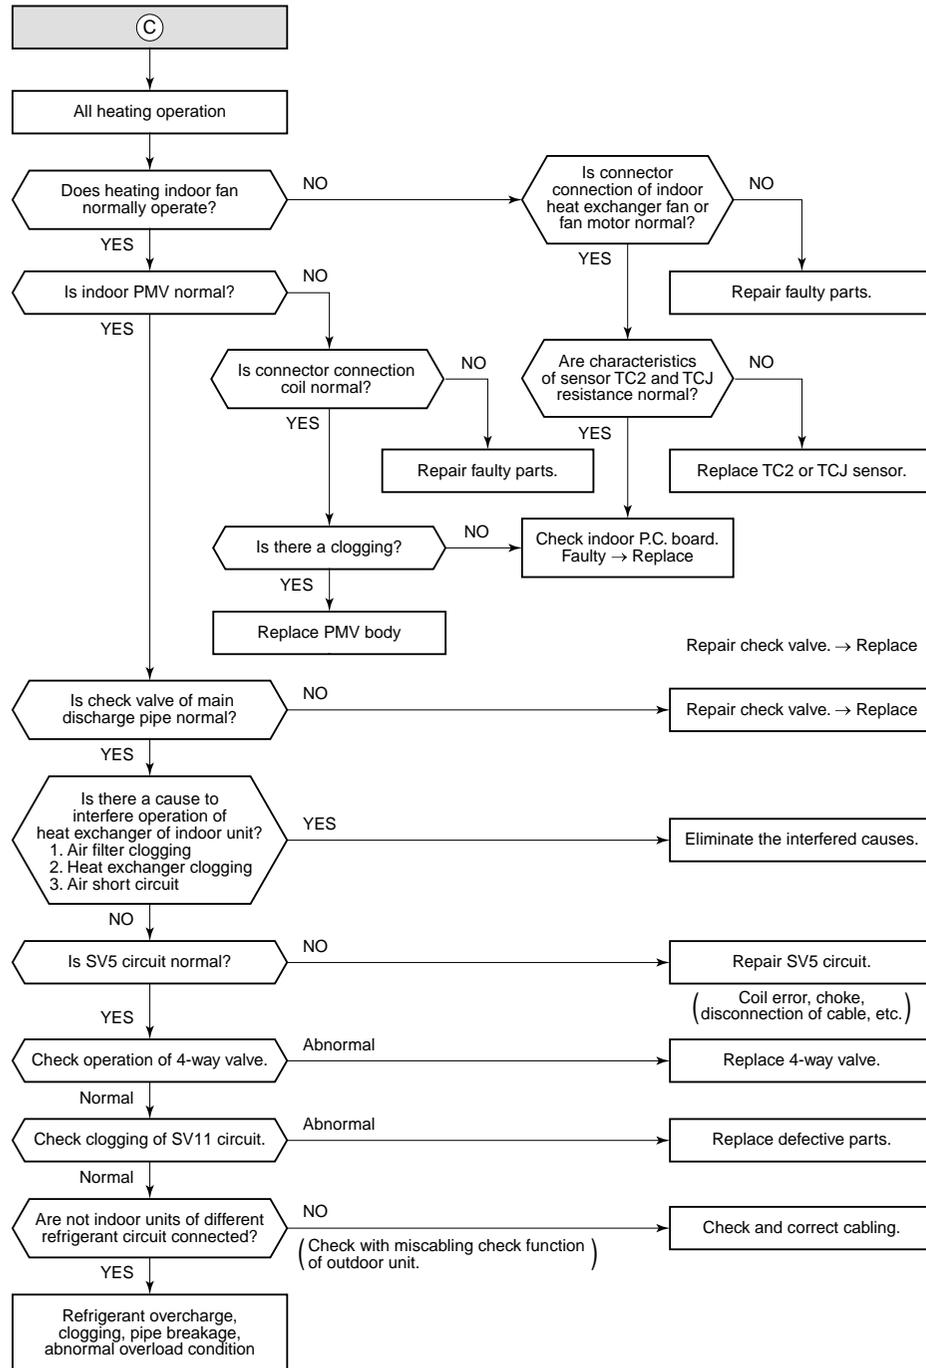


Check code name	Check code name	Cause of operation
[P22] / [1A] (d07 / AI-NET)	Outdoor fan IPDU error	1. Fan lock 2. Fan IPDU P.C. board error 3. Overload cause 4. External cause such as blast 5. Fan IPDU power P.C. board error

Sub-code: 0* : IGBT short circuit
 3* : Motor lock error
 C* : TH sensor error (Heat sink overheating)
 E* : Vdc error
 1* : Position detect circuit error
 4* : Motor current error detected
 D* : TH sensor error

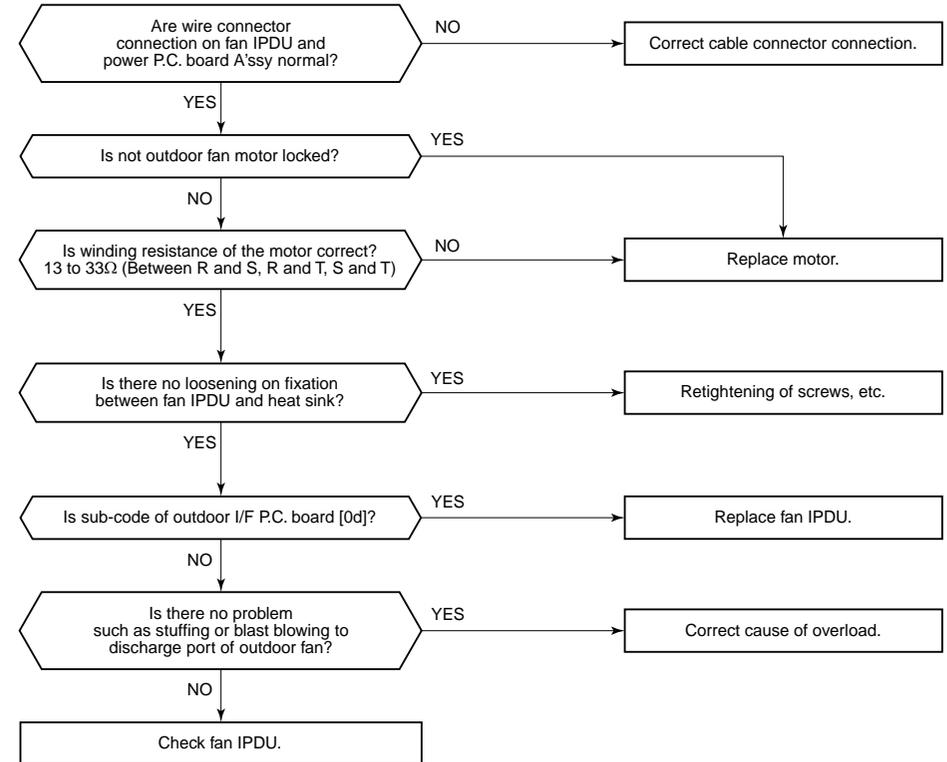

Check code name	Check code name	Cause of operation
[P26] / [14] (d07 / AI-NET)	G-Tr short-circuit protection error	1. Outdoor unit power error 2. IPDU error/Cable connection error 3. Compressor error 4. IPDU P.C. board error


Sub-code: 01: Compressor 1 side 02: Compressor 2 side

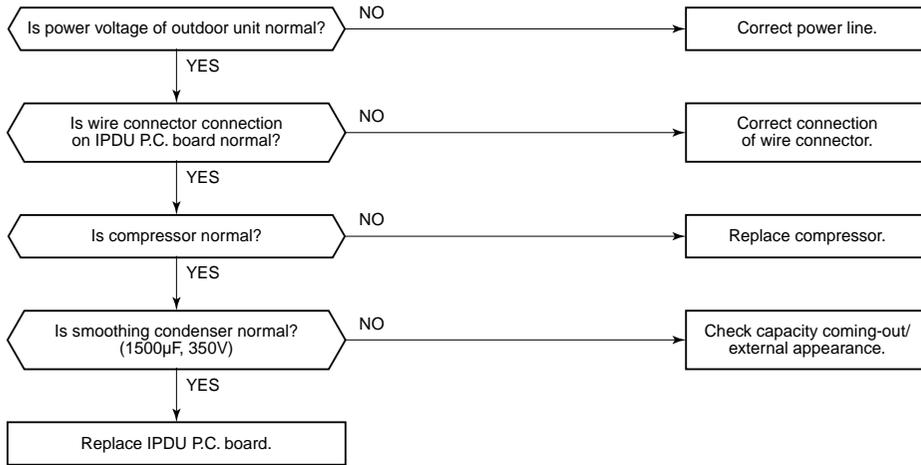

06

Check code name	Check code name	Cause of operation
[P29] / [16] (d07 / AI-NET)	Compressor position detective circuit error	1) Cable/connector connection error 2) Compressor error 3) IPDU P.C. board error


Sub-code: 01: Compressor 1 side 02: Compressor 2 side

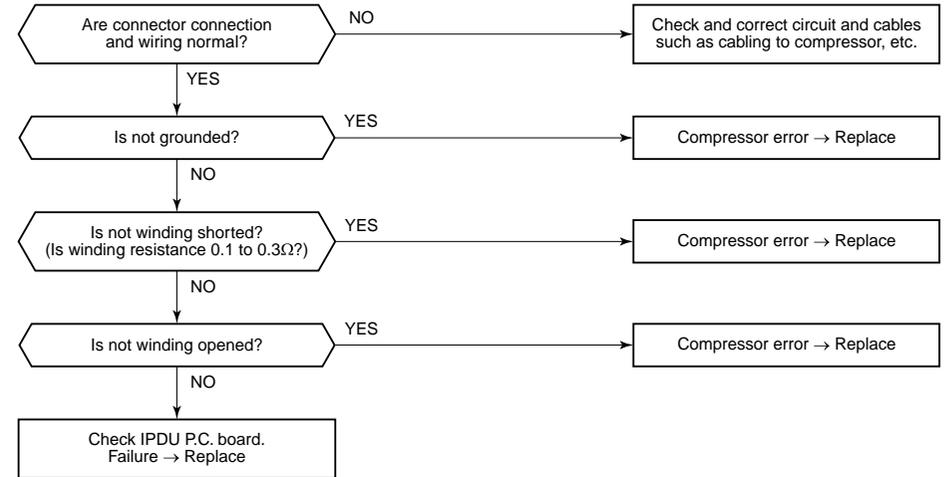

Check code name	Check code name	Cause of operation
[P31] / [47] (d07 / AI-NET)	Other indoor error (Group follower unit error)	Other indoor unit in the group is abnormal.

When the header unit of the group detected [E03, L03, L07, L08 error], the follower unit of the group displays [P31] error and stops. There are no check code display and alarm record of the main remote controller.

Check code name	Check code name	Cause of operation
[-] / [97] (d07 / AI-NET)	AI-NET communication line error	AI-NET communication line error

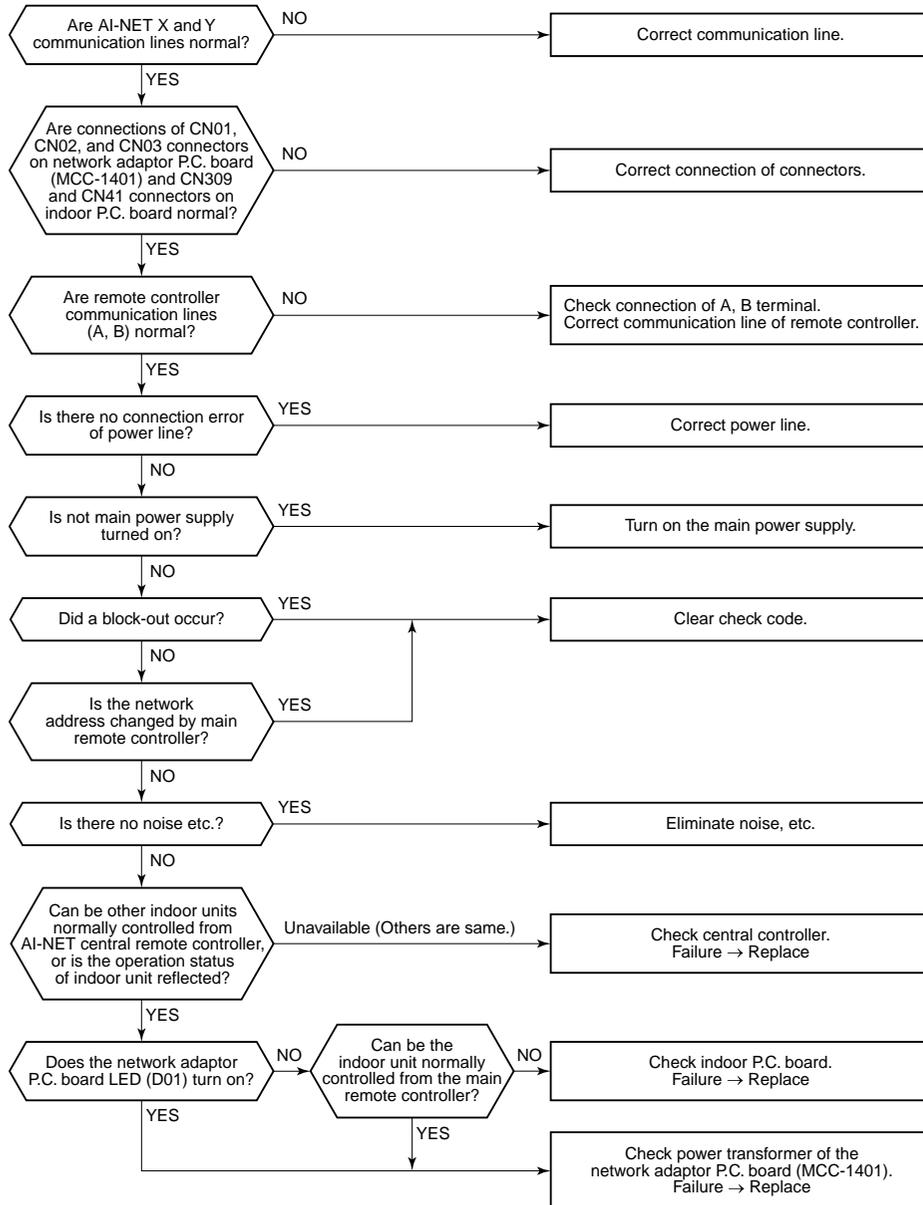


7-6. 7-Segment Display Function

■ 7-segment display on the outdoor unit (Interface P.C. board)

On the interface control P.C. board, 7-segment LED to check the operating status is provided on the control P.C. board.

The displayed contents are changed by combining the setup numbers of the rotary switches (SW01, SW02, and SW03) on P.C. board.

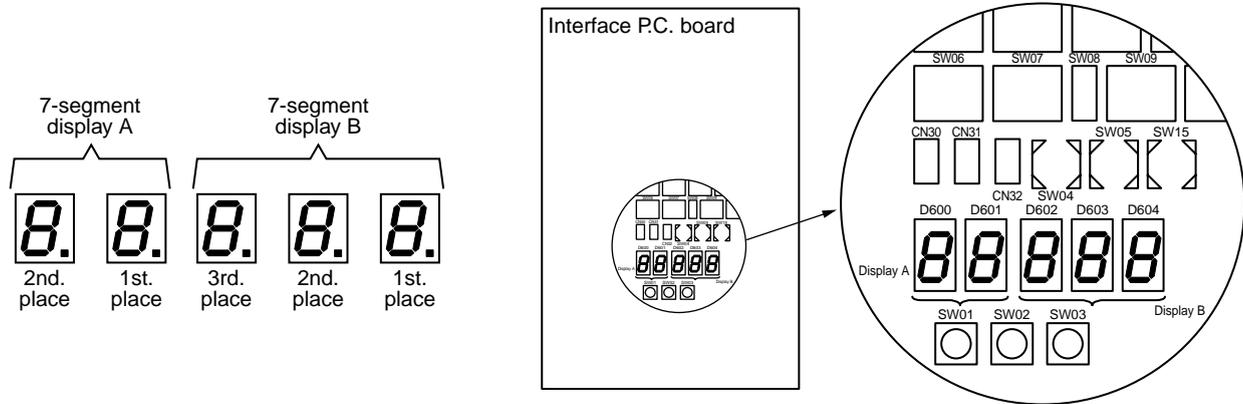

◆ Check procedure in case of stop with trouble

When the system stopped due to a trouble of the outdoor unit, execute a check in the following procedure.

1. Open the panel of the outdoor unit, and then check the 7-segment display.

The check code is displayed at the right side of 7-segment display B.

[U1] [000] ([000]: Check code)

* Switch setup when confirming the check code: SW01 [1], SW02 [1], SW03 [1]

However the check code [000] is displayed for 3 seconds and the sub-code [000] for 1 second are alternately displayed if an sub-code is provided.

2. Confirm the check code, and then conduct the check operation based on the procedure of each check code diagnosis.

3. [U1] [E28] on 7-segment display means a trouble on the follower unit.

Push the push-switch SW04 on the header unit for several seconds. (2 seconds or more)

As only the fan of the outdoor unit with a trouble drives, open the panel of the corresponding unit, and then confirm the check code displayed with 7-segment.

4. Perform the check operation based on the procedure of each check code diagnosis.

How to read the check monitor

<7-segment display>



1. Data display of system information (Displayed on the header outdoor unit only)

SW01	SW02	SW03	Display contents				
1	1	3	Refrigerant name	Displays refrigerant name.		A	B
				Model with refrigerant R410A		r4	10A
				Model with refrigerant R407C		r4	07C
	2	System capacity	A	[5] to [48] : 5 to 48HP			
			B	[HP]			
	3	No. of outdoor units	A	[1] to [4] : 1 to 4 units			
			B	[P]			
	4	No. of connected indoor units/ No. of units with cooling thermo ON	A	[0] to [48] : 0 to 48 units (No. of connected units)			
			B	[C0] to [C48] : 0 to 48 units (No. of units with cooling thermo ON)			
	5	No. of connected indoor units/ No. of units with heating thermo ON	A	[0] to [48] : 0 to 48 units (No. of connected units)			
			B	[H0] to [H48] : 0 to 48 units (No. of units with heating thermo ON)			
	6	Compressor command correction amount	A	Data is displayed with hexadecimal notation			
			B				
	7	Release control	A	Normal time : [r], During release control: [r1]			
			B	—			
	8	Oil-equalization control	A	Normal time : [oiL-0]			
B			During oil equation : [oiL-1]				
9	Oil-equalization request	A	Displays with segment LED lighting pattern				
		B	<p>Display A Display B</p> <p>F in the left figure goes on: Header requests oil equalization. C in the left figure goes on: Follower requests oil-equalization. (Outdoor unit number)</p>				
10	Refrigerant/oil recovery operation	A	During sending of cooling refrigerant oil recovery signal : [C1]. Normal time : [C]				
		B	During sending of heating refrigerant oil recovery signal : [H1]. Normal time : [H]				
11	Automatic address	A	[Ad]				
		B	Automatic addressing : [FF], Normal time : []				
12	Demand operation	A	[dU]				
		B	Normal time : []. In 50% to 90% : [50 to 90] When controlling by communication line input : [E50 to E90]				
13	Optional control (P.C. board input)	Displays optioned control status		A	B		
		Operation mode selection : In heating with priority (Normal)		h.*	*,*,*.		
		Priority on cooling		c.*	*,*,*.		
		Heating only		H.*	*,*,*.		
		Cooling only		C.*	*,*,*.		
		Priority on No. of operating indoor units		n.*	*,*,*.		
		Priority on specific indoor unit		U.*	*,*,*.		
		Batch start/stop : Normal		*,....	*,*,*.		
		Start input		*,1.	*,*,*.		
		Stop input		*,0.	*,*,*.		
		Night low-noise operation : Normal		*,*.	*,*,*.		
		Operation input		*,*.	1,*,*.		
		Snow fan operation : Normal		*,*.	*,*,*.		
Operation input		*,*.	*,1,*.				
14	Option control (BUS line input)	Same as above					
15	Unused						
16	—	A	—				
		B	—				

* mark: Indicates none on display

2. Data display of outdoor unit information (Displayed on each outdoor unit)

SW01	SW02	SW03	Display contents						
1	1	1	Error data	A	Displays outdoor unit number: [U1] to [U4]				
				B	Displays check code (Latest code only is displayed.) There is no check code: [— — —] There is sub-code: Check code [* * *] for 3 seconds, sub-code [— * *] for 1 second alternately				
							<SW04> push function : Fan of unit with error only drives. 7-segment A: [E1] <SW04 + SW05> push function : Fan of normal unit only drives. 7-segment A: [E0] <SW05> push function : Interruption of fan operation function		
			2	—	A	—			
					B	—			
			3	Operation mode	A	Stop: [] Normal cooling: [C], Normal heating: [H], Normal defrost: [J]			
					B	—			
			4	Outdoor unit HP	A	5HP: [5], 6HP: [6], 8HP: [8], 10HP: [10], 12HP: [12]			
					B	[HP]			
			5	Compressor operation command	A	No.1 compressor operation command is displayed. Data display with Hexadecimal notation: [00 to FF]			
					B	No.2 compressor operation command is displayed. Data display with Hexadecimal notation: [00 to FF]			
							<SW04> push function : Inverter frequency is exchanged to decimal notation. 7-segment display (A/B) : [* *] [* * H] (Normal display by pushing <SW05>)		
			6	Outdoor fan step	A	[FP]			
					B	Step 0 to 31: [0 to 31]			
			7	Compressor backup	A	Displays No.1 compressor setup status Normal: [], Backup setup: [C1]			
					B	Displays No.2 compressor setup status Normal: [], Backup setup: [C2]			
8	—	A	—						
		B	—						
9	Control valve output data	Displays control output status of solenoid valve		A	B				
		4-way valve: ON		H. 1	… … …				
10	Control valve output data	4-way valve: OFF		H. 0	… … …				
		SV2: ON / SV5: OFF		2. 1	… 5. 0				
11	Control valve output data	SV2: OFF / SV5: ON		2. 0	… 5. 1				
		SV3A: ON / SV3B: OFF / SV3C: OFF /SV3D: OFF		3. 1	0 0 0				
12	Control valve output data	SV3A: OFF / SV3B: ON / SV3C: OFF /SV3D: OFF		3. 0	1 0 0				
		SV3A: OFF / SV3B: OFF / SV3C: ON /SV3D: OFF		3. 0	0 1 0				
13	Control valve output data	SV3A: OFF / SV3B: OFF / SV3C: OFF /SV3D: ON		3. 0	0 0 1				
		SV41: ON / SV42: OFF		4. …	1 0 …				
14	Control valve output data	SV41: OFF / SV42: ON		4. …	0 1 …				
		—		… … …	… … …				
15	Control valve output data	—		… … …	… … …				
		PMV1 /PMV2 opening		Displays opening data (Decimal) (Total opening)	* *	* *. P			
16	Oil level judgment status	—		… *	* *. P				
		A	[oL] <SW05> push SW function: The following data is displayed for 2 seconds. * During oil shortage in compressor 1: [L …], during oil shortage in compressor 2: [… L]						
		B	Initial display: [… … …], Oil level judgment result: [A. #. *] Judgment result of compressor 1 in [#], compressor 2 in [*] (0: Normal, 1, 2: Shortage) is displayed.						

3. Data display of outdoor cycle (Displayed on each outdoor unit)

SW01	SW02	SW03	Display contents					
1	1	2	Pd pressure data	Pd pressure (MPaG) is displayed with decimal data. (MPaG: Approx. 1/10 value of kg/cm ² G data)		A	B	
						P d.	*. *. *	
			2	Ps pressure data	Ps pressure (MPaG) is displayed with decimal data.		P S.	*. *. *
			3	PL pressure conversion data	Estimated pressure of liquid line (MPaG) is displayed with decimal data.		P L.	*. *. *
			4	TD1 sensor data	Temperature sensor data (°C) is displayed with decimal notation.	Symbol	t d	1
						Data	*	*. *. *
			5	TD2 sensor data	<ul style="list-style-type: none"> Symbol display for 1 sec. and data display for 3 sec. are alternately displayed. Data is displayed in [*]. 	Symbol	t d	2
						Data	*	*. *. *
			6	TS1 sensor data	<ul style="list-style-type: none"> Negative data is displayed as [- * * * *]. 	Symbol	t S	1
						Data	*	*. *. *
			7	TS2 sensor data		Symbol	tS	2
						Data	*	*. *. *
			8	TE sensor data		Symbol	tE	—
						Data	—	—
			9	TL sensor data		Symbol	t L	
						Data	*	*. *. *
10	TO sensor data		Symbol	t o				
			Data	*	*. *. *			
11	TK1 sensor data		Symbol	F 1				
			Data	*	*. *. *			
12	TK2 sensor data		Symbol	F 2				
			Data	*	*. *. *			
13	TK3 sensor data		Symbol	F 3				
			Data	*	*. *. *			
14	TK4 sensor data		Symbol	F 4				
			Data	*	*. *. *			
15	—	A	—					
			B	—				
16	—	A	—					
			B	—				

4. Data display of indoor unit information (Displayed on the header unit only)

SW01	SW02	SW03	Display contents		
4	1 to 16	1 to 3	Receiving status of indoor BUS communication	B	Receiving time: [····· 1], Not received: [····· ···]
5			Indoor check code	B	No check code: [— —]
6			Indoor capacity (HP) horse power	B	0.2, 0.5, 0.8, ··· 1, 1.2, 1.7, ··· 2, 2.5, ··· 3, 3.2, ··· 4, ··· 5, ··· 6, ··· 8, 10, 16, 20
7			Indoor request command (S code)	B	Data is displayed with Hexadecimal notation [····· 0 to ····· F] : Heating
8			Indoor PMV opening data	B	Data is displayed with Hexadecimal notation
9			Indoor TA sensor data	B	Data is displayed with Hexadecimal notation
10			Indoor TF sensor data	B	Data is displayed with Hexadecimal notation
11			Indoor TCJ sensor data	B	Data is displayed with Hexadecimal notation
12			Indoor TC1 sensor data	B	Data is displayed with Hexadecimal notation
13			Indoor TC2 sensor data	B	Data is displayed with Hexadecimal notation

NOTE) Indoor address No. is chosen by changing SW02 and SW03.

SW03	SW02	Indoor address	7-segment display A
1	1 to 16	SW02 setup number	[01] to [16]
2	1 to 16	SW02 setup number + 16	[17] to [32]
3	1 to 16	SW02 setup number + 32	[33] to [48]

5. Outdoor EEPROM write-in error code display (Displayed on the header unit only)


* The latest error code written in EEPROM of each outdoor unit is displayed.

(It is used when confirming the error code after power supply has been reset.)

Set SW01 to 03 as shown in the following table, and the push SW04 for 5 seconds or more to display an error code.

W01	SW02	SW03	Display contents	7-segment display	
				A	B
1	1	16	The latest error code of the header unit 1 (U1)	E. r	1. --
	2		The latest error code of the follower unit 1 (U2)	E. r	2. --
	3		The latest error code of the follower unit 2 (U3)	E. r	3. --


■ 7-segment display A, B

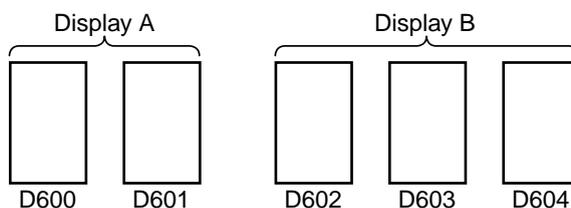


7-7. Sensor Characteristics

Indoor Unit

■ Temperature sensor characteristics

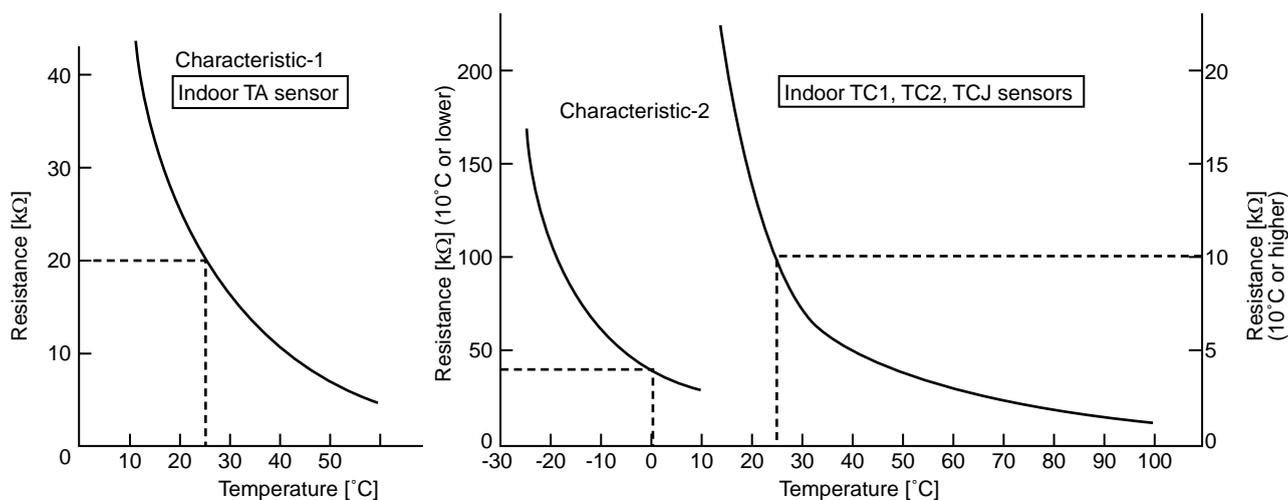


2. Connection of wireless remote controller kit 1-way Air Discharge Cassette Type (2 Series)

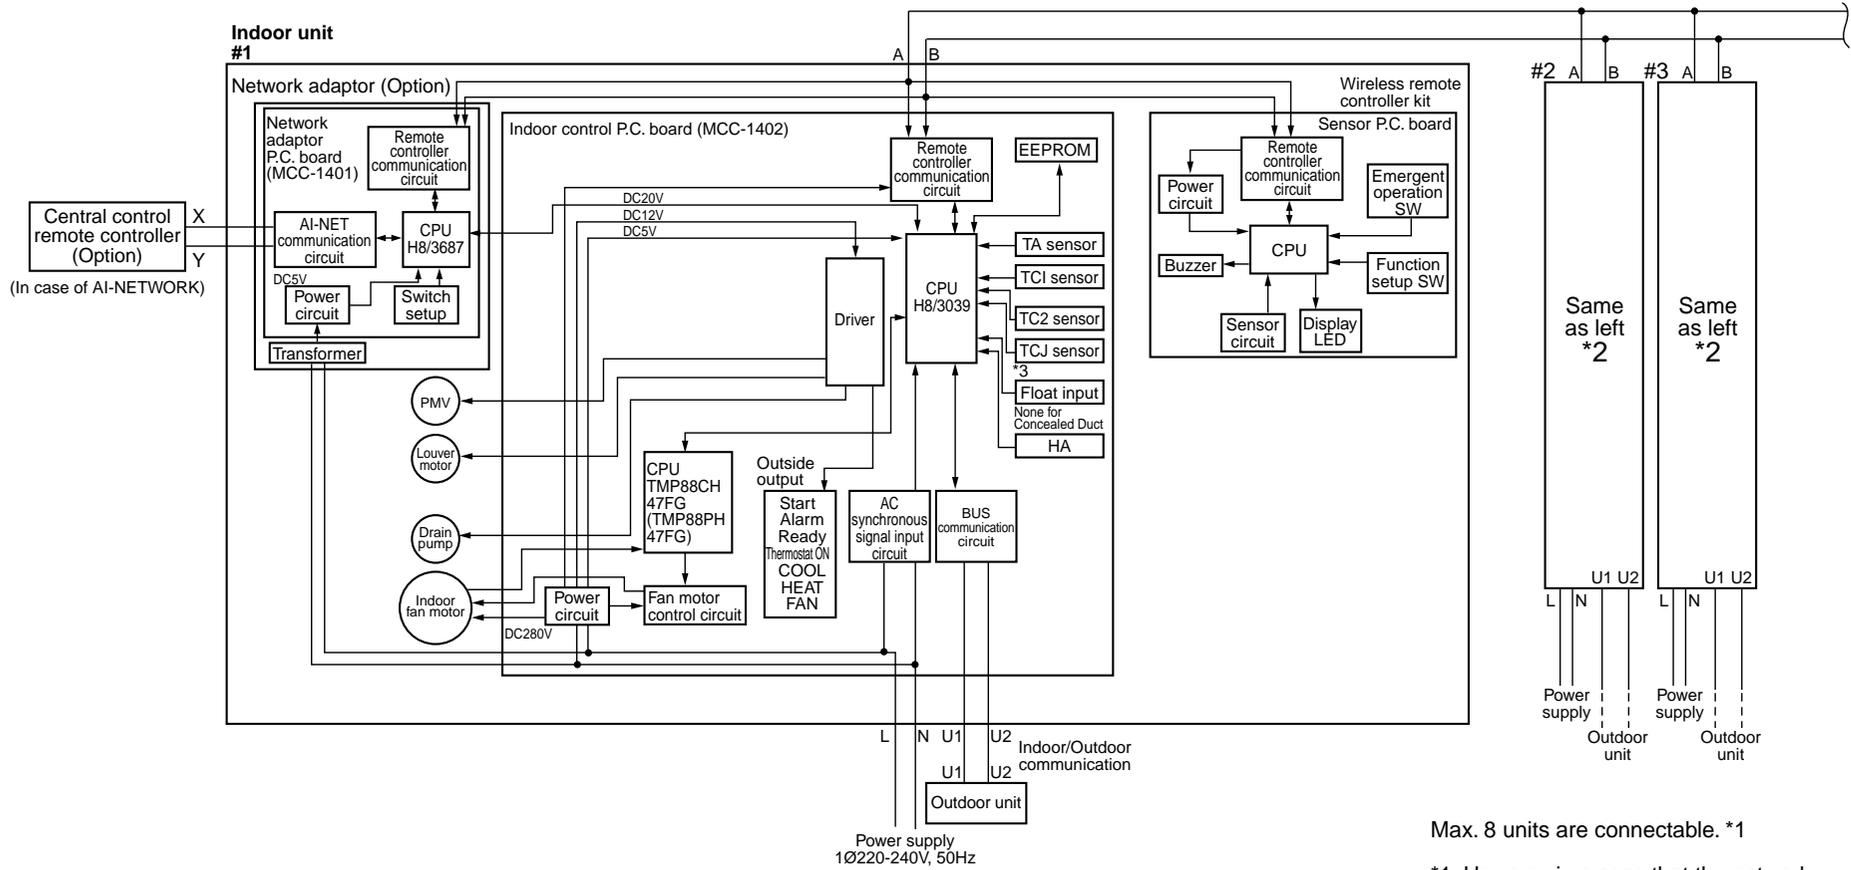

Max. 8 units are connectable. *1

*1 However in a case that the network adaptor is installed when 2 wireless remote controller kits are connected, maximum 7 units are connectable.

*2 The network adaptor is installed to only.

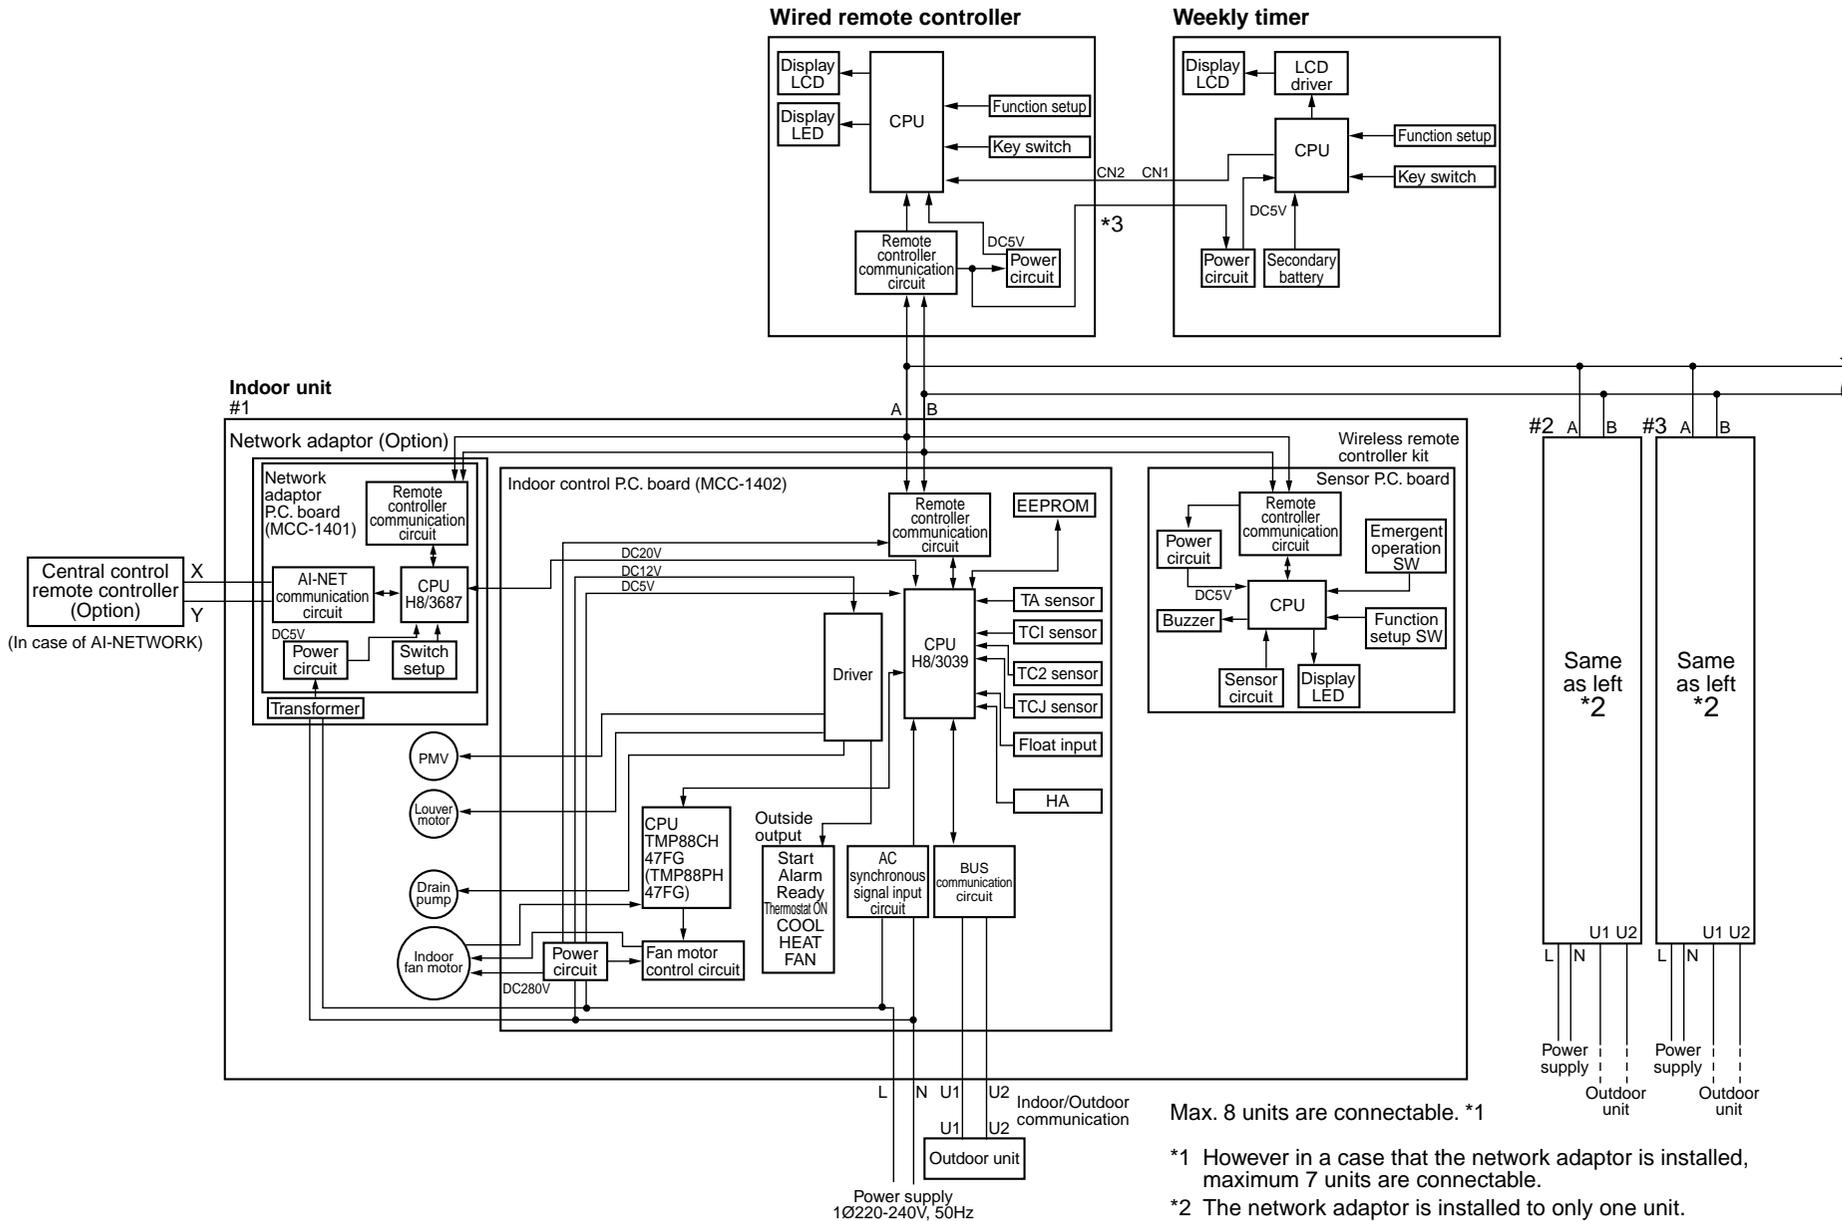

Max. 8 units are connectable. *1

*1 However in a case that the network adaptor is installed, maximum 7 units are connectable.


*2 The network adaptor is installed to only one unit.

*3 The weekly timer cannot be connected to the simple wired remote controller.

3. Connection of both remote controller and wireless remote controller kit
1-way Air Discharge Cassette Type (2 Series)

8-1-2. Indoor Print Circuit Board
MCC-1402
1-way Air Discharge Cassette Type (2 Series)

100

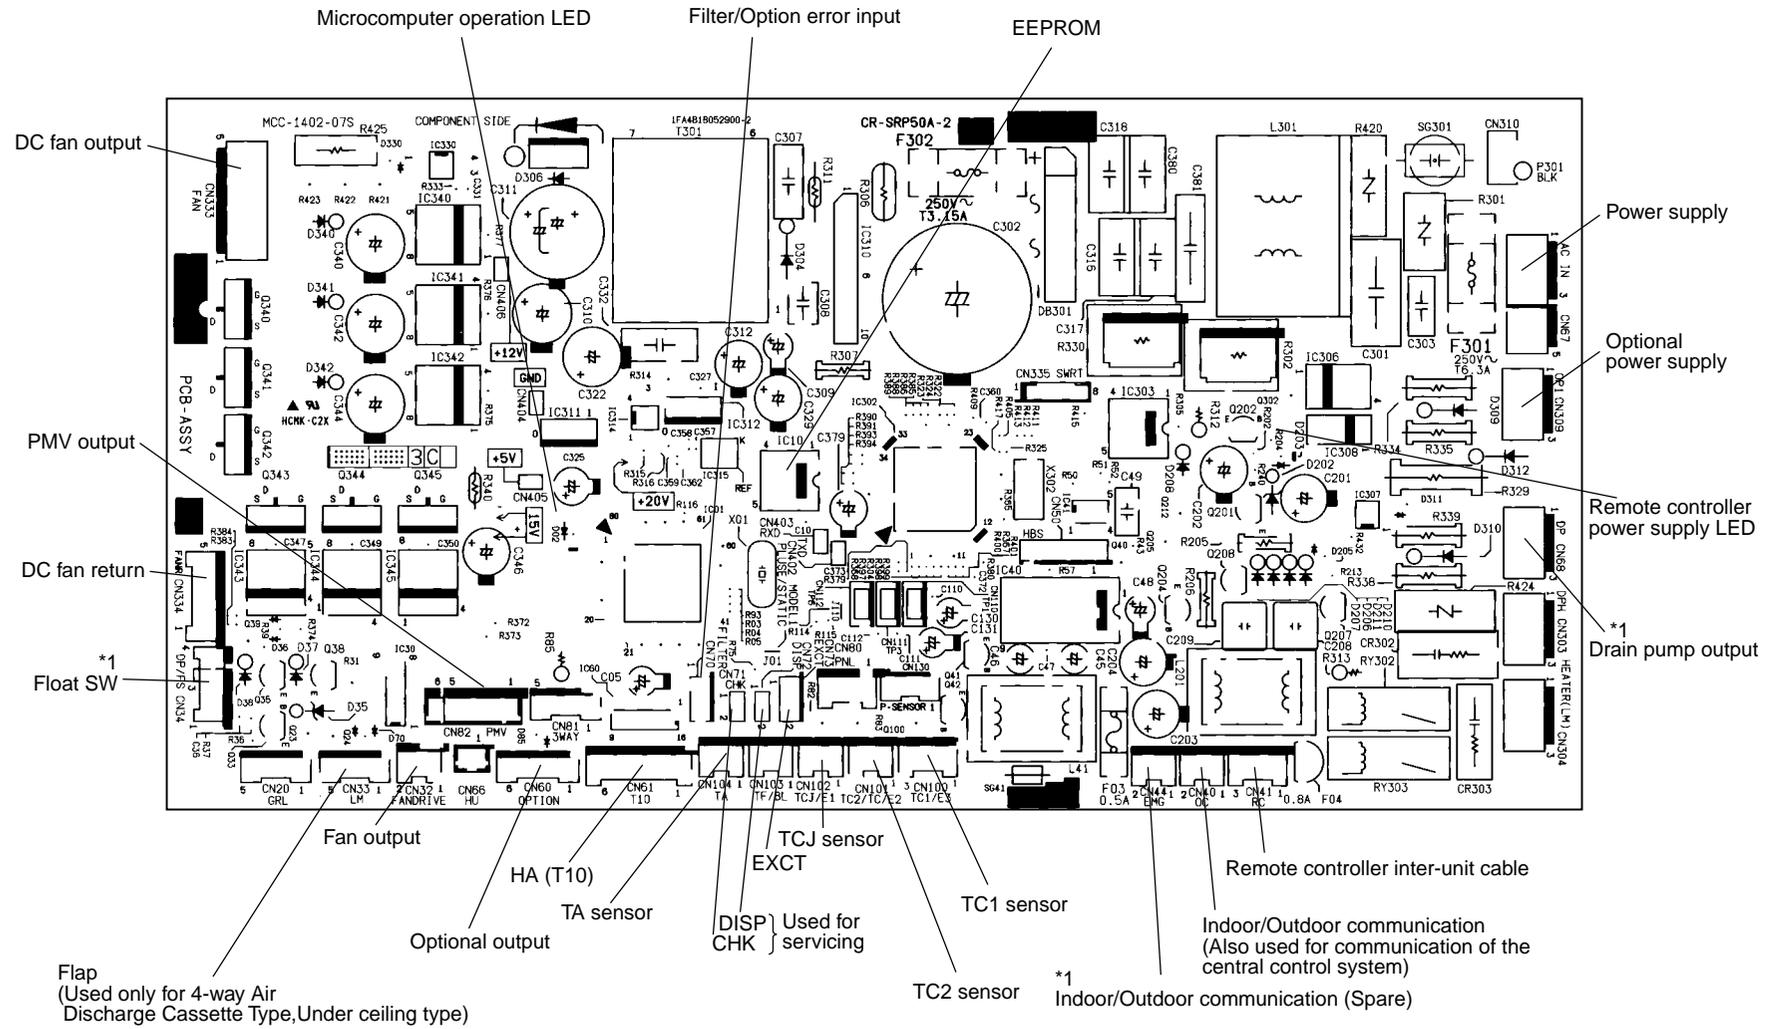

*1 Nome for under ceiling, high wall



8-1-3. Optional Connector Specifications of Indoor P.C. Board



Function	Connector No.	Pin No.	Specifications	Remarks
Humidifier output	CN66	①	DC12V	In heating, thermo ON, Fan ON, Humidifier output ON * Humidifier provided, Drain pump ON is set up by CN70 short-circuit or from remote controller. (DN=40)
		②	Output	
Fan output	CN32	①	DC12V	Shipment setup: ON with indoor unit operation and OFF with stop are linked. * Single operation by FAN button on remote controller is set up from remote controller (DN=31)
		②	Output	
—	CN61	①	ON/OFF input	HA ON/OFF input (J01: YES/NO=Pulse (At shipment) / Static input select)
		②	0V (COM)	
		③	Main prohibition input	Operation stop of main remote controller is permitted / prohibited by input.
		④	Operation output	ON during operation (Answerback of HA)
		⑤	DC12V (COM)	
		⑥	Alarm output	ON during alarm output
Option output	CN60	①	DC12V (COM)	
		②	Defrost output	ON when outdoor unit is defrosted
		③	Thermo ON output	ON during Real thermostat ON (Compressor ON)
		④	COOL output	ON when operation mode is cooling system (COOL, DRY, Cool/Heat Auto cooling)
		⑤	HEAT output	ON when operation mode is heating system (HEAT, Cool/Heat Auto cooling)
		⑥	Fan output	ON when indoor fan is ON (During use of air cleaner/Interlock cabling)
Outside error input	CN80	①	DC12V (COM)	Generate check code "L30" (for 1 minute continuously) to stop forcedly the operation.
		②	DC12V (COM)	
		③	Outside error input	
—	CN20	—	—	—
—	CN70	—	—	—
CHK operation check	CN71	①	Check mode input	Used for indoor operation check. (Outdoor does not communicate with remote controller, and outputs specified operation such as indoor fan "H", drain pump ON, etc.)
		②	0V	
DISP exhibition mode	CN72	①	Display mode input	Exhibition mode enables to communicate by indoor unit and remote controller only. (When power has been turned on.) Timer short (Usual)
		②	0V	
EXCT demand	CN73	①	Demand input	Indoor unit forced thermostat OFF operation
		②	0V	




9. DETACHMENTS


MMU-AP0152SH, AP0182SH, AP0242SH



Ceiling panel: RBC-US21PGE

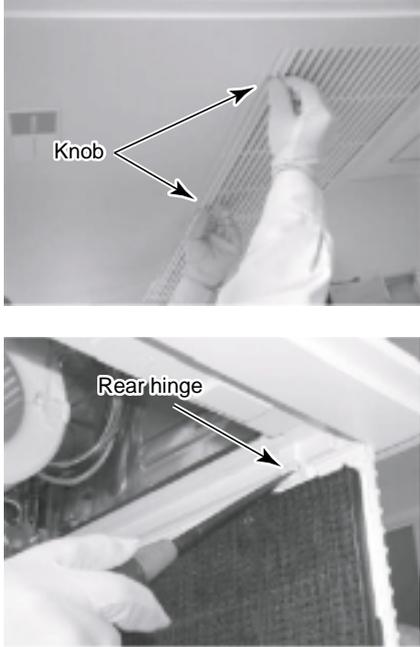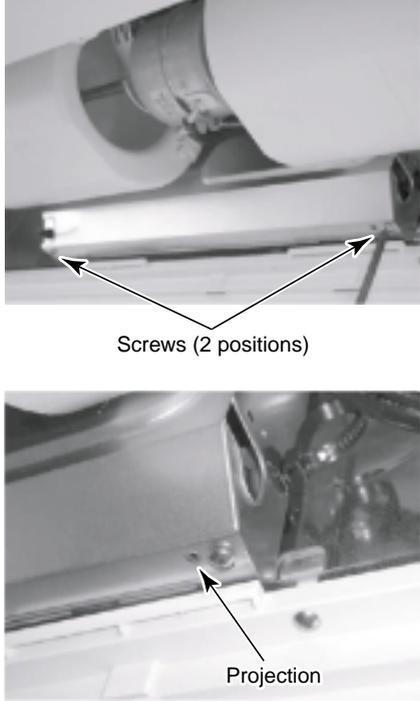
No.	Part name	Procedure	Remarks
①	Suction grille	<p style="text-align: center;">REQUIREMENT</p> <p>Be sure to put on gloves when working; otherwise an injury may be caused.</p> <p>1. Detachment</p> <ol style="list-style-type: none"> 1) Stop operation of the air conditioner, and then turn off switch of the breaker. 2) Open the grilles by sliding knobs toward suction side. (Both 2 pieces at left and right sides) 3) Pull out the grille by pushing claws at rear hinge (2 positions) with (-) screwdriver. <p>2. Attachment</p> <ol style="list-style-type: none"> 1) Insert the rear hinge (2 positions) into square holes of the panel. (Insert it surely up to the end.) <p>NOTE) After inserting the hinge, check the grille does not fall out even if pulling the grilles.</p> <ol style="list-style-type: none"> 2) Close the grilles and slide the hooks (2 positions) toward discharge side to fix them. 	
②	Electric parts cover	<p>1. Detachment</p> <ol style="list-style-type: none"> 1) Perform work of procedure 1. of ①. 2) Loosen fixing screws. (Ø4 × 8, 2 pcs) 3) Pull down the cover and shift it to the fan motor side to remove it. <p>2. Attachment</p> <ol style="list-style-type: none"> 1) Insert the cover along edge of the electric parts box and match the projection inside of the fixing screw with hole of the cover. 2) Tighten the fixing screws. (Ø4 × 8, 2 pcs) 	


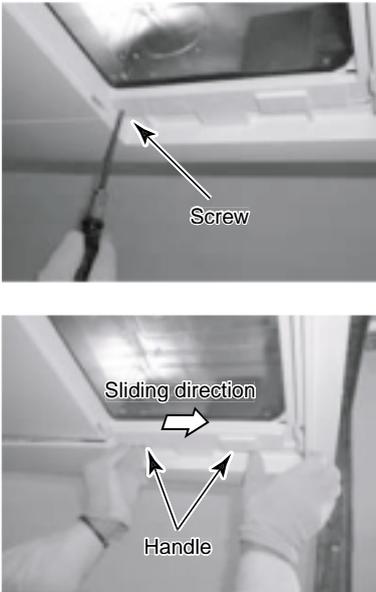
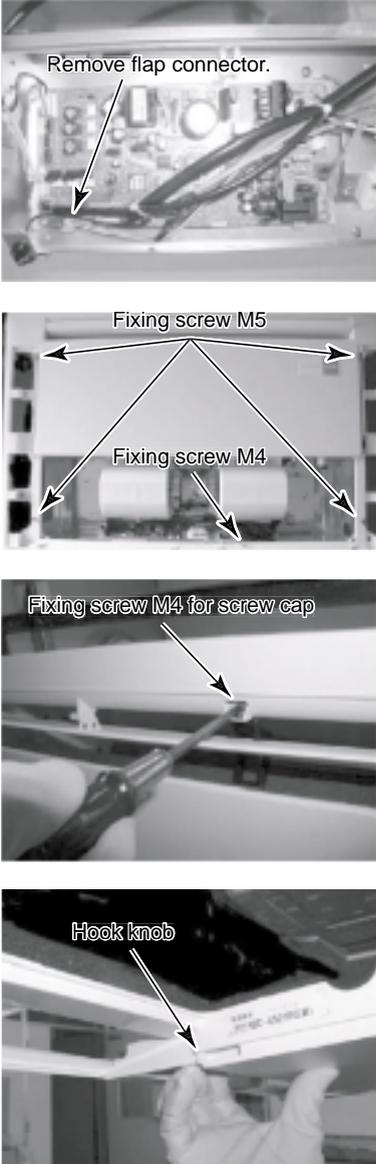
No.	Part name	Procedure	Remarks
③	Adjust cap	<p>1. Detachment</p> <ol style="list-style-type: none"> 1) Perform work of procedure 1. of ①. 2) Take off fixing screws. (Ø4 × 12, 2 pcs) 3) Hold handle of the cap, and then slide it toward suction side to remove cap. <p>2. Attachment</p> <ol style="list-style-type: none"> 1) Catch on the top claw and slide it toward discharge side for attachment. 2) Fit the fixing screws. (Ø4 × 12, 2 pcs) 	
④	Ceiling panel	<p>1. Detachment</p> <ol style="list-style-type: none"> 1) Perform works of procedures 1. of ② and 1. of ③. 2) Remove flap connector (CN33 White, 5P) connected to the control P.C. board, and then take off the lead wire from the clamp. <p>NOTE) When removing the connector, unlock the lock of the housing.</p> <ol style="list-style-type: none"> 3) Take off screws fixing the ceiling panel. (M5 × 4 pcs, M4 × 2 pcs) <p>NOTE) Be sure to open the screw cap before taking off the fixing screw (M4) at the center of the discharge port.</p> <ol style="list-style-type: none"> 4) While pulling down the ceiling panel by pushing the knob of hook (movable) at right side of the panel toward inner side, remove the hook (movable) and also the hook (movable) at left side to pull down the ceiling panel by lifting the left side of the panel and sliding toward outside. <p>2. Attachment</p> <ol style="list-style-type: none"> 1) Hook the hooks at both sides of the ceiling panel to the indoor unit. 2) Fit the fixing screws. (M5 × 4 pcs, M4 × 2 pcs) <p>NOTE) Be sure to close the screw cap after screwing the fixing screw (M4) at the center of the discharge port.</p> <ol style="list-style-type: none"> 3) Connect the flap connector of the ceiling panel to the connector (CN33 White, 5P) of the control P.C. board. 	

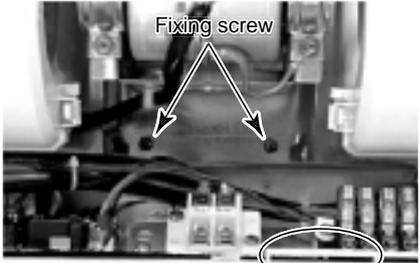
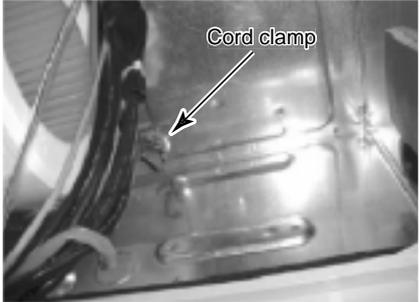
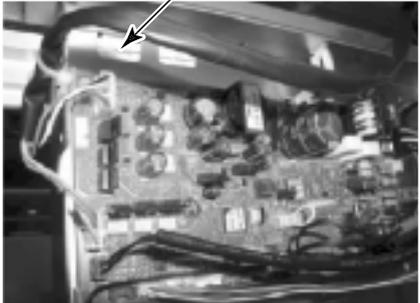
No.	Part name	Procedure	Remarks
⑤	Electric parts box	<p>1. Detachment</p> <ol style="list-style-type: none"> 1) Perform work of procedure 1. of ②. 2) Take off the fixing screws. (Ø4 × 8, 4 pcs) 3) Remove the cord clamp on the ceiling surface, pull the electric parts box downward, and then hook the hooking claw at the rear side to square hole of the panel. <p>2. Attachment</p> <ol style="list-style-type: none"> 1) Take off the hook at the rear side of the electric parts box. 2) Return the electric parts box at the original position, and then fit the fixing screws. (Ø4 × 8, 4 pcs) 3) Using cord clamp at the ceiling surface, fix the lead wires as before. 	 <p>Fixing screw</p>  <p>Square hole for hooking electric parts box</p>  <p>Fixing screw</p>  <p>Cord clamp</p>  <p>Hooking section</p>

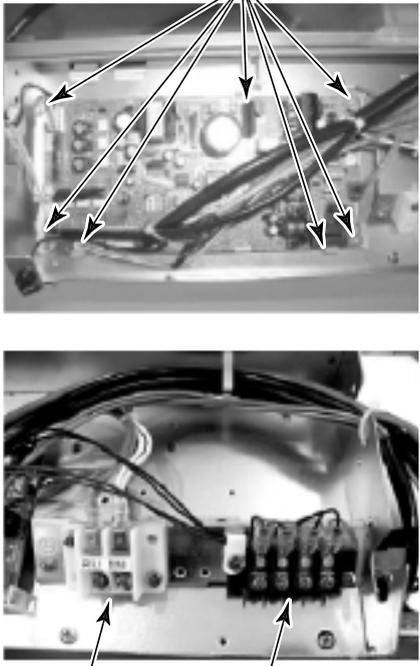No.	Part name	Procedure	Remarks
⑥	Control P.C. board	<p>1. Detachment</p> <ol style="list-style-type: none"> 1) Perform work of procedure 1. of ⑤. 2) Remove connectors connected from the control P.C. board to other parts. <p>NOTE) Be sure to unlock the lock of the housing before removing the connector.</p> <p>CN33: Flap motor (5P: White) CH34: Float switch (3P: Red) CN41: Remote controller terminal block (3P: Blue) (Screws of terminal block: 4P) CN67: Power supply terminal block (2P: Black) (Screws of terminal block: 2P) CN68: Drain pump (2P: Blue) CN82: PMV (6P: Blue) CN100: TC1 sensor (3P: Brown) CN101: TC2 sensor (2P: Black) CN102: TCJ sensor (2P: Red) CN104: Room temp. Sensor (2P: Orange) CN333: Fan motor power supply (5P: White) CN334: Fan motor position detection (5P: White)</p> <ol style="list-style-type: none"> 3) Unlock the locks of the card edge spacers (7 positions), and then remove the control P.C. board. <p>2. Attachment</p> <ol style="list-style-type: none"> 1) Fix the control P.C. board to the card edge spacers (7 positions). 2) Connect the connectors disconnected in item 1 as before. <p>NOTE) For connectors, check there is no missing or contact failure.</p>	<p>Card edge spacer</p>  <p>Power supply terminal block 2P</p> <p>Remote controller terminal block 4P</p>

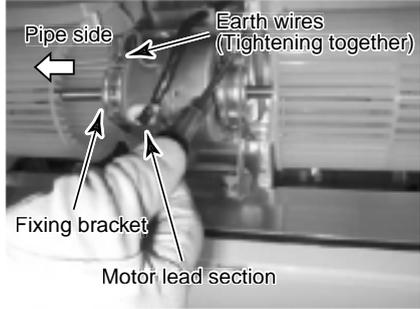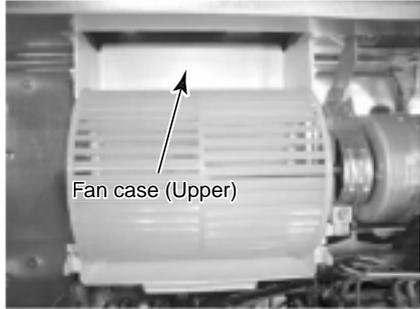No.	Part name	Procedure	Remarks
⑦	Fan motor fan	<p>1. Detachment</p> <ol style="list-style-type: none"> 1) Perform work of procedure 1. of ②. 2) Remove clamps of the lead wires which are connected to the following connectors of the control P.C. board. <p>NOTE) Be sure to unlock the lock of the housing before removing the connector.</p> <p>CN333: Fan motor power supply (5P: White)</p> <p>CN334: Fan motor position detection (5P: White)</p> <ol style="list-style-type: none"> 3) Remove the hooking claws at both sides of the fan case (lower) and remove the fan by pulling out it from the partition board. 4) Loosen hexagon socket head screw of the fan. 5) Remove screws of the fixing bracket while holding the fan motor, and then remove the fan and the fan motor. Earth wires of the motor are tightened together. <p>2. Attachment</p> <ol style="list-style-type: none"> 1) Insert the fan into the shaft of the motor and screw the fan motor with the fixing bracket. (Tighten earth lead wires of the motor together as before.) For the boss of the fan, attach hexagon socket head screw to shaft of the motor matching the marked position of the shaft with groove of the fan. <p>NOTE) Match the rotation direction of the motor with that of the fan, and fix the fan motor so that the motor lead section comes to the piping side referring to the right photo,</p> <ol style="list-style-type: none"> 2) Determine the position so that the fan locates at the center against the fan case (upper), and then fix the fan with hexagon socket head screw. <p>NOTE) For fixation, use a torque wrench and tighten with 4.9 N•m or more.</p> <ol style="list-style-type: none"> 3) Mount the fan case (lower) as before, and check the fan smoothly rotates without contacting with fan case. 4) Connect the connectors disconnected in procedure 1. 5) Fix parts as before in order of Electric parts cover → Suction grille. 	   

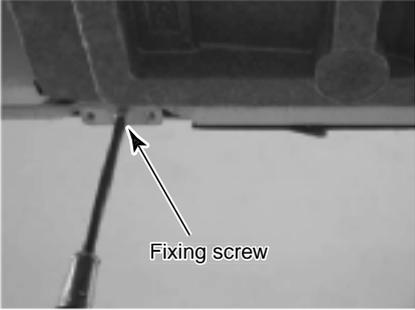No.	Part name	Procedure	Remarks
⑧	Drain pan	<p>1. Detachment</p> <ol style="list-style-type: none"> 1) Perform work of procedure 1. of ④. 2) Remove the drain cap, and then drain the drain water accumulated in the drain pan. <p>NOTE) When removing the drain cap, be sure to catch drain water using bucket, etc.</p> <ol style="list-style-type: none"> 3) Take off screws fixing the drain pan. ($\varnothing 4 \times 8$, 2 pcs) 4) Remove the drain pan while lowering the discharge side. <p>2. Attachment</p> <ol style="list-style-type: none"> 1) Fix parts as before in order of Drain cap → Drain pan → Ceiling panel → Electric parts cover → Adjust cover → Suction grille. 	  

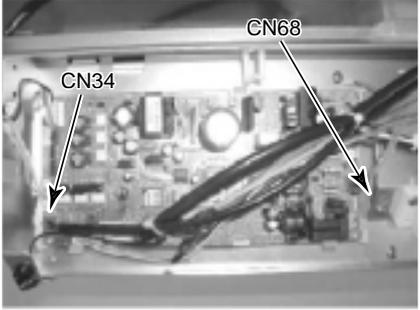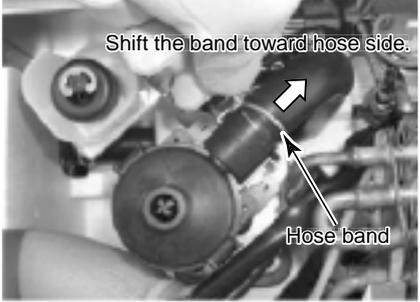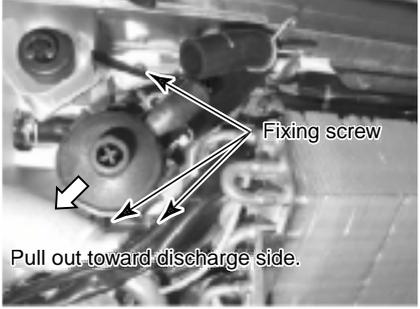No.	Part name	Procedure	Remarks
⑨	Drain pump	<p>1. Detachment</p> <ol style="list-style-type: none"> 1) Perform work of procedure 1. of ⑧. 2) Remove clamps of the lead wires connected to the following connectors of the control P.C. board. <p>NOTE) Be sure to unlock the lock of the housing before removing the connector.</p> <p>CN34: Float switch (3P: Red) CN68: Drain pump (3P: Blue)</p> <ol style="list-style-type: none"> 3) Pick the hose band and shift band from pump connecting part to remove the drain hose. 4) Take off screws fixing the drain pump assembly. (Ø4 × 8, 3 pcs) 5) Pull out the drain pump assembly toward discharge side to remove it. <p>2. Attachment</p> <ol style="list-style-type: none"> 1) Fix the drain pump assembly as before. 2) Connect the drain hose and attach the hose band. <p>NOTE) Insert the drain hose completely up to the end of the pump connecting part, and then attach band at the white mark position of the hose.</p> <ol style="list-style-type: none"> 3) Insert the connectors to the control P.C. board as before. 4) Fix parts as before in order of Drain cap → Drain pan → Ceiling panel → Electric parts cover → Adjust cover → Suction grille. 	  

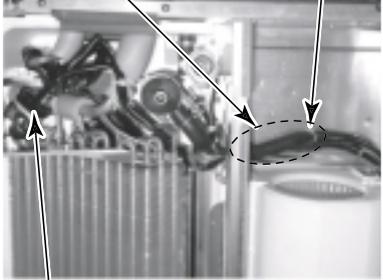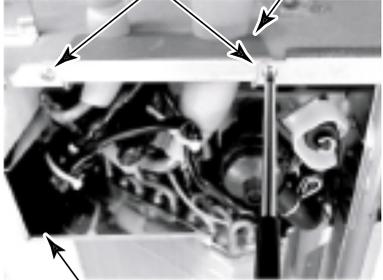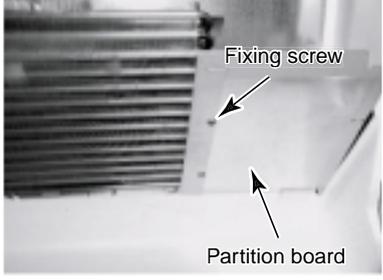No.	Part name	Procedure	Remarks
⑩	PMV motor	<p>1. Detachment</p> <ol style="list-style-type: none"> 1) Perform work of procedure 1. of ⑧. 2) Remove the relay connector of PMV motor. (As the relay connectors are connected in the vinyl tube, cut off the banding band fixing the both ends of the tube and shift the tube to remove relay connector.) 3) Peel off the butyl rubber adhered to the pulse motor valve (PMV) body until PMV body appears, and remove PMV motor after loosening the nut fixing PMV motor with double spanners. <p>2. Attachment</p> <ol style="list-style-type: none"> 1) Mount PMV motor and the relay connector as before. <p>NOTE) Control tightening torque of PMV body and PMV motor with $7.84 \pm 0.98 \text{ N}\cdot\text{m}$.</p>	<p>Relay connector (In vinyl tube (Black)) Banding band</p>  <p>PMV motor PMV body</p> 
⑪	Heat exchanger	<p>1. Detachment</p> <ol style="list-style-type: none"> 1) Recover the refrigerant gas. 2) Remove the refrigerant pipe of the indoor unit. 3) Perform work of procedure 1. of ⑧. 4) Remove the pipe cover by taking off fixing screws of the cover. ($\text{Ø}4 \times 8$, 2 pcs) 5) Remove the clamp which fixes TC1 sensor, TC2 sensor and TCJ sensor, and then pull out the sensors from the holder. 6) Remove the heat exchanger by taking off fixing screws of the partition board while holding the heat exchanger. ($\text{Ø}4 \times 8$, 4 pcs) <p>2. Attachment</p> <ol style="list-style-type: none"> 1) Fix parts as before in order of Heat exchanger → Sensors → Pipe cover → Drain cap → Drain pan → Ceiling panel → Electric parts cover → Adjust cover → Suction grille. 2) Connect the refrigerant pipe as before, and then perform vacuuming. 	<p>Fixing screw Pipe cover</p>  <p>Partition board (Pipe drawing port side)</p>  <p>Fixing screw</p> 

10. P.C. BOARD EXCHANGE PROCEDURES

10-1. Exchange of P.C. Board for Indoor Service

Part code	Model type	P.C. board model	Label display on P.C. board
431-6V-269	MMU-AP**1H series MMC-AP**1H series MMK-AP**1H series MMD-AP**1SPH/SH series MMU-AP**2SH series	MCC-1402	03DD M03

Requirement at exchange of P.C. board assembly for indoor service

Before exchange, in the fixed memory (hereinafter EEPROM, IC10) installed on the indoor P.C. board, the type exclusive to the model and the capacity code are stored at shipment from the factory. The important setup data such as line/indoor/group address which are set up (Auto/Manual) or high ceiling exchange setup at installation time, respectively.

Proceed with exchange of P.C. board assembly for indoor service in the following procedure.

After exchange work, check again the setup for indoor unit No. or group header/follower units to confirm whether the setup contents are correct or not, and then check also the refrigerant circuit system by a test operation, etc.

<Exchange procedure>

Method 1

Before exchange, it is possible to turn on power of the indoor unit and read out the setup contents from the wired remote controller.

Readout of EEPROM data: **Procedure 1**



Exchange of P.C. board for service & power ON: **Procedure 2**



Writing-in of the readout EEPROM data: **Procedure 3**



Power supply reset (All the indoor units connected to the remote controller in case of group operation control)

Method 2

Before exchange, it is impossible to read out the setup contents due to EEPROM error.

Exchange of P.C. board for service & power ON: **Procedure 2**



Writing-in of the setup data such as the model name, capacity code, indoor unit address high ceiling setup, connection setup of option, etc to EEPROM based upon customer's information: **Procedure 3**



Power supply reset (All the indoor units connected to the remote controller in case of group operation control)

Procedure 1 : Readout setup contents from EEPROM

(Contents of EEPROM with setup changed at local site include setup at shipment from the factory are read out.)


1. Push **SET** + **CL** + **TEST** buttons simultaneously for 4 seconds or more. **1**
 - * In a group operation control, the firstly displayed unit No. indicates the header indoor unit No.
In this case, **10** is displayed in the item code (DN). The fan of the selected indoor unit operates, and also starts swinging in a model with flap.
2. Every pushing **UNIT**, the indoor unit Nos. in the group control are displayed successively. **2**
 - Specify the indoor unit No. to be exchanged.
 - * The fan of the selected indoor unit operates, and also starts swinging in a model with flap.
3. Using temperature setup **▼** / **▲** buttons, the item code (DN) can be moved up/down one by one. **3**
4. First change the item code (DN) from **10** → **01**. (Setup of filter sign lighting time)
In this time, make a note of contents of the displayed setup data.
5. In the next time, change the item code (DN) using **▼** / **▲** buttons.
Make a note of contents of the setup data as same as the above.
6. Then repeat item 5., and make a note of contents of the important setup data as indicated in the attached table (Example).
 - * The item code (DN) is consisted with **01** to **AA**.
DN No. may jump on the way.
7. When noting has finished, push **TEST** button to return to the normal stop status. **6**
(It requires approx. 1 minute to operate the remote controller.)

Item code necessary at minimum

DN	Contents
10	Type
11	Indoor unit capacity
12	Line address
13	Indoor address
14	Group address

Type and capacity of the indoor unit are necessary to set up the revolution frequency of the fan.


<Remote controller operation diagram>

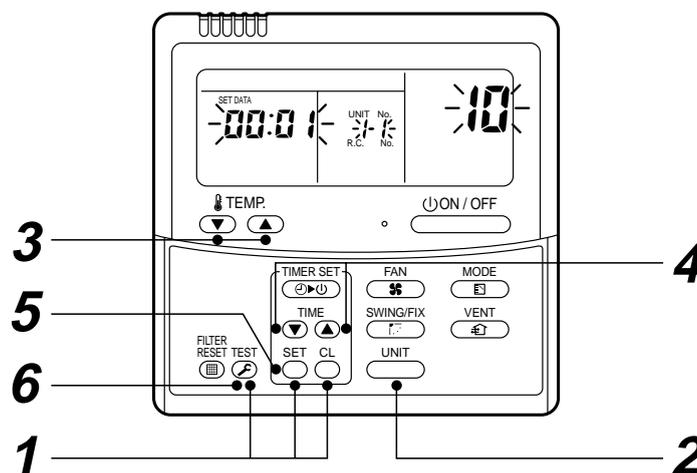

Procedure 2 : Exchange of P.C. board for service

1. Exchange P.C. board with a P.C. board for service.

In this time, the jumper line (cut) setup or the (short-circuit) connecting connector setup on the previous P.C. board should be reflected on P.C. board for service. (See the blow figures.)

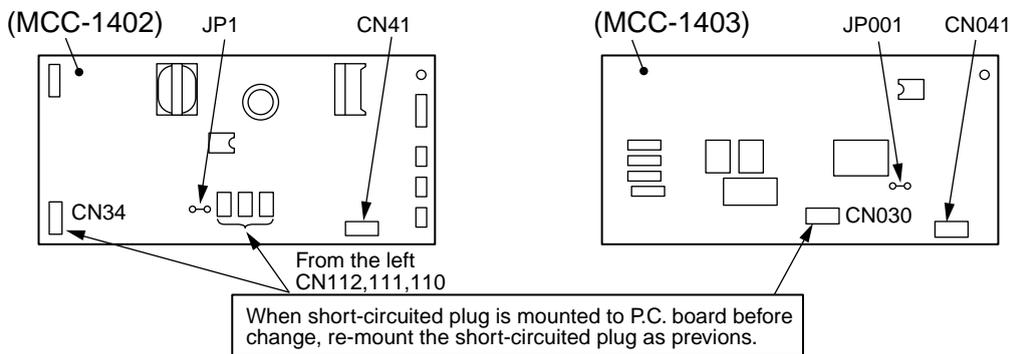

2. It is necessary to set Indoor unit to be exchanged : Remote controller = 1 : 1

Based upon the system configuration, turn on power of the indoor unit with one of the following items.

1) Single (Individual) operation

Turn on power of the indoor units and proceed to **Procedure 3**.

2) Group operation

A) In case that power of the exchanged indoor unit only can be turned on

Turn on power of the exchanged indoor unit only and proceed to **Procedure 3**.

B) In case that power of the indoor units cannot be turned on individually (**Case 1**)

a) Remove temporarily the group wire connected to the terminal blocks A and B of the exchanged indoor unit.

b) After connecting the remote controller wire only to the removed terminal block, turn on power of the indoor units and proceed to **Procedure 3**.


* When the above methods cannot be used, follow to the two cases below.

C) In case that power of the indoor units cannot be turned on individually (**Case 2**)

a) Remove all CN41 connectors of the indoor units in the same group except those of the exchanged indoor unit.

b) Turn on power of the indoor units and proceed to **Procedure 3**.

* After **Procedure 3** operation has finished, be sure to return the temporarily removed group wire or CN41 connector to the original connection.

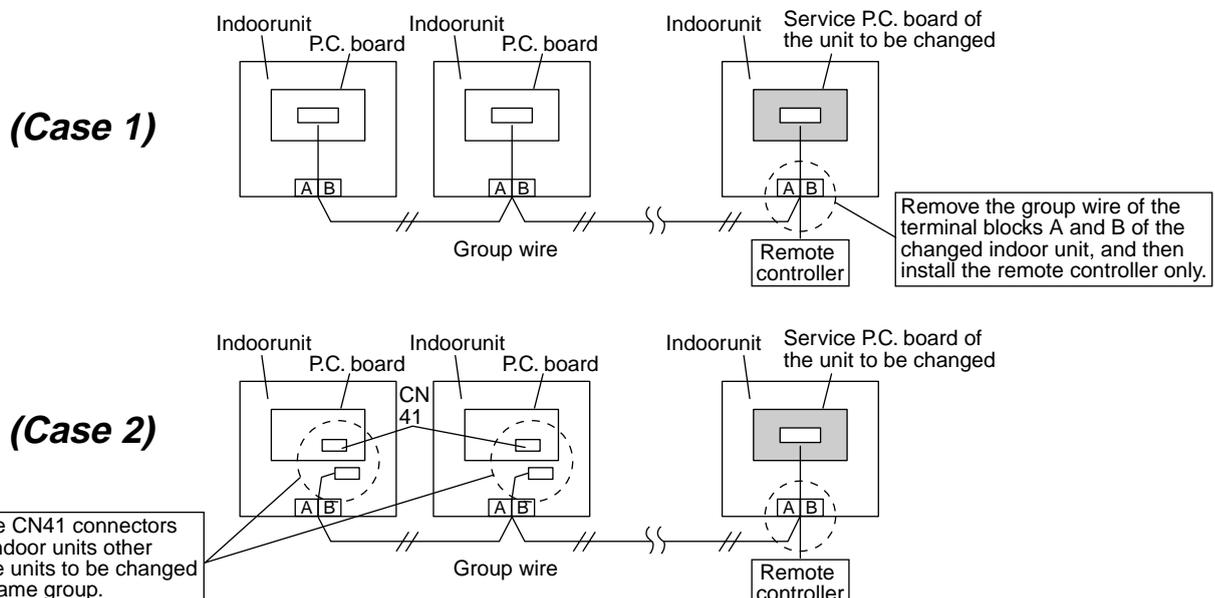

Procedure 3 : Writing-in of setup contents to EEPROM


(The EEPROM contents which are installed on the service P.C. board have been set up at shipment from the factory.)

1. Push **SET** + **CL** + **TEST** buttons simultaneously for 4 seconds or more. **1**
(**ALL** is displayed in the UNIT No box.)
In this time, **/0** is displayed in the item code (DN). The fan of the indoor unit operates, and also starts swinging in a model with flap.
2. Using temperature setup **▼** / **▲** buttons, the item code (DN) can be moved one step up 1 or down one by one. **3**
3. First set up the type and capacity code of the indoor unit.
(The data at shipment from the factory is written in EEPROM by changing the type and capacity code.)
 - 1) Set **/0** to the item code (DN). (As before)
 - 2) Using the timer time **▼** / **▲** buttons, set up the type. **4**
(For example, 0001 indicates 4-way Air Discharge Cassette type.): Refer to the attached table.
 - 3) Push **SET** button. (OK if display goes on.) **5**
 - 4) Using temperature setup **▼** / **▲** buttons, set **//** to the item code (DN).
 - 5) Using the timer time **▼** / **▲** buttons, set up the capacity code.
(For example, 0012 indicates 027 type.): Refer to the attached table.
 - 6) Push **SET** button. (OK if display goes on.)
 - 7) Push **TEST** button to return to the normal stop status.
4. In the next, the contents such as address setup, which were set up at the local site after installation are written in EEPROM. Execute again the operation in the above item 1.).
5. Using temperature setup **▼** / **▲** buttons, set **/1** to the item code (DN).
(Lighting time setup for filter sign)
6. Compare the contents of the setup data which is displayed in this time with contents noted in a memo in **Procedure 1** and customer's information.
 - 1) If data is incorrect, change it using the timer time **▼** / **▲** buttons so that it matches with contents noted in a memo, and then push **SET** button. (OK if display goes on.)
 - 2) Do nothing if data is same as those in the memo.
7. Using temperature setup **▼** / **▲** buttons, change the item code (DN).
Check also the contents of the setup data and then change them it to those in the memo.
8. Then repeat operations in items 6. and 7.
9. After setup operation, push **TEST** button to return to the normal stop status. **6**
In a group operation, turn off the power supply once, return the group wires between indoor units and CN41 connectors as before, and then turn on power of all the indoor units.
(It requires approx. 1 minute to operate the remote controller.)
* The item code (DN) is consisted with **/1** to **AA**. DN No. may jump on the way.
Even if pushing **SET** button after changing the data incorrectly, the data can be returned to one before change by pushing **CL** button before changing the item code (DN).

<EEPROM layout>

EEPROM (IC10) is attached to IC socket. To remove it, use a pair of tweezers, etc.
To attach EEPROM, arrange the direction as shown in the following figures.

* In exchanging time, pay attention not to bend the lead wire of IC.

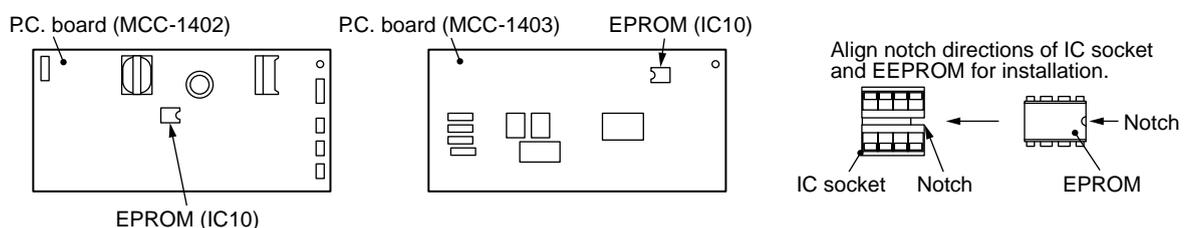

<Make a note of the setup contents. (Item code list (Example))>

DN	Item	Memo	Setup at shipment from factory
01	Filter sign lighting time		According to type
02	Dirty condition of filter		0000: Standard
03	Central control address		0099: Undefined
06	Heating inlet temp. shift		0002: +2°C (Floor standing: 0)
0d	Cooling Auto mode existence		0001: No auto mode cooling/heating
0F	Cooling only/Heat pump select		0000: Heat pump
10	Type		According to model type
11	Indoor unit capacity		According to capacity code
12	Line address		0099: Undefined
13	Indoor unit address		0099: Undefined
14	Group address		0099: Undefined
19	Louver type (Air direction adjustment)		According to type
1E	Temp. width between cooling and heating automatic selective control points		0003: 3 deg (Ts ± 1.5)
28	Automatic restart from power failure		0000: None
2A			
2E	HA terminal (T10) selection		0000: Normal
30			
31			
32	Sensor select		0000: Body sensor
40			
5d	High ceiling selection		0000: Standard
60	Timer setup (Wired remote controller)		0000: Possible

Type
Item code [10]

Setup data	Type	Model abb. name
0000	1-way Air Discharge Cassette	MMU-AP***SH
0001*	4-way Air Discharge Cassette	MMU-AP***H
0002	2-way Air Discharge Cassette	MMU-AP***WH
0003	1-way Air Discharge Cassette (Compact type)	MMU-AP***YH
0004	Concealed Duct Standard	MMD-AP***BH
0005	Slim Duct	MMD-AP***SPH MMD-AP***SH
0006	Concealed Duct High Static Pressure	MMD-AP***H
0007	Under Ceiling	MMC-AP***H
0008	High Wall	MMK-AP***H
0009		
0010	Floor Standing Cabinet	MML-AP***H
0011	Floor Standing Concealed	MML-AP***BH
0012		
0013	Floor Standing (Below 6HP)	MMF-AP***H

Indoor unit capacity
Item code [11]


Setup data	Model	Setup data	Model
0000*	Invalid	0016	—
0001	007 type	0017	048 type
0002	—	0018	056 type
0003	009 type	0019	—
0004	—	0020	—
0005	012 type	0021	072 type
0006	—	0022	—
0007	015 type	0023	096 type
0008	—	0024	—
0009	018 type	0025	—
0010	—	0026	—
0011	024 type	0027	—
0012	027 type	0028	—
0013	030 type	~	—
0014	—	0034	—
0015	036 type		

* The initial setup value of EEPROM installed on the service P.C. board

11. EXPLODED VIEWS AND PARTS LIST

11-1. Ceiling Panel


RBC-US21PGE

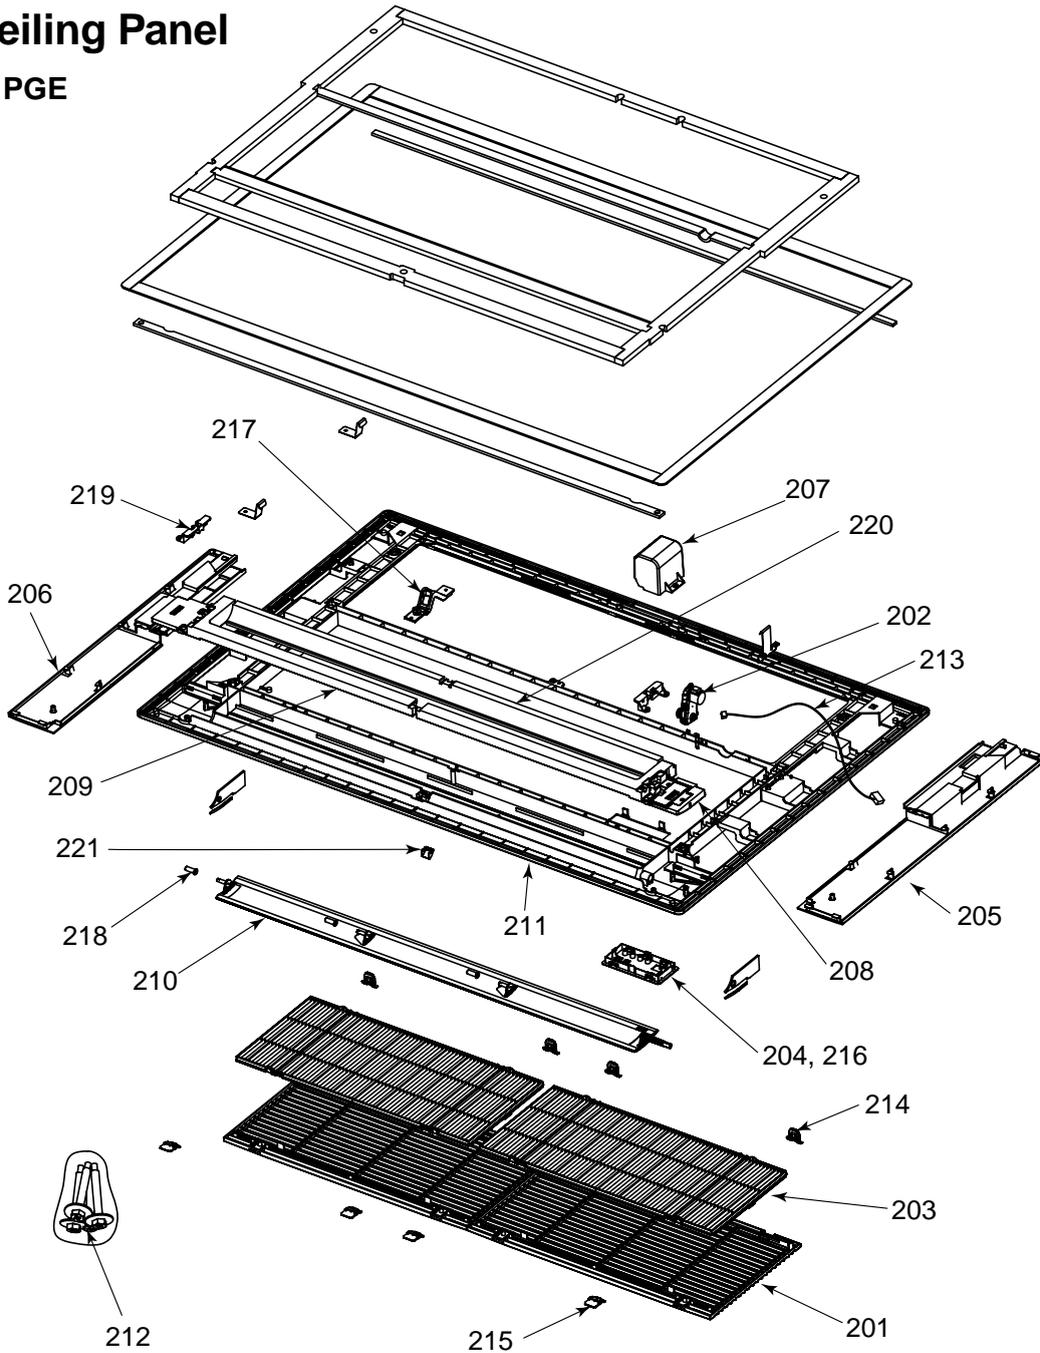

Location No.	Part	Description
201	43109408	Grille, Inlet
202	43121719	Draiver Ass'y, Horizontal Louver
203	43180315	Air Filter
204	43108014	Base, Receiver, ABS
205	43401025	Cover Ass'y
206	43401026	Cover Ass'y
207	43419011	Cover, Motor, PS
208	43419012	Panel, Air Outlet, PS-F
209	43419013	Panel, Outlet, PS-F
210	43409188	Louver, ABS


Location No.	Part	Description
211	43401027	Panel Ass'y
212	43497012	Screw, M5
213	43460112	Lead Ass'y, Louver, Motor
214	43107254	Hinge, Glille Inlet
215	43107255	Hook, Glille Inlet
216	43408033	Mark, TOSHIBA
217	43419015	Supporter, Outlet, ABS
218	43419016	Supporter, Shaft, POM
219	43419017	Supporter, Motor, ABS
220	43419018	Panel, Outlet, PS-F
221	43419019	Screw, Cap Ass'y

11-2. 1-Way Discharge Cassette Type

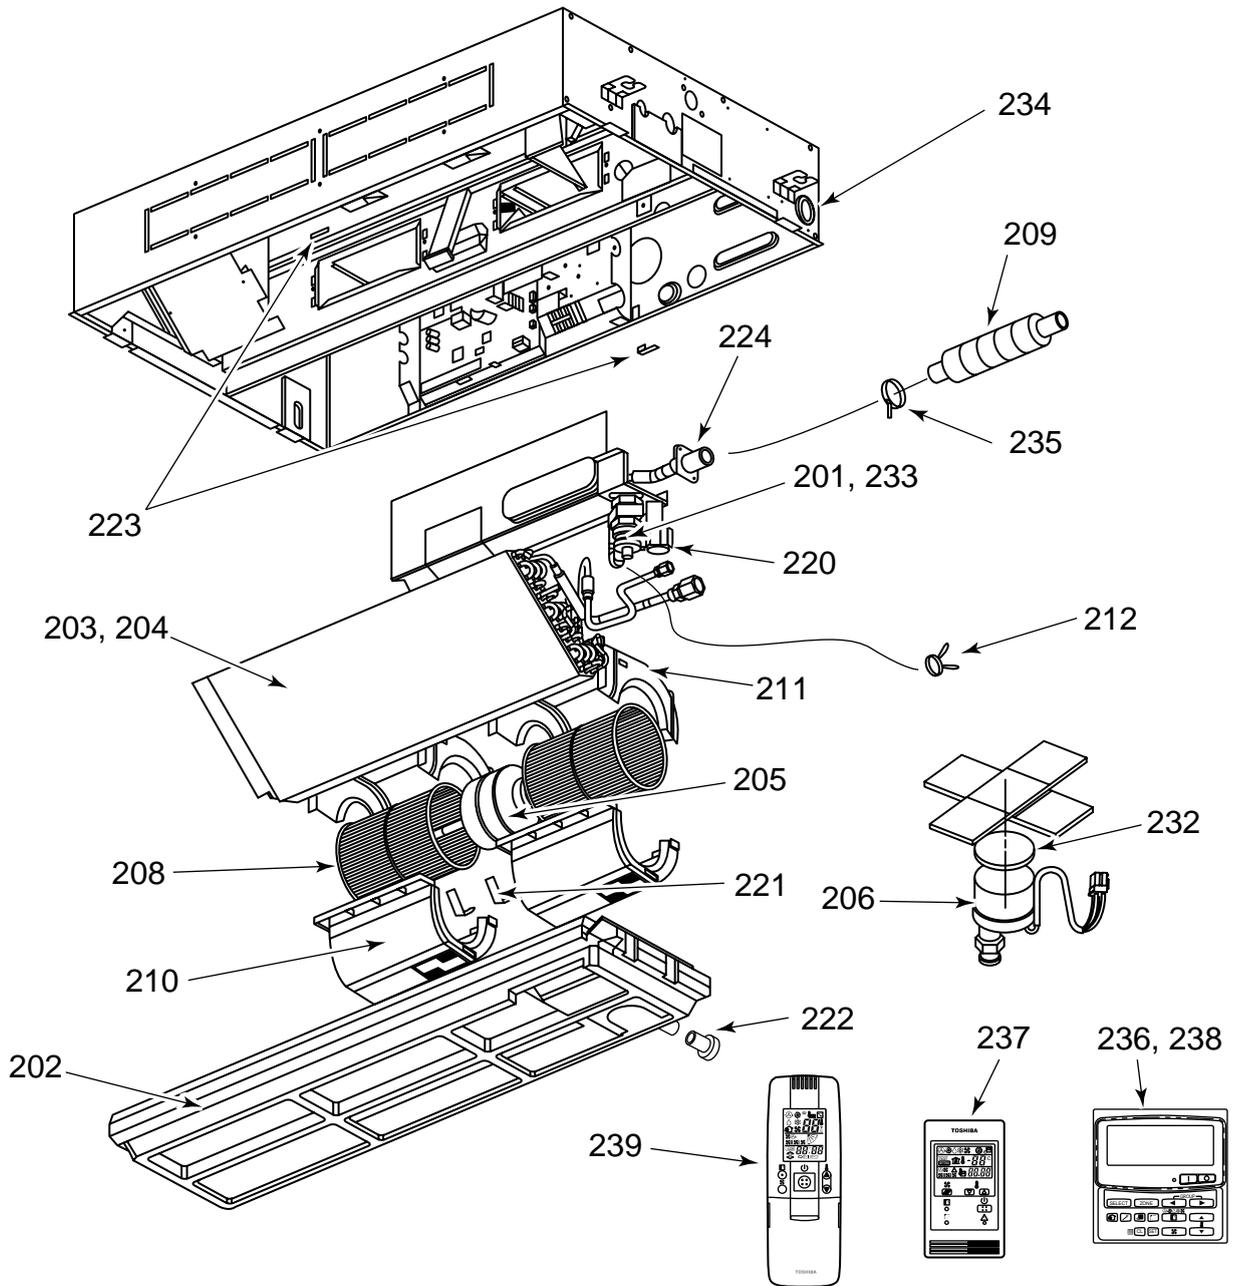


AP0152SH, SH-K / AP0182SH, SH-K

AP0242SH, SH-K

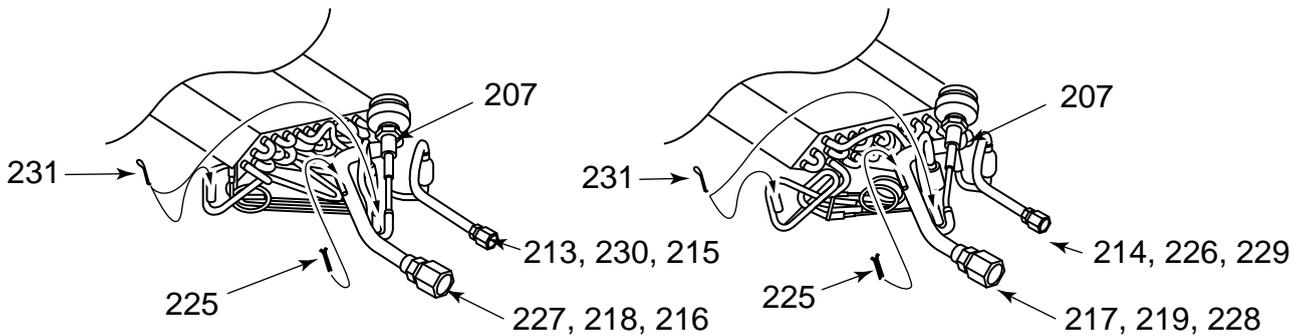

Location No.	Part No.	Description	Model Name MMU-AP		
			0152SH(-K)	0182SH(-K)	0242SH(-K)
201	43121703	Pump, Drain, ADP-1409, 220-240V	1	1	1
202	43172182	Pan Ass'y, Drain	1	1	1
203	4314J255	Refrigeration Cycle Ass'y	1	1	
204	4314J256	Refrigeration Cycle Ass'y			1
205	43121715	Motor, Fan, SWF-280-60-1, 60W	1	1	1
206	43146555	Motor, P.M.V., EDM-MD12TF-3	1	1	1
207	43146671	Valve, P.M.V., EDM-B40YGTF-30	1	1	1
208	43120222	Fan, Multi Blade, 140DIA, 180L	2	2	2
209	43170232	Hose, Drain, 25A	1	1	1
210	43122084	Case, Fan, Lower	2	2	2
211	43122085	Case, Fan, Upper	2	2	2
212	43079249	Band, Hose	1	1	1
213	43047545	Nut, Flare, 1/4 IN	1	1	
214	43194026	Socket			1
215	43194051	Socket	1	1	
216	43194081	Nut, Flare, 1/2 IN	1	1	
217	43194078	Nut, Flare, 5/8 IN			1
218	43194080	Socket, 1/2 IN	1	1	
219	43194079	Socket, 5/8 IN			1
220	43151284	Switch, Float	1	1	1
221	43139152	Band, Motor	2	2	2
222	43179129	Cap Drain	1	1	1
223	43119473	Nut, Plate	2	2	2
224	43170240	Hose Ass'y, Drain	1	1	1
225	43107215	Holder, Sensor	1	1	1
226	43047609	Bonnet			1
227	43147195	Bonnet, 1/2 IN	1	1	
228	43194029	Bonnet			1
229	43194055	Nut, Flare, 3/8 IN			1
230	43049697	Bonnet	1	1	
231	43019904	Holder, Sensor, SUS	2	2	2
232	43149314	Sheet, P.M.V.	1	1	1
233	43179126	Rebber, Pump Drain	3	3	3
234	43162051	Bushing, GUM-NR-01	1	1	1
235	43479029	Band, Hose	1	1	1
236	4316V194	Remote Controller, SX-A3JE	1	1	1
237	4316V195	Remote Controller, SX-A11JE	1	1	1
238	4316V196	Remote Controller, EX-W2JE	1	1	1
239	4316V197	Remote Controller, WH-H1JE	1	1	1

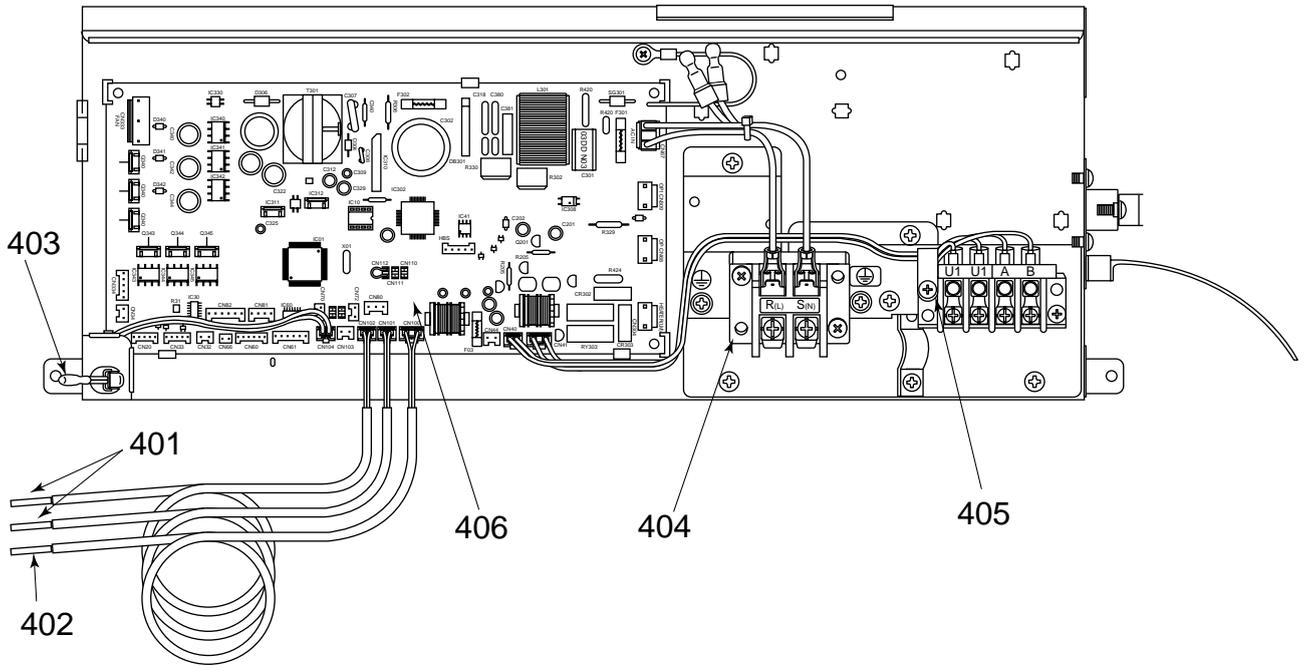

Location No.	Part No.	Description	Model Name MMU-AP		
			0152SH(-K)	0182SH(-K)	0242SH(-K)
401	43050382	Sensor, TC (F6)	2	2	2
402	43050398	Sensor, TG (F4)	1	1	1
403	43150297	Sensor, TC	1	1	1
404	43160478	Terminal Block, 2P, 20A, 300V	1	1	1
405	43160509	Terminal, 4P, AC30V, 1A	1	1	1
406	4316V269	P.C. Board Ass'y, MCC-1402 (220–240V)	1	1	1

TOSHIBA CARRIER CORPORATION

2 CHOME 12-32, KONAN, MINATOKU, TOKYO, 108-0075, JAPAN

Copyright © 2005 TOSHIBA CARRIER CORPORATION, ALL Rights Reserved.